HEWLETT PACKARD

User's Guide

64700

Analyzer PC Interface

HP 64700 Series Emulators

Analyzer

PC Interface User's Guide



HP Part No. 64740-97007
Printed in U.S.A.
August 1990

Edition 4

Notice

Hewlett-Packard makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

© Copyright 1987, 1988, 1990, Hewlett-Packard Company.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of Hewlett-Packard Company. The information contained in this document is subject to change without notice.

Advancelink, Vectra, and HP are trademarks of Hewlett-Packard Company.

IBM and PC AT are registered trademarks of International Business Machines Corporation.

MS-DOS is a trademark of Microsoft Corporation.

UNIX is a registered trademark of AT&T.

TORX is a registered trademark of Camcar Division of Textron, Inc.

Hewlett-Packard Company
Logic Systems Division
8245 North Union Boulevard
Colorado Springs, CO 80920, U.S.A.

Printing History

New editions are complete revisions of the manual. The date on the title page changes only when a new edition is published.

A software code may be printed before the date; this indicates the version level of the software product at the time the manual was issued. Many product updates and fixes do not require manual changes, and manual corrections may be done without accompanying product changes. Therefore, do not expect a one-to-one correspondence between product updates and manual revisions.

Edition 1	64740-90911 E1187	November 1987
Edition 2	64740-90911 E0988	September 1988
Edition 3	64740-97006	May 1990
Edition 4	**64740-97007**	**August 1990**

Using this Manual

This manual will show you how to use the HP 64700 series analyzer with the host computer PC Interface.

This manual will:

- Briefly introduce the analyzer and its features.
- Show you how to use the analyzer in its simplest, power-up condition. From there, it will progressively show you how and why you would use additional trace commands.
- Show you how to connect the external analyzer probe to target system signals and how to use the external analyzer as an extension of the emulation analyzer.
- Show you how to use the external timing analyzer via the Timing Interface.
- Show you how to set up the analyzer trigger to break the emulator into the monitor program.
- Show you how to drive external Coordinated Measurement Bus (CMB) or BNC trigger signals with the analyzer trigger.

This manual will not:

- Show you how to use every PC Interface command and option; the PC Interface is described in the *HP 64700 Emulators PC Interface: User's Reference*.

Organization

Chapter 1 **Introducing the HP 64700 Series Analyzer**. This chapter lists the basic features of the analyzer. The following chapters show you how to use these features.

Chapter 2 **Using the Internal Analyzer**. This chapter shows you how to use the internal emulation analyzer, and it describes the basic steps performed when using the analyzer.

Chapter 3 **Internal Analyzer Examples**. This chapter contains examples of using the analyzer. It describes a sample program on which trace measurements are made, and then it shows you how to specify a simple trigger condition, how to use storage, prestore, and count qualifiers. This chapter also shows you how to use the sequencer and how to trace "windows" of program execution.

Chapter 4 **Using the External Analyzer**. This chapter shows you how to connect the external analyzer probe to the target system and how to configure the external analyzer (it may be aligned with the internal analyzer, configured as an external state analyzer, or configured as an external timing analyzer). This chapter shows you how to use the external analyzer when it is aligned with the internal analyzer and when it is configured as an external state analyzer.

Chapter 5 **Using the External Timing Analyzer**. This chapter shows you how to use the external timing analyzer. The external timing analyzer allows you to perform timing measurements and view the captured data in waveform displays.

Chapter 6 **Making Coordinated Measurements**. This chapter shows you how to allow other HP 64700 emulators to start trace measurements, how to use the analyzer trigger condition to break the emulator, how to use the emulation analyzer trigger to drive external trigger signals, and how to allow the analyzers to be armed (turned on) by external trigger signals.

Contents

1 Introducing the HP 64700 Series Analyzer

Overview 1-1
Analyzer Features 1-3
Simple Measurements 1-3
Trace Storage, Prestore, and Count 1-3
Sequencer 1-3
External Analysis 1-3
External Timing Analysis 1-4
Coordinated Measurements 1-5

2 Using the Internal Analyzer

Introduction 2-1
Modifying the Trace Specification 2-1
Sequence Levels 2-2
Sequence Level Field 2-3
Storage Qualifier Field 2-4
Find State or Trigger on State Field 2-4
Occurrence Count Field 2-5
Branches 2-5
Count 2-6
Prestore 2-6
Trigger Position 2-7
Specifying State Patterns and Expressions 2-7
Values 2-7
Constants. 2-8
Operators. 2-9
Assigning Values to the Range Resource 2-10
Assigning Values to the Pattern Resources 2-10
Trace Labels. 2-10
Predefined Values for 68000 Emulator Status. 2-11
Specifying Pattern Expressions 2-12
Interset Operators. 2-12
Intraset Operators. 2-12
Set Operator Limitations. 2-13

Resetting the Trace Specification 2-13
Starting the Trace 2-13
Halting a Trace Measurement 2-14
Displaying the Trace 2-14
Changing the Trace Format 2-16
Tracing Foreground/Background Execution 2-16
Trace Labels 2-17

3 Internal Analyzer Examples

Introduction 3-1
Prerequisites 3-2
The Sample Program 3-2
What the Sample Program Does 3-2
Mapping Memory for the Sample Program 3-8
Loading the Sample Program 3-9
Set Up the Stack Pointer 3-10
Running the Sample Program 3-10
Activating the Trace Window 3-10
Specifying a Simple Trigger 3-11
Using Storage Qualifiers 3-15
Using Trace Prestore 3-18
Changing the Count Qualifier 3-21
Using "Restart On" Branches 3-24
Using Branches "Per Level" 3-27
Storing "Windows" of Program Execution 3-36
Excluding Windows of Program Execution 3-41
Triggering on a State Outside the Window 3-42
Using Multiple Trigger Levels 3-44

4 Using the External Analyzer

Introduction 4-1
Before You Can Use the External Analyzer 4-2
Assembling the Analyzer Probe 4-2
Connecting the Probe to the Emulator 4-4
Connecting Probe Wires to the Target System 4-7
Specifying Threshold Voltages & Defining Labels 4-9
Specifying Threshold Voltages 4-10
External Trace Signal Activity 4-10
Defining External Analyzer Labels 4-10
Selecting the External Analyzer Mode 4-11
Using the External Analyzer when Aligned with Internal . . . 4-12

Using the External State Analyzer 4-14
Selecting the Clock Source 4-14
Specifying the Maximum Qualified Clock Speed 4-16
External Analyzer Specifications 4-17
External State Analyzer Specifications 4-17

5 Using the External Timing Analyzer

Introduction 5-1
Prerequisites 5-2
Configuring for Timing Analysis 5-2
Specifying Threshold Voltages & Defining Labels 5-3
Threshold Voltages 5-4
Activity 5-5
Labels 5-5
Timing Specification 5-6
Acquisition Modes 5-7
Transitional 5-7
Standard 5-9
Glitch 5-9
Sample Period 5-9
Armed By 5-9
Begin 5-9
TRIG1 or TRIG2 5-10
Trigger Position 5-10
Trigger Holdoff (Prestore) 5-10
Trigger Delay 5-10
Label Qualifier 5-11
Specifying the Trigger Condition 5-11
Find Pattern 5-12
Duration 5-12
Greater Than Duration 5-12
Less Than Duration 5-12
Then Find Edge or Glitch 5-14
Reset 5-14
Timing Waveform Display 5-17
Setting the Time per Division 5-17
Scrolling through the Waveform Display 5-18
Reference Points 5-18
Trigger 5-18
User Defined (X, O) 5-18
Cursor moves (X, O, X & O) 5-18

Magnify About (X or O) 5-18
Inserting/Deleting Channels 5-19
Examples 5-19
Starting the Timing Measurement 5-19
Halting the Trace 5-19
External Timing Analyzer Specifications 5-20

6 Making Coordinated Measurements

Introduction 6-1
Tracing at EXECUTE 6-3
Using the Analyzer Trigger to Break into the Monitor 6-3
Using the Analyzer Trigger to Drive External Signals 6-4
Allowing CMB or BNC TRIGGERs to Arm the Analyzer 6-5
Arming the Internal Emulation Analyzer 6-5
Arming the External Analyzer 6-6
Using One Analyzer to Arm the Other 6-7
Other Trigger Combinations 6-8

Illustrations

Figure 1-1. Block Diagram of HP 64700 Series Analyzer 1-2

Figure 2-1. Trace Specification Screen 2-2
Figure 2-2. Ranges, Patterns, and Expressions 2-8
Figure 2-3. Analysis Format Screen 2-17

Figure 3-1. Pseudo-Code Algorithm of Sample Program 3-3
Figure 3-2. Sample Program Listing 3-4
Figure 3-3. Memory Map Configuration Display 3-9
Figure 3-4. Simple Trigger Specification 3-11
Figure 3-5. Storage Qualifier Specification 3-16
Figure 3-6. Prestore Qualifier Specification 3-18
Figure 3-7. Count Qualifier Specification 3-21
Figure 3-8. Branches "Restart On" Specification 3-25
Figure 3-9. Tracing Last Write to RESULTS Area 3-29
Figure 3-10. Branches "Per Level" Specification 3-33
Figure 3-11. Storing a Window of Program Execution 3-37
Figure 3-12. Store "Window" Trace Specification 3-38
Figure 3-13. Excluding Windows of Program Execution 3-42
Figure 3-14. Triggering on a State Outside the Window 3-43
Figure 3-15. Using Multiple Trigger Levels 3-44

Figure 4-1. Assembling the Analyzer Probe 4-3
Figure 4-2. Attaching Grabbers to Probe Wires 4-4
Figure 4-3. Removing Cover to Emulator Connector 4-5
Figure 4-4. Connecting the Probe to the Emulator 4-6
Figure 4-5. Connecting the Probe to the Target System 4-8
Figure 4-6. Analysis Format Display 4-9
Figure 4-7. External Data in the Trace 4-13
Figure 4-8. Analysis Format Display 4-14
Figure 4-9. Qualified Clocks 4-15

Figure 5-1. Timing Interface Main Display 5-3
Figure 5-2. Timing Label Specification 5-4
Figure 5-3. Transitional Acquisition Mode 5-7

Figure 5-4. Standard Acquisition Mode 5-8
Figure 5-5. Glitch Acquisition Mode 5-8
Figure 5-6. Pattern Trigger 5-13
Figure 5-7. Edge Trigger 5-15
Figure 5-8. Glitch Trigger 5-16
Figure 5-9. Timing Waveform Display 5-17

Figure 6-1. Cross Trigger Configuration 6-4
Figure 6-2. Receiving External Signals 6-6
Figure 6-3. Using One Analyzer to Arm the Other 6-8

Introducing the HP 64700 Series Analyzer

Overview

This manual describes the HP 64700 Series analyzer. Each HP 64700 Series emulator contains an internal emulation analyzer. Some emulators may optionally contain an external analyzer.

The *emulation analyzer*, also known as the *internal analyzer*, captures emulator bus cycle information synchronously with the processor's clock signal. A *trace* is a collection of these captured states. The *trigger* state specifies when the trace measurement is taken. The *external analyzer* captures activity on signals external to the emulator, typically other target system signals.

The analyzer commands are the same in every emulator; consequently, this manual is shipped with every HP 64700 Series emulator ordered with the PC Interface. A block diagram of the analyzer is shown in figure 1-1.

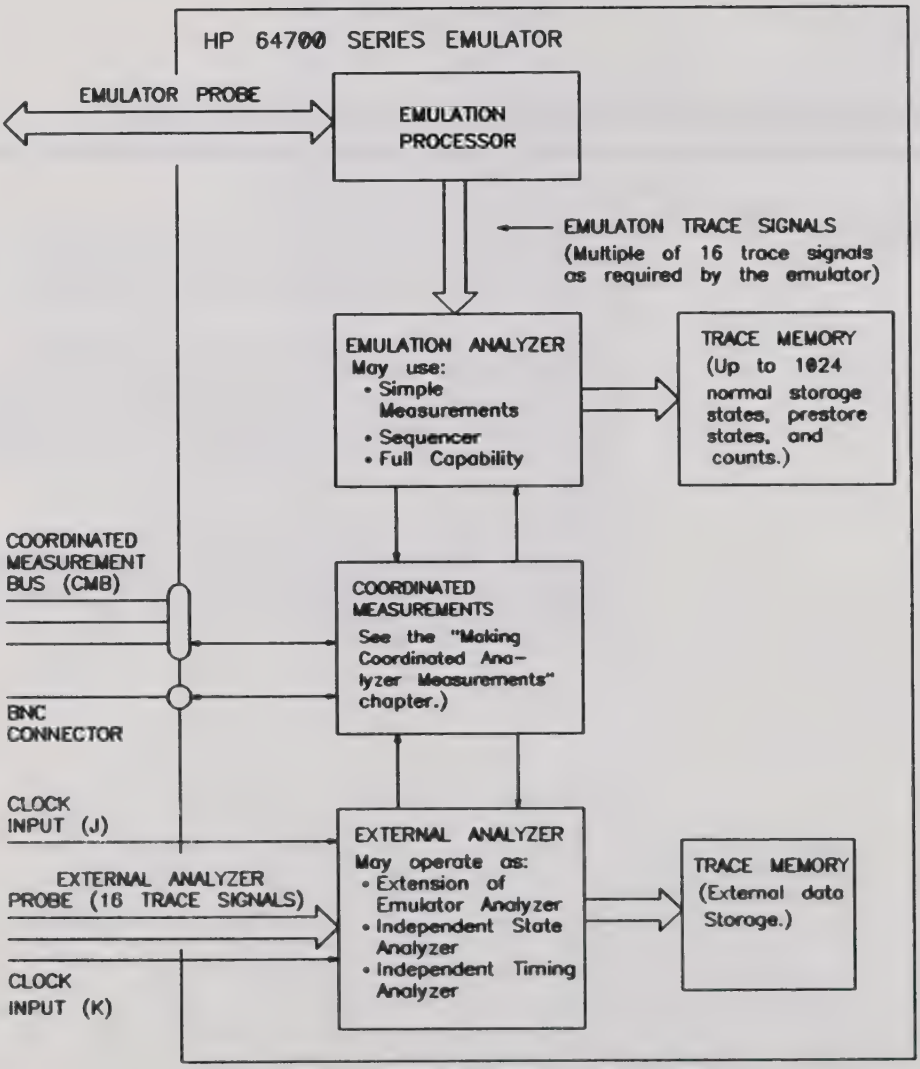

Figure 1-1. Block Diagram of HP 64700 Series Analyzer

Analyzer Features

This chapter lists basic features of the HP 64700 Series analyzer. The chapters which follow show you how to use these features.

Simple Measurements

The default condition of the analyzer allows you to perform a simple measurement by entering a single "analysis begin" command. You can enter additional trace commands to qualify when execution should be traced and which bus cycle states should be stored.

Trace Storage, Prestore, and Count

The analyzer can store up to 1024 states in trace memory. These states can be normal storage states or prestore states (states which precede normal storage states). A count may be associated with normal storage states; you can specify that the analyzer count in either time or the occurrences of some state. When counts are specified, only 512 states can be stored.

Sequencer

You can use the analyzer to search for a particular sequence of states. The sequencer, which makes this possible, has several levels. Each level of the sequencer searches for a "find" or "trigger" state. When the find/trigger state is captured, the analyzer goes on searching at the following sequence level. If branches are turned on, a "branch" state is also searched for in each sequence level. If the branch state is found before the find/trigger state, the analyzer can jump to any sequence level where it continues searching for states.

External Analysis

Your HP 64700 Series emulator may optionally contain an external analyzer. The external analyzer provides 16 external trace signals and two external clock inputs. You can use the external analyzer as an extension to the emulation analyzer, as an independent state analyzer, or as an independent timing analyzer.

External Timing Analysis

If your emulator contains an external analyzer, you can configure the external analyzer to perform timing measurements. Some of the features of the external timing analyzer are listed below.

- Standard data acquisition mode with a maximum sample rate of 100 MHz (10 ns).
- Transitional data acquisition mode extends the storage time interval by storing only information changes and the time between them.
- Glitch data acquisition mode on all channels without reducing the number of channels.
- Trigger when signals on the external probe match a specified pattern for greater than or less than a specified time (duration). Edge and glitch qualifiers may be included in the trigger specification.
- You can place the trigger point at the start, center, or end of the trace to view signals after, about, or before the trigger.
- Timing Interface supports screen dumps to graphics printers (for printing waveform displays).

Note

The PC Interface requires EGA or VGA monitors and adapters to display timing waveforms.

Note

Two versions of the PC Interface are shipped with your emulator; one contains interface software for the timing analyzer and the other does not. The version that contains the timing interface software is larger and requires most of the PC's 640K bytes of RAM. The version that does not contain the timing interface software requires approximately 480K bytes of RAM.

Coordinated Measurements

When multiple HP 64700 Series emulators are connected via the Coordinated Measurement Bus (CMB), you can use the analyzer to trigger the analyzers of other emulators. You can also use the analyzer to trigger instruments connected to the BNC port. Conversely, the analyzer may be triggered by other emulators and instruments.

Also, if your emulator contains an external analyzer being used as an independent analyzer, coordinated measurements may take place between the internal emulation analyzer and the external analyzer.

Notes

Using the Internal Analyzer

Introduction

This chapter describes how to use the emulation analyzer from within the PC Interface. The steps performed when using the analyzer are:

- Modifying the trace specification (or using the default).
- Starting the trace.
- Displaying the trace.

These steps are described in the main sections of this chapter.

Modifying the Trace Specification

The PC Interface's "Analysis Trace Modify" command provides one screen (with one subscreen) from which you make a complete trace specifications. This section describes the options available on those screens. To access the trace specification screen, select:

```
Analysis, Trace, Modify
```

Note

If your emulator contains an external analyzer (which can operate as an independent analyzer), you will have to include another option, "Internal", to specify which analyzer the command is for.

The trace specification screen (see figure 2-1) shows the sequence levels that are being used, the qualifiers associated with those levels, the secondary branch mode, the count and prestore qualifiers, and the trigger position selection. When you initially enter the PC Interface, the default analyzer configuration specifies a trigger on any state, and that all captured states are stored.

Sequence Levels

The trace specification screen in figure 2-1 shows two sequence levels. At least two sequence levels will always be used because a trigger level is required and there must always be a level after the trigger level.

Each sequence level in the trace specification screen, except the last, has four associated fields: the sequence level field, the storage qualifier field, the find/trigger state field, and the occurrence count field. Only the sequence level field and the storage qualifier field are available in the last sequence level.

When you begin (start) a trace, the analyzer searches for the find/trigger state of the first sequence level; when that state is

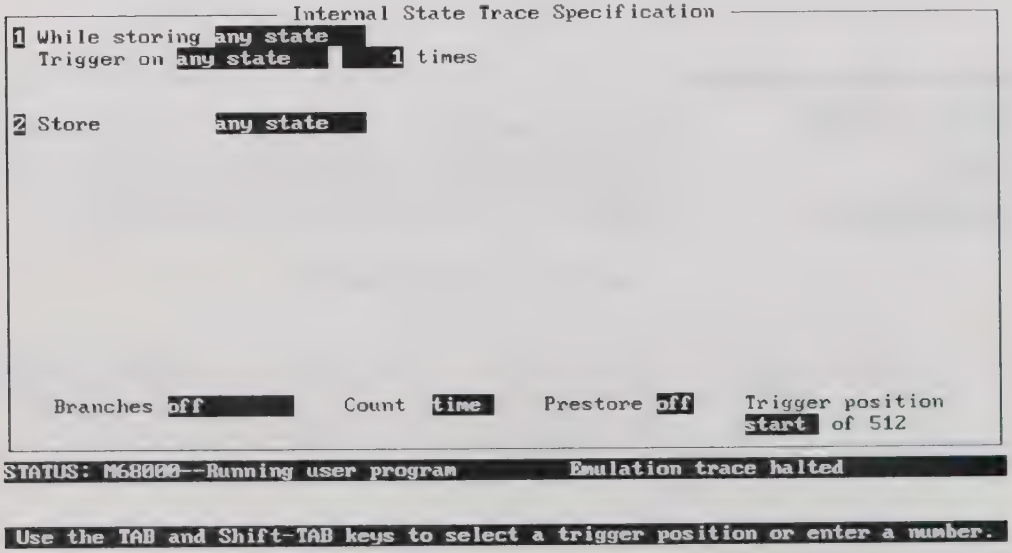
Internal State Trace Specification
1 While storing any state
Trigger on any state 1 times
2 Store any state
Branches off
Count time
Prestore off
Trigger position start of 512
STATUS: M68000--Running user program Emulation trace halted
Use the TAB and Shift-TAB keys to select a trigger position or enter a number.

Figure 2-1. Trace Specification Screen

found, the analyzer searches for the find/trigger state of the second sequence level, and so on.

One of the sequence levels is specified as the trigger level. The analyzer triggers when it finds the state associated with this level. The trigger is the reference point in the resulting trace. States are stored before, after, or about the trigger state. The trigger state is always on line 0 of the trace.

Sequence Level Field

The sequence level field shows the level (1 through 8) of the sequence term. This field also allows you to insert or delete sequence terms, or to specify the trigger level.

Move the cursor to the first sequence level field in the upper left corner of the screen, and use the **Tab** key to view the options associated with sequence levels. These options are:

I	Insert level.
D	Delete level.
T	Set the trigger level.

Select the "I" option and enter **Enter** to insert a new sequence level. Using the arrow cursor keys, reposition the cursor and repeat this process until eight sequence levels are used. This is the maximum number of sequence levels.

Note

When moving the cursor in the trace specification screen, use the arrow cursor keys. Using **Enter** (carriage return) in the state qualification fields causes the "patterns and expressions" screen to appear.

Move the cursor to level 5 and make this the trigger level by entering "T" and a **Enter**. Notice that level 5 now shows "Trigger on" instead of "Then find" while the previous trigger level now shows "Then find".

Move the cursor to the last sequence level and enter "D" and **Enter**. Notice that the previous level is deleted instead.

Now try to delete the trigger level. Notice that the following level is made the trigger level until it is the second to last; then, the previous level is made the trigger level.

Storage Qualifier Field

The storage qualifier field allows you to specify which states are stored while the analyzer searches for that sequence level's find or trigger state.

Move the cursor to a storage qualifier field and use the **Tab** key to scroll through the choices. You will see the following options:

any state	All states are stored.
no state	No states are stored.
r, !r	Only states in the range (r) or states not in the range (!r) are stored. Ranges are defined in the patterns and expressions screen described below.
a, b, c, d, e, f, g, h	Only states that match the pattern are stored. Up to eight different patterns can be defined. Patterns are defined in the patterns and expressions screen described below.
arm	Store only the state executing when the analyzer is armed (enabled) by some condition external to the analyzer. Conditions that can be used to arm the analyzer are described in the "Making Coordinated Measurements" chapter.

These same options are available in any state qualifier field.

Find State or Trigger on State Field

The "find state" or "trigger on" state field allows you to define the state that causes the analyzer to start searching for the following sequence level or that causes the analyzer to trigger.

The options available in this field are the same as for the storage qualifier field.

Occurrence Count Field

The occurrence count field specifies the number of times the state specified in the find/trigger field must be found before the analyzer goes on to the following sequence level.

The default base for an occurrence count is decimal. You may specify occurrence counts from 1 to 65535.

Branches

Branches alter the analyzer's search sequence if the specified branch state occurs before the find/trigger state.

When branches are turned off, the analyzer searches for the first sequence level's find/trigger state; when this state is found, the analyzer searches for the second sequence level's find/trigger state, and so on.

When branches are turned on, the analyzer searches for find/trigger states associated with each sequence level; if the find/trigger state is found before the branch state, the analyzer still continues its search at the following sequence level. However, if the branch state is found before the find/trigger state, the analyzer can continue its search at a different sequence level.

off	Branches are turned off. The analyzer searches only for the states defined in the find/trigger fields, starting with the first sequence level, then the second, and so on.
restart on	Branches are turned on. You are given another field in which to specify the restart state qualifier. This restart qualifier is used for all sequence levels, and the branch is always back to the first sequence level. This is also known as "global restart" because the same restart condition applies to all sequence levels.
per level	Branches are turned on. Two additional fields are added to each sequence level except the last:

one for the branch state qualifier, and one to specify the sequence level the analyzer branches to if the branch state is found before the find/trigger state.

No branch state qualifier field is added to the last sequence level, but you are given a field in which to specify the sequence level the analyzer branches to when the "then find" state is found.

Count For each stored state, the analyzer can either count time or the number of occurrences of some state.

time	Time counts are recorded for each stored state.
state	The number of occurrences of some state are recorded for each stored state. You are given another field in which to specify the state count qualifier.
off	Counting can be turned off to allow more states to be stored. When the analyzer counts states or time, 512 states can be stored in a trace. When counting is turned off, 1024 states can be stored in a trace.

Counts can be displayed in relative format (relative to the previous state) or absolute format (relative to the trigger state). Refer to the "Changing the Trace Format" section that appears later in this chapter.

Prestore Prestore allows you to store up to two states which match the prestore qualifier state before each normal store state. Prestore is useful, for example, in identifying the callers of a function or subroutine that is called from many places in the program.

off	Prestore is turned off.
on	Prestore is turned on. You are given another field in which to specify the prestore qualifier.

Trigger Position

The trigger position specifies where the trigger state appears in the trace.

center	Use "center" when you are interested in states that occur before and after the trigger.
end	Use "end" when you are only interested in states that occur before the trigger.
start	Use "start" when you are interested only in states that occur after the trigger.
<number>	In addition to start, center, and end, you can type in a number to specify the trigger position. For example, if you specify the trigger position as "10 of 512", nine states before the trigger will be stored, and 502 states will be stored after the trigger (assuming nine states must match the storage qualifiers before the trigger and 502 states must match the storage qualifiers after the trigger).

You will sometimes notice that the trigger position is not exact. The actual trigger position will be within +/- 1 state of the position specified if counting states or time; if the count qualifier is turned off, the actual trigger position will be within +/- 3 states of the number specified.

Specifying State Patterns and Expressions

Any time the cursor is in a state qualifier field, entering a **Enter** will cause the patterns and expressions screen to appear (see figure 2-2).

In the patterns and expressions screen, you assign values to the range and pattern resources and you combine these resources to create the pattern expression.

Values

When assigning values to the range and pattern resources, you can use symbols (in the address field only) or numeric constants in several number bases (including predefined equates in the status

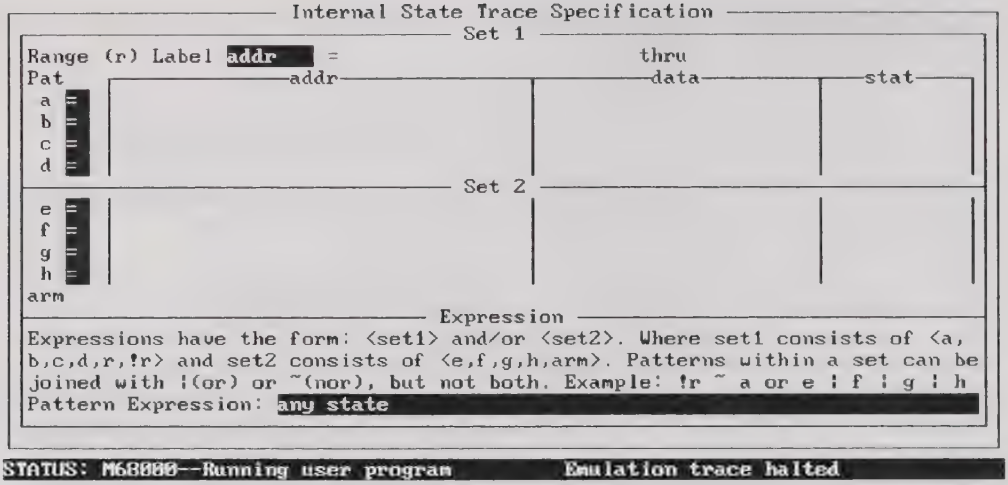
Internal State Trace Specification
Set 1
Range (r) Label addr =
thru
Pat
addr
data
stat
a
b
c
d
Set 2
e
f
g
h
arm
Expression
Expressions have the form: <set1> and/or <set2>. Where set1 consists of <a, b,c,d,r,!r> and set2 consists of <e,f,g,h,arm>. Patterns within a set can be joined with !(or) or ~(nor), but not both. Example: !r ~ a or e ! f ! g ! h
Pattern Expression: any state
STATUS: M68000--Running user program
Emulation trace halted
TAB selects a simple pattern or enter an expression or move up to edit patterns.

Figure 2-2. Ranges, Patterns, and Expressions

field only). You can also use operators to combine symbols and numeric constants.

Constants. Values may be specified as numeric constants in hexadecimal, decimal, octal, or binary. The number bases are specified by the following characters:

Y y	Binary (example: 10010110y).
Q q O o	Octal (example: 377o or 377q).
T t	Decimal (example: 2048t).
H h (or no base)	Hexadecimal (example: 0a7fh or 0a7f). (The leading digit of a hexadecimal constant must be 0-9.)

Don't care digits may be included in binary, octal, or hexadecimal numbers and they are represented by the characters **X** or **x**. A

value of all don't cares may be represented by a question mark (?) or a blank field.

Operators. Values can also be symbols and numeric constants combined with operators. All operations are carried out on 32-bit, two's complement integers. (Values which are not 32 bits will be sign extended when expression evaluation occurs.)

The available operators are listed below in descending order of evaluation precedence. Parentheses are also allowed in expressions to change the order of evaluation.

-, ~	Unary two's complement, unary one's complement. The unary two's complement operator is not allowed on constants containing don't care bits.
*, /, %	Integer multiply, divide, and modulo. These operators are not allowed on constants containing don't care bits.
+, -	Addition, subtraction. These operators are not allowed on constants containing don't care bits.
<<, <<<, >>, >>>	Shift left, rotate left, shift right, rotate right.
&	Bitwise AND.
^	Bitwise exclusive or, XOR.
|	Bitwise inclusive OR.
&&	Logical AND/bit-wise merge. When bits are different, the first value overrides the second; e.g., 10xxy && 11x1y == 10x1y.

Refer to the *PC Interface: User's Reference* description of **expr** for operator truth tables.

Assigning Values to the Range Resource

The range resource defines a range of values associated with a particular trace label. Move the cursor to the range label field and use the **Tab** key to view the predefined trace labels. Notice that these labels are also used when assigning values to the pattern resources. Trace labels are described in the "Assigning Values to the Pattern Resources" section that follows.

Pressing the right arrow key moves the cursor to the starting value field. Notice that you are given a line in the bottom part of the display in which to enter the value. The value you enter on this line may be longer than the space available in the starting value field; when this happens, as much of the value as possible is shown in the starting value field. Pressing the right arrow key again moves the cursor to the ending value field.

Assigning Values to the Pattern Resources

You can assign address, data, status, and xbits (if an external analyzer is present) values to each of the pattern resources.

Move the cursor to the field to the immediate right of a pattern resource and press the **Tab** key a couple times. When "=" is selected, the pattern is equal to the state described by the following values; when "!=" is selected, the pattern is not equal to the state described.

The addr, data, stat, and xbits (if an external analyzer is present) columns allow you to assign values to each of the trace labels. When a pattern has values assigned to more than one trace label, these values are ANDed. In other words, if you assign an address value of 500H and a data value of 1234H to a pattern, a captured state must have an address of 5FFH AND data equal to 1234H in order to match the pattern.

Trace Labels. The following trace labels are predefined in most of the HP 64700 Series emulators:

addr	Represents the trace signals which monitor the emulation processor's address pins (trace signals 0 through 23 in the 68000 emulator).

data	Represents the trace signals which monitor the emulation processor's data pins (trace signals 32 through 47 in the 68000 emulator).
stat	Represents the trace signals which monitor other emulation processor signals (trace signals 24 through 31 in the 68000 emulator).
xbits	Represents the external trace signals. This trace label is only available if an external analyzer is present and aligned with the internal analyzer.

These trace labels are predefined. You can define additional trace labels in the screen presented with the "**Analysis Format**" command. Refer to the "Changing the Display Format" section that appears later in this chapter.

The trace signals associated with the addr, data, and stat trace labels are different for each emulator. Other emulators may provide additional trace labels to choose from.

Predefined Values for 68000 Emulator Status. Move the cursor to the "stat" field of a pattern resource. Notice that a line on which you can enter status values appears on the bottom part of the screen. Use the **Tab** key to view the predefined values. The predefined values for the 68000 emulator are:

Qualifier	Status Bits (31..24)	Description
byte	0xxxx xxx1Y	Byte cycle.
cyc6800	0xxxx x0xxY	6800 peripheral cycle.
data	0xxx0 1xxxY	Data cycle.
dma	0xx01 1xxxY	DMA cycle.
grd	00xxx xxxxY	Guarded memory access.
intack	0xx11 1xxxY	Interrupt acknowledge cycle.
prog	0xxx1 0xxxY	Program cycle.
read	0xxxx xx1xY	Read cycle.
super	0xx1x xxxxY	Supervisor cycle.
supdata	0xx10 1xxxY	Supervisor data cycle.
supprog	0xx11 0xxxY	Supervisor program cycle.
user	0xx0x xxxxY	User cycle.
userdata	0xx00 1xxxY	User data cycle.
userprog	0xx01 0xxxY	User program cycle.
word	0xxxx xxx0Y	Word cycle.
write	0xxxx xx0xY	Write cycle.
wrrom	0x0xx xx0xY	Write to ROM.

You can also select these predefined values when specifying status values for the pattern resources.

The predefined values for emulator status are different for each emulator. Refer to your *PC Interface: Emulator User's Guide* for the definitions of the status values predefined for your emulator.

Specifying Pattern Expressions

The range and pattern resources and the arm condition are split into two sets.

Set 1: **r**, **!r**, **a**, **b**, **c**, and **d**.

Set 2: **e**, **f**, **g**, **h**, and **arm**.

Interset Operators. Resources from the two sets can be combined with the **and** and **or** interset (between set) operators.

- You cannot use these operators to combine resources from the same set.

Intraset Operators. Resources within a set may be combined using one of the intraset operators, | (OR) or ~ (NOR).

- You cannot use both | (OR) and ~ (NOR) operators within the same set.
- You cannot combine resources from different sets with the | (OR) or ~ (NOR) operators.
- Note that "a ~ a" is allowed; this type of expression may occasionally be useful if you are running out of pattern resources and wish to specify a logical NOT of some existing pattern.

The intraset (within a set) operators (~, |) are evaluated first; then, the interset operators are evaluated.

Set Operator Limitations. Only the OR (|) and NOR (~) logical operators are available as intraset operators. However, you can create the AND and NAND operators by applying DeMorgan's law:

$$a \text{ AND } b = \overline{a} \sim \overline{b}$$
$$a \text{ NAND } b = \overline{a} \mid \overline{b}$$

To create a logical NOT of a pattern resource, invert the equality used when assigning values to that resource.

Resetting the Trace Specification

You can reset the analyzer to its default specification by selecting:

```
Analysis, Trace, Reset
```

The resulting trace specification is shown in figure 2-1.

Starting the Trace

After the trace specification has been made, you can start the trace by selecting:

```
Analysis, Begin
```

The emulator must be running before the analyzer can capture program execution.

When the trigger state has been found and trace memory has been filled with states, a message on the status line will show you that the trace is complete. When the status line shows you that the trace is complete, the next step is to display the trace.

If the status line continues to show that the trace is "running", two things are possible:

1. The trigger has been found, but there haven't been enough storage states captured to fill the trace memory buffer.

2. The trigger has not been found.

To find out which of these situations is the case, enter the "Analysis Display" command (described later in this chapter). The number of

states that can be displayed is shown at the bottom of the screen. If there are states to display, then situation 1 above has occurred.

If there are no states to display, then situation 2 above has occurred. If the trigger state has not been found and you think it should have been found, you may want to halt the trace and review your trace specification.

Halting a Trace Measurement

You can, and most likely will, specify traces whose trigger or storage states are never found. When this happens, the "Trace complete" message is never shown, and the trace continues to run ("Trace running"). When these situations occur, you can choose to halt the trace measurement. To do this, select:

```
Analysis, Halt
```

The trace halt command is also useful to deactivate signals which are driven when the trigger is found (refer to the "Making Coordinated Measurements" chapter).

Displaying the Trace

To display the trace, select:

```
Analysis, Display
```

If states have been stored, you are now given two fields in which to specify the states to display. Type the number of the first state you want to display in the "Starting state to display" field, and press **Enter**. Use the right arrow key to move the cursor to the "Ending state to display" field. Type in the number of the last state you want to display, and press **Enter**.

If your emulator supports symbol storage, you see an additional field that gives you control of the display of addresses and symbols.

An example trace display is shown below.

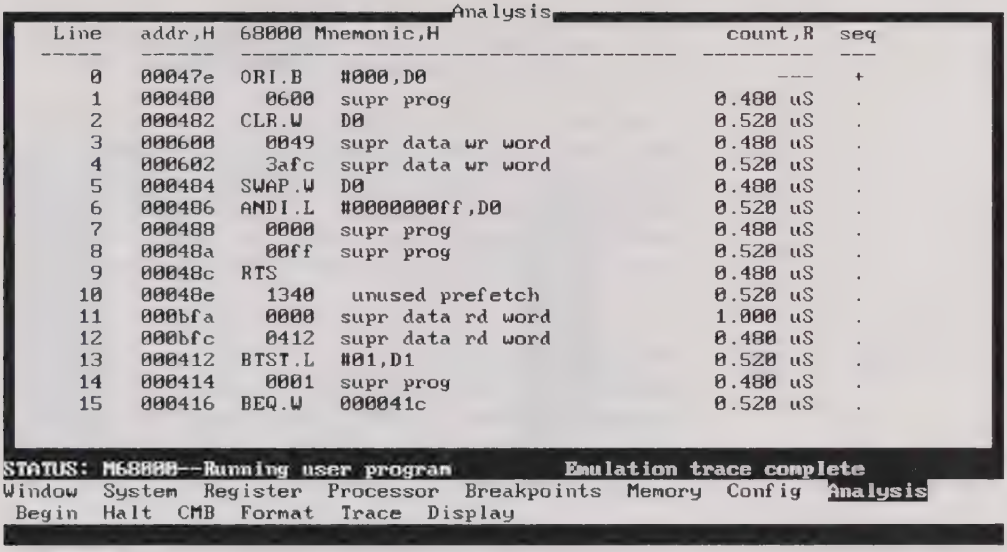
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
0 00047e ORI.B #000,D0 --- +
1 000480 0600 supr prog 0.480 uS .
2 000482 CLR.W D0 0.520 uS .
3 000600 0049 supr data wr word 0.480 uS .
4 000602 3afc supr data wr word 0.520 uS .
5 000484 SWAP.W D0 0.480 uS .
6 000486 ANDI.L #0000000ff,D0 0.520 uS .
7 000488 0000 supr prog 0.480 uS .
8 00048a 00ff supr prog 0.520 uS .
9 00048c RTS 0.480 uS .
10 00048e 1340 unused prefetch 0.520 uS .
11 000bfa 0000 supr data rd word 1.000 uS .
12 000bfc 0412 supr data rd word 0.480 uS .
13 000412 BTST.L #01,D1 0.520 uS .
14 000414 0001 supr prog 0.480 uS .
15 000416 BEQ.W 000041c 0.520 uS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

The first column on the trace list contains the line number. The trigger is always on line 0.

The second column contains the address information associated with the trace states. Addresses in this column may be locations of instruction opcodes on fetch cycles, or they may be sources or destinations of operand cycles.

The third column shows mnemonic information about the emulation bus cycle. The disassembled instruction mnemonic is shown for opcode fetch cycles. The data and mnemonic status ("0600 supr prog", for example) are shown for operand cycles.

If your emulator contains an external analyzer (the model number has an "L" suffix), the next column, labeled "xbits", shows the data captured on the external channels.

The next column shows the count information (time is counted by default). The "R" indicates that each count is relative to the previous state.

The last column contains information about the sequencer. The "+" on line 0 indicates the state caused a sequencer branch (in this case, the trigger on any state).

Sometimes, the trace will show opcode fetches for instructions which are not executed because of a transfer of execution to other addresses. This can happen with microprocessors like the 68000 and the 80186 because they have pipelined architectures or instruction queues which allow them to prefetch the next few instructions before the current instruction is finished executing.

Note

When a trigger condition is found but not enough states are captured to fill trace memory, the status line will show that the trace is still running. You can display all but the last few captured states in this situation; you must halt the trace to display the last few captured states.

Changing the Trace Format

To change the trace format, select:

```
Analysis, Format
```

The analysis format screen is shown in figure 2-3.

The "Anlysis Format" command primarily allows you to arrange the columns of trace information in a different manner. However, notice that you can include any trace label in the trace. Also, notice that the trace label information can be displayed in various number bases, and that counts can be displayed relative or absolute.

Tracing Foreground/Background Execution

The first field in the "Analysis Format" display specifies whether the analyzer should capture user (foreground) states, background states, or all states (foreground and background). When background states appear in the trace, a string indicating that it is a background state typically appears at the end of the mnemonic column (for example, "BGM" appears when using the 68000 emulator).

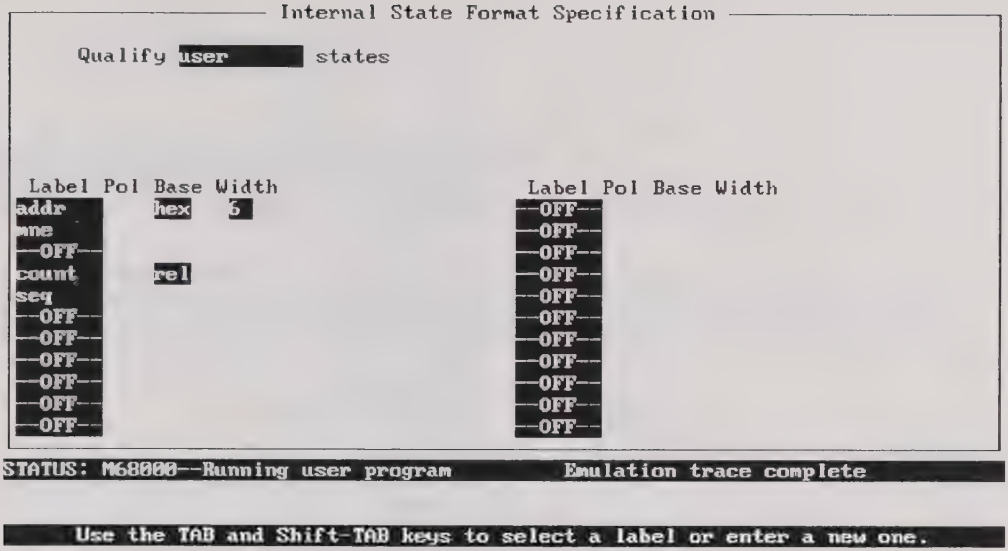

Figure 2-3. Analysis Format Screen

Trace Labels

The bottom part of the "Analysis Format" display is used to specify which trace labels appear in which column of the display. Several trace labels are predefined for the internal emulation analyzer.

You can specify the number base (in hexadecimal, binary, octal, decimal, and ASCII) for several of the predefined trace labels.

addr	Values captured on the emulator's address bus. If your emulator supports symbol storage, you can change the width of the address column so that more symbol information is shown.
data	Values captured on the emulator's data bus.
stat	Values captured on the trace signals used for the emulator's status.

mne	Captured information disassembled and presented in mnemonic format.
count	State or time count information presented in absolute format (relative to the trigger state) or relative format (relative to the previous state in the trace).
seq	Shows a "+" if the captured state is one the analyzer was searching for and found (in other words, a find state, a trigger state, or an branch state).
DELETE	Deletes a trace label.
--OFF--	Turns a column off so that it is not displayed in the trace.

This concludes the "Using the Analyzer" chapter. You have learned about the analysis commands and all the trace specification fields except those that appear when you emulator contains an external analyzer. The additional fields are described in the "Using the External Analyzer" chapter.

3

Internal Analyzer Examples

Introduction

This chapter shows you how to use the emulation analyzer from within the PC Interface. It shows you how to make simple measurements as well as how to search for a sequence of states.

This chapter describes:

- The sample program on which example measurements are made.

This chapter provides the following examples of using the analyzer:

- Specifying a simple trigger.
- Using storage qualifiers.
- Using trace prestore.
- Changing the count qualifier.
- Trace a sequence of events using global restart.
- Trace a sequence of events while specifying "else" branches per level.
- Storing a "window" of program execution.
- Using multiple trigger levels.

Prerequisites

Before reading this chapter you should already know how the emulator operates. You should know how to use the PC Interface, and how to control the emulator from within the PC Interface. Refer to the appropriate *PC Interface: Emulator User's Guide* manual to learn about the emulator; then, return to this manual.

The Sample Program

The sample program is used to illustrate analyzer examples. The examples in this chapter have been generated using an 68000 (HP 64742) emulator. The sample program is written in 68000 assembly language.

It is not important that you know the 68000 assembly language; however, you should understand what the various sections of the program do and associate these tasks with the labels used in the program.

You are encouraged to rewrite the sample program in the assembly language appropriate for your emulator. Then, you can use your analyzer to perform the examples shown in this chapter. Of course, the output of your commands will be different than those shown here.

What the Sample Program Does

A pseudo-code algorithm of the sample program is shown in figure 3-1.

The sample program is not intended to represent a real routine. The program uses four different callers of the WRITE_NUMBER subroutine to simulate situations in real programs where routines are called from many different places. An example later in this chapter will show you how to use the analyzer to determine where a routine is called from.

```
                Initialize the stack pointer.
                Set up number counter.
        AGAIN:  Save the two previous random numbers.
                Call the RAND random number generator subroutine.
                Test the two least significant bits of the previous random number.
                    If 00B then goto CALLER_0.
                    If 01B then goto CALLER_1.
                    If 10B then goto CALLER_2.
                    If 11B then goto CALLER_3.
     CALLER_0:  Call the WRITE_NUMBER subroutine.
                Goto AGAIN (repeat program).
     CALLER_1:  Call the WRITE_NUMBER subroutine.
                Goto AGAIN (repeat program).
     CALLER_2:  Call the WRITE_NUMBER subroutine.
                Goto AGAIN (repeat program).
     CALLER_3:  Call the WRITE_NUMBER subroutine.
                Decrement number counter.
                If the number counter is not zero
                    Then goto AGAIN (repeat program).
                Else
                    Reset number counter.
                    Push parameters for QSORT.
                    Call QSORT.

          RAND: Pseudo-random number generator which returns a random number
                from 0-0FFH.
                RETURN from subroutine.

WRITE_NUMBER:   Write the random number to a 256 byte data area, using the second
                previous random number as an offset into that area.
                RETURN from subroutine.

         QSORT: Quick-sort values in 256 byte data area.
```

Figure 3-1. Pseudo-Code Algorithm of Sample Program

An assembler listing of the sample program is shown in figure 3-2. It is provided so that you can see the addresses associated with the program labels. The program area, which contains the instructions to be executed by the microprocessor, is located at 400H. The RESULTS area, to which the random numbers are written, is located at 500H. The area which contains a variable used by the RAND subroutine and the locations for the stack is located at 600H.

Before you can use the analyzer to perform measurements on the sample program, you must map memory and load the sample program.

```
HEWLETT-PACKARD: 68000 Assembler
FILE: C:\MNL\ODY\ANLY\PCI\SRC\68K\SRND.S
LOCATION OBJECT CODE LINE     SOURCE LINE

                      1 "68000"
                      2 ************************************************
                      3 * The "srnd.S" program runs in an infinite loop,
                      4 * writing random numbers to an output area and
                      5 * sorting the output area after 4FFH random
                      6 * numbers have been written.
                      7 ************************************************
                      8                 ORG     400H
                      9 ;-----------------------------------------------
                     10 ; Initialize the stack, and set up the counter
                     11 ; for the number of random numbers before sort.
                     12 ;-----------------------------------------------
000400 2E7C          13 START           MOVE.L  #STACK,A7
000402 00000BFE
000406 343C 04FF     14                 MOVE.W  #4FFH,D2
                     15 ;-----------------------------------------------
                     16 ; The next two instructions move the second
                     17 ; previous random number into A1 (offset to
                     18 ; RESULTS area, and the previous random number
                     19 ; into D1.
                     20 ;-----------------------------------------------
00040A 2241          21 AGAIN           MOVE.L  D1,A1
00040C 2200          22                 MOVE.L  D0,D1
                     23 ;-----------------------------------------------
                     24 ; RAND returns random number in D0.
                     25 ;-----------------------------------------------
00040E 6100 005A     26                 BSR     RAND
                     27 ;-----------------------------------------------
                     28 ; The following instructions determine which
                     29 ; caller calls WRITE_NUMBER (depends on last
                     30 ; two bits of the previous random number).
                     31 ;-----------------------------------------------
000412 0801 0001     32                 BTST    #1,D1
000416 6700 0004     33                 BEQ     ZERO_ONE
00041A 600A          34                 BRA.B   TWO_THREE
00041C 0801 0000     35 ZERO_ONE        BTST    #0,D1
000420 6700 000E     36                 BEQ     CALLER_0
000424 6010          37                 BRA.B   CALLER_1
000426 0801 0000     38 TWO_THREE       BTST    #0,D1
00042A 6700 0010     39                 BEQ     CALLER_2
00042E 6012          40                 BRA.B   CALLER_3
                     41 ;-----------------------------------------------
                     42 ; The WRITE_NUMBER routine is called from four
                     43 ; different places.  The program is repeated
                     44 ; after the subroutine return.
                     45 ;-----------------------------------------------
000430 6100 005C     46 CALLER_0        BSR     WRITE_NUMBER
000434 6010          47                 BRA.B   TEST
000436 6100 0056     48 CALLER_1        BSR     WRITE_NUMBER
00043A 600A          49                 BRA.B   TEST
00043C 6100 0050     50 CALLER_2        BSR     WRITE_NUMBER
000440 6004          51                 BRA.B   TEST
000442 6100 004A     52 CALLER_3        BSR     WRITE_NUMBER
```

Figure 3-2. Sample Program Listing

```
000446 0C42 0000      53 TEST            CMPI    #0,D2
                      54 ;-----------------------------------------------
                      55 ; If the counter is not zero, continue to write
                      56 ; random numbers.
                      57 ;-----------------------------------------------
00044A 57CA FFBE      58                 DBEQ    D2,AGAIN
                      59 ;-----------------------------------------------
                      60 ; The counter is zero.  Sort the random numbers
                      61 ; in the RESULTS area.
                      62 ;-----------------------------------------------
00044E 343C 04FF      63                 MOVE.W  #4FFH,D2   ; Reset counter.
                      64 ;-----------------------------------------------
                      65 ; Push the "high address" and "low address"
                      66 ; parameters expected by the QSORT routine.
                      67 ;-----------------------------------------------
000452 2F3C           68                 MOVE.L  #RESULTS+0FFH,-[A7]
000454 000005FF
000458 2F3C           69                 MOVE.L  #RESULTS,-[A7]
00045A 00000500
                      70 ;-----------------------------------------------
                      71 ; Call the QSORT routine.  Increment the
                      72 ; stack pointer after the call.
                      73 ;-----------------------------------------------
00045E 6100 0034      74                 BSR.W   QSORT
000462 DFFC           75                 ADDA.L  #8,A7
000464 00000008
000468 60A0           76                 BRA.B   AGAIN    ; Repeat program.
                      77
                      78 ************************************************
                      79 * The RAND routine generates a pseudo-random
                      80 * number from 0-0FFH, and leaves the result
                      81 * in D0.
                      82 ************************************************
00046A 2039 0000      83 RAND            MOVE.L  RAND_SEED,D0
00046E 0600
000470 C1FC 4E6D      84                 MULS.W  #4E6DH,D0
000474 2040           85                 MOVEA.L D0,A0
000476 41E8 0339      86                 LEA     339H[A0],A0
00047A 2008           87                 MOVE.L  A0,D0
00047C 23C0 0000      88                 MOVE.L  D0,RAND_SEED
000480 0600
000482 4240           89                 CLR.W   D0
000484 4840           90                 SWAP    D0
000486 0280           91                 ANDI.L  #000000FFH,D0
000488 000000FF
00048C 4E75           92                 RTS
                      93
                      94 ************************************************
                      95 * The WRITE_NUMBER routine writes the random
                      96 * number to the RESULTS area.  The second
                      97 * previous number is the offset in this area.
                      98 ************************************************
00048E 1340 0500      99 WRITE_NUMBER    MOVE.B  D0,RESULTS[A1]
000492 4E75          100                 RTS
                     101
                     102 ************************************************
```

Figure 3-2. Sample Program Listing (Cont'd)

```
                    103 * The QSORT subroutine is passed (on the stack)
                    104 * the high and low addresses of an area of bytes
                    105 * to be sorted.
                    106 ************************************************
000494 226F 0008    107 QSORT           MOVE.L  8[A7],A1  ; A1 = high index.
000498 206F 0004    108                 MOVE.L  4[A7],A0  ; A0 = low index.
                    109 ;-----------------------------------------------
                    110 ; The following section splits the area to be sorted
                    111 ; into two areas.  QSORT will be called to sort each
                    112 ; of these smaller areas.
                    113 ;
                    114 ; If high index is less than low index, then sort
                    115 ; is done.
                    116 ;-----------------------------------------------
00049C B3C8         117 OVER            CMPA.L  A0,A1
00049E 6F00 0054    118                 BLE     DONE
                    119 ;-----------------------------------------------
                    120 ; D2 = dividing value (from low index).
                    121 ;-----------------------------------------------
0004A2 1410         122                 MOVE.B  [A0],D2
                    123 ;-----------------------------------------------
                    124 ; (Increment allows DEC_HIGH loop to work first
                    125 ; time through.)
                    126 ;-----------------------------------------------
0004A4 5289         127                 ADDQ.L  #1,A1
                    128 ;-----------------------------------------------
                    129 ; Move low index up until it points to a value
                    130 ; greater than the dividing value.
                    131 ;-----------------------------------------------
0004A6 5288         132 INC_LOW         ADDQ.L  #1,A0
0004A8 B410         133                 CMP.B   [A0],D2
0004AA 6F00 000A    134                 BLE     DEC_HIGH
0004AE B3C8         135                 CMPA.L  A0,A1
0004B0 6D00 0018    136                 BLT     OUT
0004B4 60F0         137                 BRA.B   INC_LOW
                    138 ;-----------------------------------------------
                    139 ; Move high index down until it points to a value
                    140 ; less than or equal to the dividing value.
                    141 ;-----------------------------------------------
0004B6 5389         142 DEC_HIGH        SUBQ.L  #1,A1
0004B8 B411         143                 CMP.B   [A1],D2
0004BA 6DFA         144                 BLT     DEC_HIGH
                    145 ;-----------------------------------------------
                    146 ; If high index is less than or equal to low index,
                    147 ; the area is split; do not swap values.
                    148 ;-----------------------------------------------
0004BC B3C8         149                 CMPA.L  A0,A1
0004BE 6D00 000A    150                 BLT     OUT
                    151 ;-----------------------------------------------
                    152 ; If high index is greater than low index, swap
                    153 ; values and move indexes again.
                    154 ;-----------------------------------------------
0004C2 1610         155                 MOVE.B  [A0],D3
0004C4 1091         156                 MOVE.B  [A1],[A0]
0004C6 1283         157                 MOVE.B  D3,[A1]
0004C8 60DC         158                 BRA.B   INC_LOW
```

Figure 3-2. Sample Program Listing (Cont'd)

```
                        159 ;-------------------------------------------------
                        160 ; A0 = low address (needed to swap dividing value).
                        161 ;-------------------------------------------------
0004CA 206F 0004         162 OUT             MOVE.L  4[A7],A0)
                        163 ;-------------------------------------------------
                        164 ; Swap dividing value and high index value.
                        165 ;-------------------------------------------------
0004CE 1091              166                 MOVE.B  [A1],[A0]
0004D0 1282              167                 MOVE.B  D2,[A1]
                        168 ;-------------------------------------------------
                        169 ; The area is now split into two smaller areas.
                        170 ; The last high index value is the middle of the
                        171 ; two areas.  The high and low addresses for the
                        172 ; second QSORT call are pushed first.
                        173 ;-------------------------------------------------
0004D2 2F2F 0008         174                 MOVE.L  8[A7],-[A7]  ; Push high.
0004D6 5289              175                 ADDQ.L  #1,A1
0004D8 2F09              176                 MOVE.L  A1,-[A7]  ; Push middle + 1.
0004DA 5589              177                 SUBQ.L  #2,A1
0004DC 2F09              178                 MOVE.L  A1,-[A7]  ; Push middle - 1.
0004DE 2F08              179                 MOVE.L  A0,-[A7]  ; Push low.
0004E0 6100 FFB2         180                 BSR.W   QSORT
                        181 ;-------------------------------------------------
                        182 ; Increment stack pointer after call.
                        183 ;-------------------------------------------------
0004E4 DFFC              184                 ADDA.L  #8,A7
0004E6 00000008
0004EA 6100 FFA8         185                 BSR.W   QSORT
0004EE DFFC              186                 ADDA.L  #8,A7
0004F0 00000008
0004F4 4E75              187 DONE            RTS
                        188
                        189 ************************************************
                        190 * Random numbers written to this area.
                        191 ************************************************
                        192                 ORG     500H
000500                  193 RESULTS         DS.B    100H
                        194
                        195 ************************************************
                        196 * Variable used in RAND subroutine and stack area.
                        197 ************************************************
                        198                 ORG     600H
000600 0000 0001        199 RAND_SEED       DC.L    1
000604                  200                 DS.W    2FDH
000BFE                  201 STACK           DS.W    1
          É   202                 END     START

Errors=    0


CROSS REFERENCE TABLE FILE: C:\MNL\ODY\ANLY\PCI\SRC\68K\SRND.S
LINE#    SYMBOL         TYPE     REFERENCES

   21  AGAIN             A      58,   76
   46  CALLER_0          A      36
   48  CALLER_1          A      37
```

Figure 3-2. Sample Program Listing (Cont'd)

```
 50  CALLER_2          A     39
 52  CALLER_3          A     40
142  DEC_HIGH          A    134,  144
187  DONE              A    118
132  INC_LOW           A    137,  158
162  OUT               A    136,  150
117  OVER              A
107  QSORT             A     74,  180,  185
 83  RAND              A     26
199  RAND_SEED         A     83,   88
193  RESULTS           A     68,   69,   99
201  STACK             A     13
 13  START             A    202
 53  TEST              A     47,   49,   51
 38  TWO_THREE         A     34
 99  WRITE_NUMBER      A     46,   48,   50,   52
 35  ZERO_ONE          A     33
```

Figure 3-2. Sample Program Listing (Cont'd)

Mapping Memory for the Sample Program

The program, destination, and stack areas of the sample program were ORGed at addresses 400H, 500H, and 600H, respectively. Therefore, map the range from 400H through 0BFFH to emulation memory before loading the program. Select the memory mapper configuration by either by using the left and right arrow keys to highlight command options and pressing **Enter**, or by typing the first letter of the command options.

```
Config, Map, Modify
```

Using the arrow keys, move the cursor to the "address range" field of term 1. Enter:

```
400..0bff
```

Move the cursor to the "memory type" field of term 1, and press the TAB key to select the **eram** (emulation RAM) type. To save your memory map, use the **Enter** key to exit the field in the lower right corner. (The **End** key on Vectra keyboards moves the cursor directly to the last field.) The memory configuration display is shown in figure 3-3.

Memory mapping is described in more detail in your *PC Interface: Emulator User's Guide*.

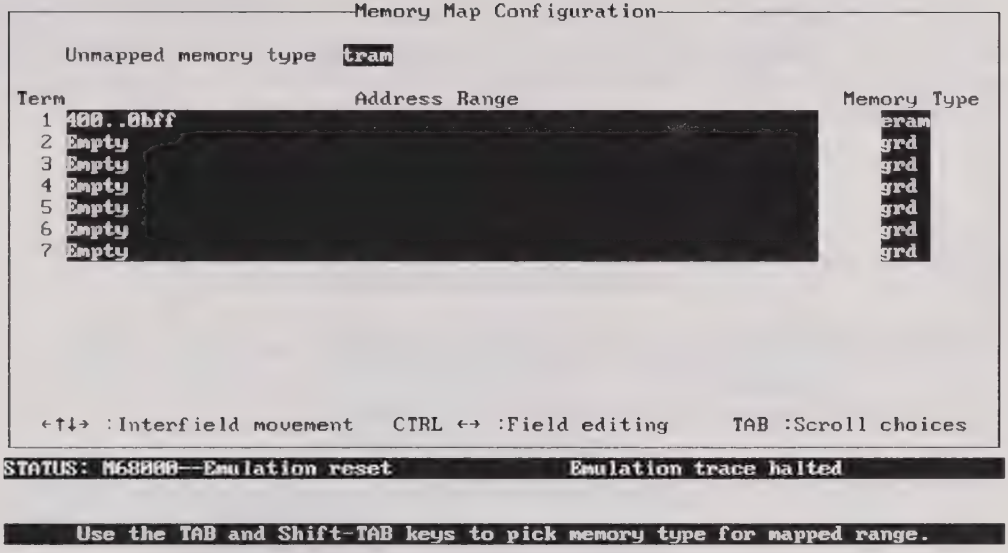

Figure 3-3. Memory Map Configuration Display

Loading the Sample Program

If you have already assembled and linked the sample program, you can load the absolute file by selecting:

```
Memory, Load
```

Move the cursor to the "Format" field and select the appropriate format (HP64000 in this example). Select "yes" in the field that forces the absolute file to be read. Now move the cursor to the "Absolute filename" field and enter the name of your symbol file (SRND.L in this example). The options available when loading absolute files into memory are described in more detail in the *PC Interface: User's Reference* manual.

Set Up the Stack Pointer

The 68000 emulator requires you to set up the system stack pointer before you can run the program. To set up the system stack pointer, you must first break into the monitor.

```
Processor, Break
```

To modify the system stack pointer, select:

```
Register, Modify
```

Use the **Tab** key to select register **ssp**, press **Enter**, type in the address 0BFEH, and press **Enter** once again.

Running the Sample Program

To start the emulator executing the sample program, select:

```
Processor, Go, Address
```

Type in the module and symbol names associated with the sample program's starting address, SRND.S:START. The status line will show that the emulator is "Running user program".

When entering the name of a local symbol for the first time, you need to include the module name. This causes that module to become the default module, and the next time you refer to a symbol from that module, you do not have to include the module name.

Activating the Trace Window

The examples which follow show results in the "zoomed" trace window. To activate this window, select:

```
Window, Zoom
```

Then either type in, or use the **Tab** key to select "Analysis", and press **Enter**.

Specifying a Simple Trigger

Suppose you want to look at the execution of the sample program after the AGAIN address, but only after it has occurred three times (in other words, after the program has executed its complete loop three times). To do this, select:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-4. (To access the "patterns and expressions" screen, press the **Enter** key while the cursor is in the "trigger on" field.)

Notice that the address symbol AGAIN is assigned to pattern "a" and an occurrence count of "3" is specified.

To save the new specification, use the **Enter** key to exit out of the field in the lower right corner.

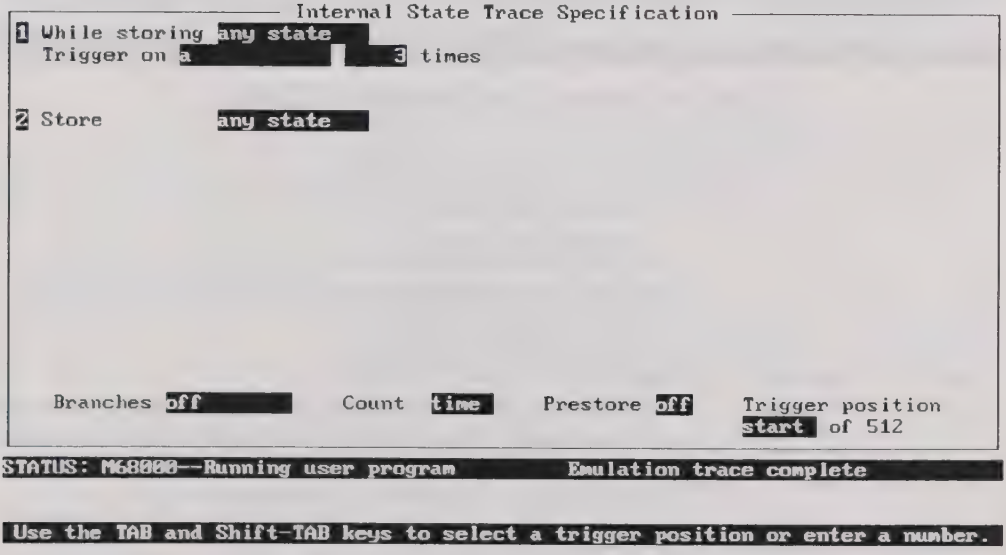
Internal State Trace Specification
1 While storing any state
Trigger on a 3 times
2 Store any state
Branches off
Count time
Prestore off
Trigger position
start of 512
STATUS: M68000--Running user program
Emulation trace complete
Use the TAB and Shift-TAB keys to select a trigger position or enter a number.

Figure 3-4. Simple Trigger Specification

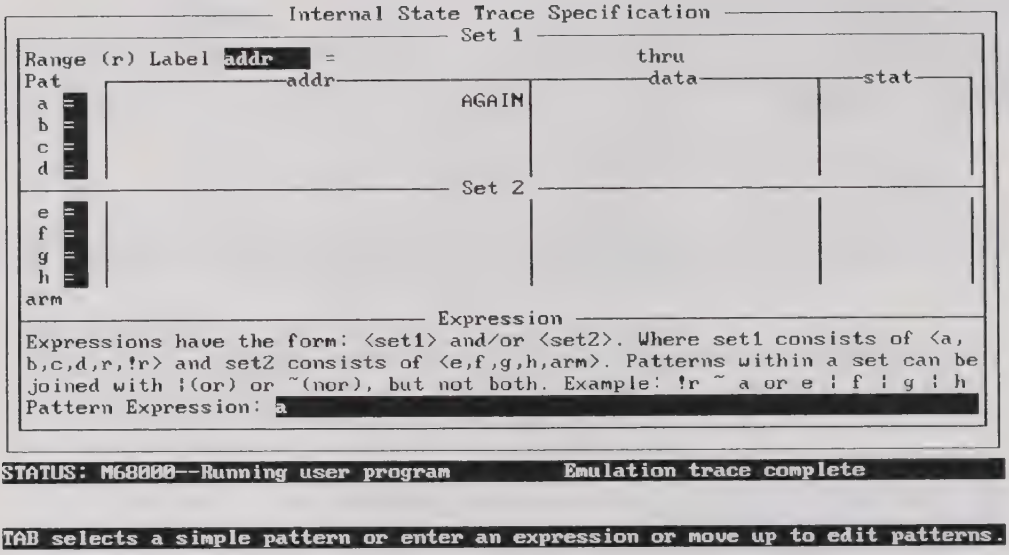
Internal State Trace Specification
Set 1
Range (r) Label addr =
thru
Pat
addr
data
stat
a =
b =
c =
d =
AGAIN
Set 2
e =
f =
g =
h =
arm
Expression
Expressions have the form: <set1> and/or <set2>. Where set1 consists of <a, b,c,d,r,!r> and set2 consists of <e,f,g,h,arm>. Patterns within a set can be joined with ¦(or) or ~(nor), but not both. Example: !r ~ a or e ¦ f ¦ g ¦ h
Pattern Expression: a
STATUS: M68000--Running user program
Emulation trace complete
TAB selects a simple pattern or enter an expression or move up to edit patterns.

Figure 3-4. Simple Trigger Specification (Cont'd)

To begin the trace, select:

```
Analysis, Begin
```

After the "Trace complete" message is shown on the status line, display the trace by selecting:

```
Analysis, Display
```

Type the first state that can be displayed into the starting state field and press **Enter**. Move the cursor to the ending state field, enter the starting state plus 15, and press **Enter**. The resulting trace is similar to the trace shown in the following display.

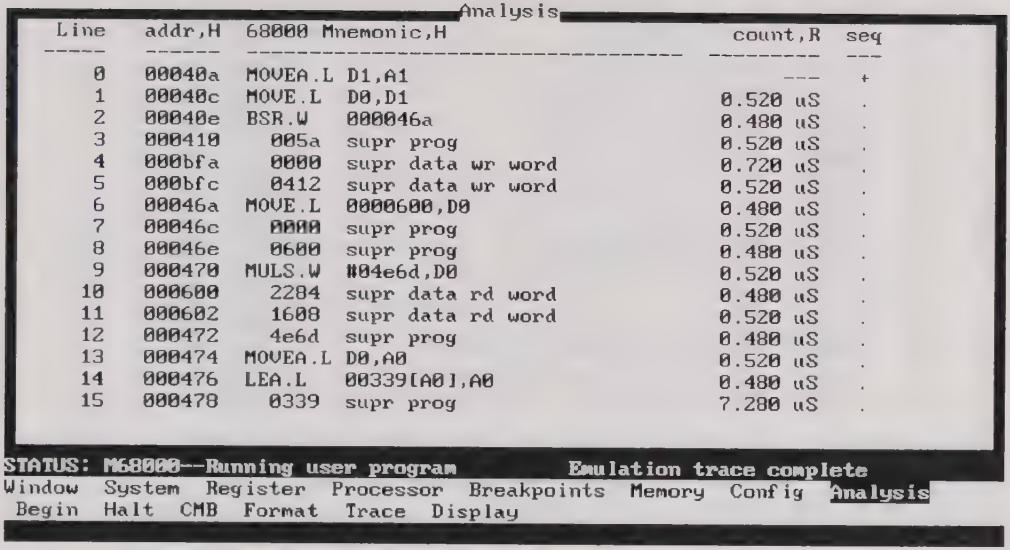
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
0 00040a MOVEA.L D1,A1 --- +
1 00040c MOVE.L D0,D1 0.520 uS .
2 00040e BSR.W 000046a 0.480 uS .
3 000410 005a supr prog 0.520 uS .
4 000bfa 0000 supr data wr word 0.720 uS .
5 000bfc 0412 supr data wr word 0.520 uS .
6 00046a MOVE.L 0000600,D0 0.480 uS .
7 00046c 0000 supr prog 0.520 uS .
8 00046e 0600 supr prog 0.480 uS .
9 000470 MULS.W #04e6d,D0 0.520 uS .
10 000600 2284 supr data rd word 0.480 uS .
11 000602 1608 supr data rd word 0.520 uS .
12 000472 4e6d supr prog 0.480 uS .
13 000474 MOVEA.L D0,A0 0.520 uS .
14 000476 LEA.L 00339[A0],A0 0.480 uS .
15 000478 0339 supr prog 7.280 uS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

In the trace list above, line 0 shows the beginning of the program loop and line 2 shows the call of the RAND subroutine. The disassembled mnemonics on line 6 shows the first instruction executed in the RAND subroutine.

To display more lines of the trace, select:

```
Analysis Display
```

Notice that the starting and ending lines are incremented by the number of lines given in the last display command. Press **Enter** two times to select these values.

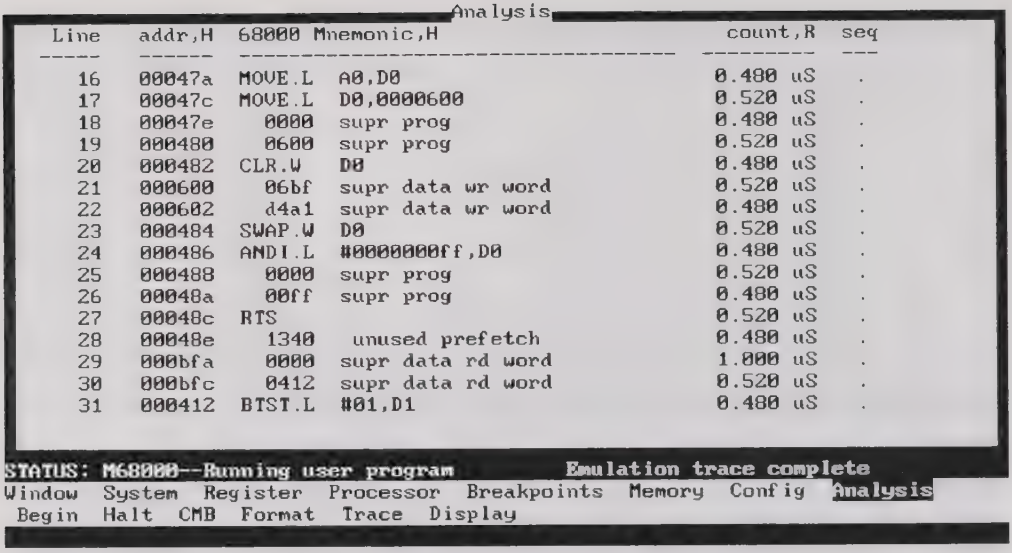
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
16 00047a MOVE.L A0,D0 0.480 uS .
17 00047c MOVE.L D0,0000600 0.520 uS .
18 00047e 0000 supr prog 0.480 uS .
19 000480 0600 supr prog 0.520 uS .
20 000482 CLR.W D0 0.480 uS .
21 000600 06bf supr data wr word 0.520 uS .
22 000602 d4a1 supr data wr word 0.480 uS .
23 000484 SWAP.W D0 0.520 uS .
24 000486 ANDI.L #00000000ff,D0 0.480 uS .
25 000488 0000 supr prog 0.520 uS .
26 00048a 00ff supr prog 0.480 uS .
27 00048c RTS 0.520 uS .
28 00048e 1340 unused prefetch 0.480 uS .
29 000bfa 0000 supr data rd word 1.000 uS .
30 000bfc 0412 supr data rd word 0.520 uS .
31 000412 BTST.L #01,D1 0.480 uS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

In the display above, you see remaining execution of the instructions in the RAND subroutine. To display more lines in the trace, press **CTRL**-R to repeat the previous command. Since you pressed **Enter** in the previous command to select the automatically incremented starting and ending line numbers, the automatically incremented line numbers are selected again, and the next 16 lines of the trace are displayed.

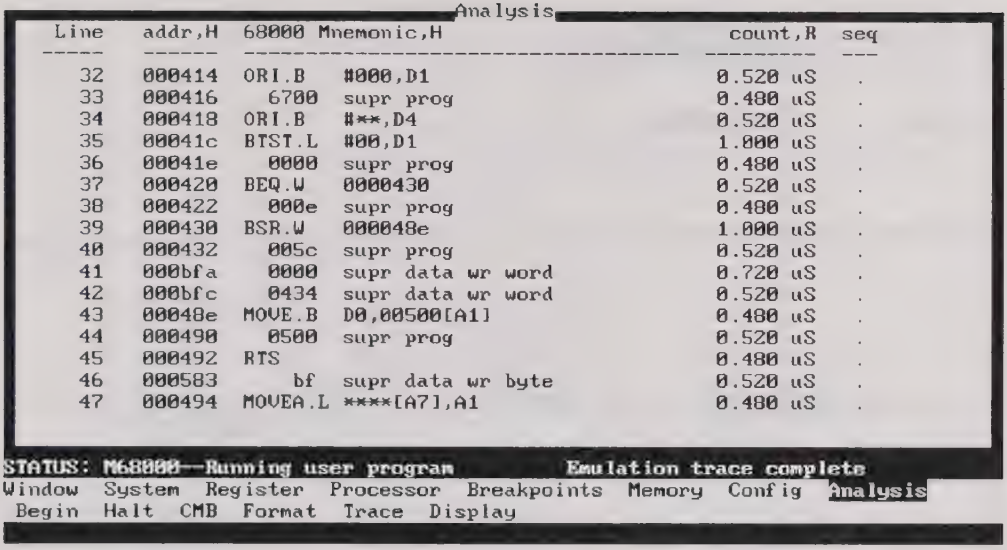
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
32 000414 ORI.B #000,D1 0.520 uS .
33 000416 6700 supr prog 0.480 uS .
34 000418 ORI.B #**,D4 0.520 uS .
35 00041c BTST.L #00,D1 1.000 uS .
36 00041e 0000 supr prog 0.480 uS .
37 000420 BEQ.W 0000430 0.520 uS .
38 000422 000e supr prog 0.480 uS .
39 000430 BSR.W 000048e 1.000 uS .
40 000432 005c supr prog 0.520 uS .
41 000bfa 0000 supr data wr word 0.720 uS .
42 000bfc 0434 supr data wr word 0.520 uS .
43 00048e MOVE.B D0,00500[A1] 0.480 uS .
44 000490 0500 supr prog 0.520 uS .
45 000492 RTS 0.480 uS .
46 000583 bf supr data wr byte 0.520 uS .
47 000494 MOVEA.L ****[A7],A1 0.480 uS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

In the trace list above you see the instructions that write the random number to the RESULTS area.

Using Storage Qualifiers

In the last example, all captured states were stored. To modify the trace specification of the previous example so that only the states which write random numbers to the RESULTS area are stored, select:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-5.

To begin the trace, select:

```
Analysis, Begin
```

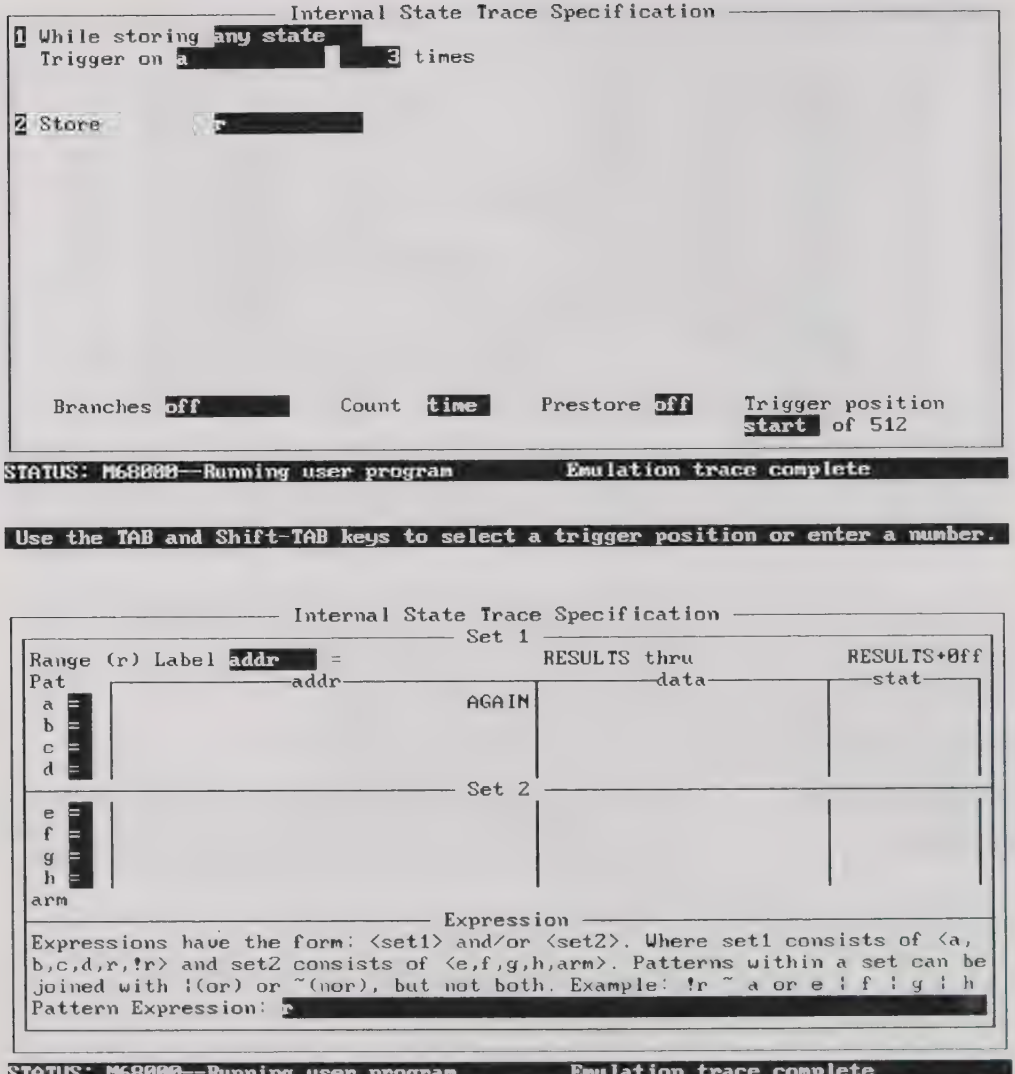

Figure 3-5. Storage Qualifier Specification

After the "Trace complete" message is shown on the status line, display the trace by selecting:

```
Analysis, Display
```

Type the number of the starting state plus 15 into the ending state field, and press **Enter**. The resulting trace will be similar to the display shown below.

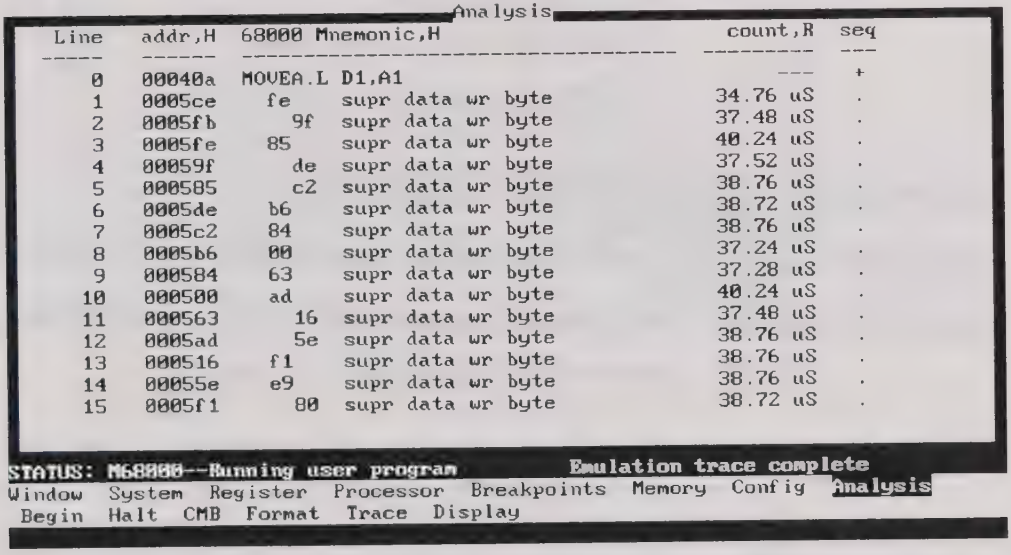
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
0 00040a MOVEA.L D1,A1 --- +
1 0005ce fe supr data wr byte 34.76 uS .
2 0005fb 9f supr data wr byte 37.48 uS .
3 0005fe 85 supr data wr byte 40.24 uS .
4 00059f de supr data wr byte 37.52 uS .
5 000585 c2 supr data wr byte 38.76 uS .
6 0005de b6 supr data wr byte 38.72 uS .
7 0005c2 84 supr data wr byte 38.76 uS .
8 0005b6 00 supr data wr byte 37.24 uS .
9 000584 63 supr data wr byte 37.28 uS .
10 000500 ad supr data wr byte 40.24 uS .
11 000563 16 supr data wr byte 37.48 uS .
12 0005ad 5e supr data wr byte 38.76 uS .
13 000516 f1 supr data wr byte 38.76 uS .
14 00055e e9 supr data wr byte 38.76 uS .
15 0005f1 80 supr data wr byte 38.72 uS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

Notice that the trigger state (line 0) is included in the trace list; trigger states are always stored.

This trace shows that the last two hex digits of the address in the RESULTS area are the same as the random number which gets written two states earlier (see the data in the "mnemonic" column of the trace list). This is expected because the sample program writes the current random number using the second previous random number as an offset into the RESULTS area.

Using Trace Prestore

Prestore lets you to save up to two states which precede a normal store state. The following example uses a prestore qualifier to show which caller of WRITE_NUMBER corresponds to each value written to the RESULTS area. Because you know the BSR assembly language instruction is used to call a subroutine, you can qualify prestore states as states whose data equals the BSR opcode (6100H). First of all, select:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-6.

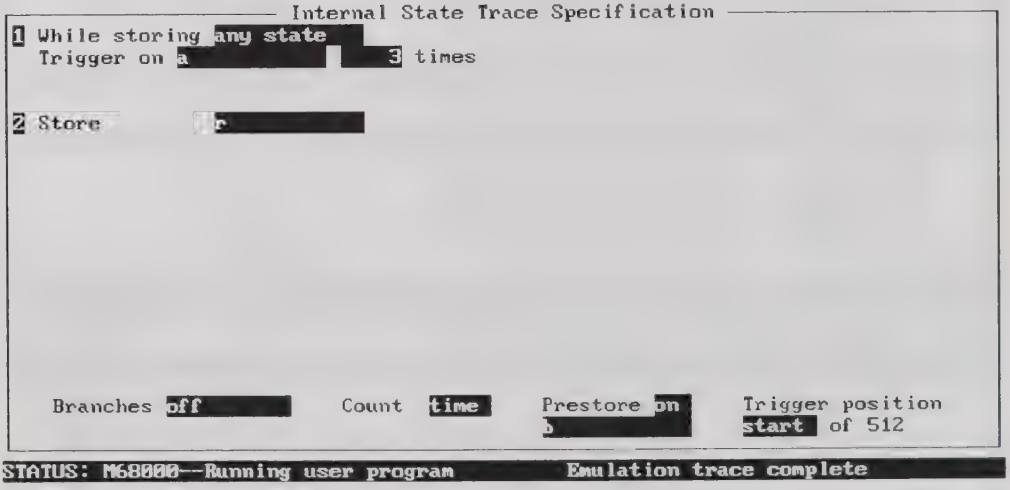
Internal State Trace Specification
1 While storing any state
Trigger on a 3 times
2 Store b
Branches off
Count time
Prestore on b
Trigger position start of 512
STATUS: M68000--Running user program
Emulation trace complete
Use the TAB and Shift-TAB keys to select a trigger position or enter a number.

Figure 3-6. Prestore Qualifier Specification

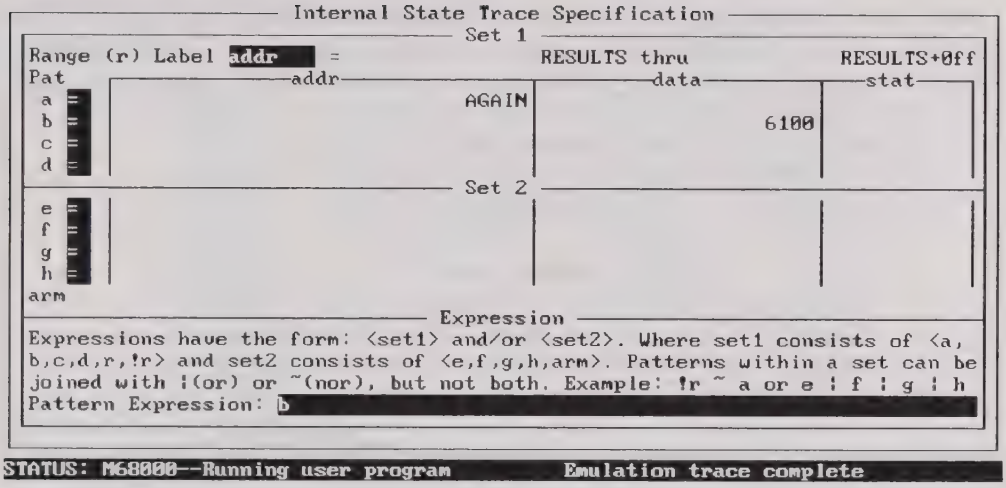

Figure 3-6. Prestore Qualifier Specification (Cont'd)

To begin the trace, select:

```
Analysis, Begin
```

After the "Trace complete" message is shown on the status line, display the trace by selecting:

```
Analysis, Display
```

Type the number of the starting state plus 15 into the ending state field, and press **Enter**. The resulting trace will be similar to the display which follows.

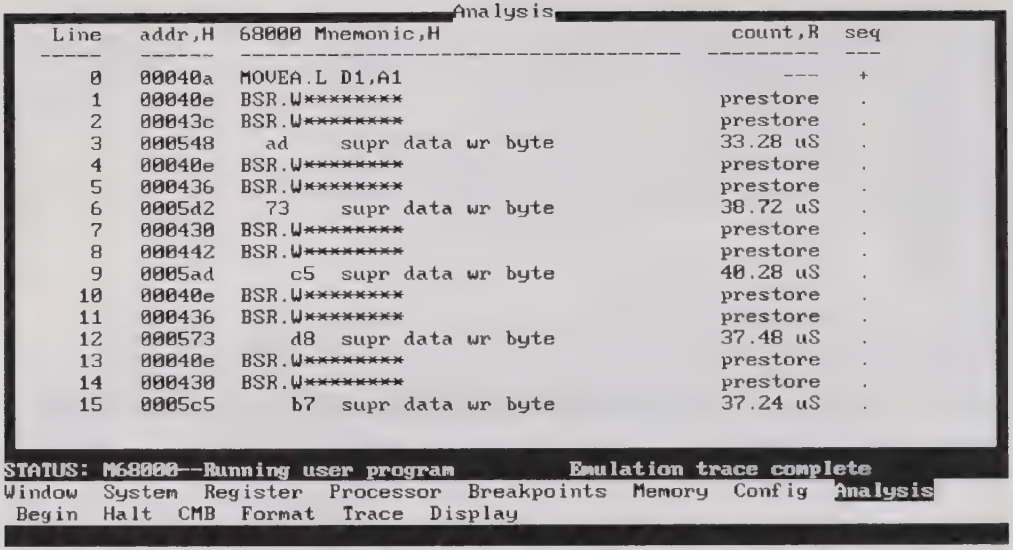
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
0 00040a MOVEA.L D1,A1 --- +
1 00040e BSR.W******** prestore .
2 00043c BSR.W******** prestore .
3 000548 ad supr data wr byte 33.28 uS .
4 00040e BSR.W******** prestore .
5 000436 BSR.W******** prestore .
6 0005d2 73 supr data wr byte 38.72 uS .
7 000430 BSR.W******** prestore .
8 000442 BSR.W******** prestore .
9 0005ad c5 supr data wr byte 40.28 uS .
10 00040e BSR.W******** prestore .
11 000436 BSR.W******** prestore .
12 000573 d8 supr data wr byte 37.48 uS .
13 00040e BSR.W******** prestore .
14 000430 BSR.W******** prestore .
15 0005c5 b7 supr data wr byte 37.24 uS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

The prestore state immediately preceding each write state shows the address of the caller.

The analyzer uses the same resource to save prestore states as it does to save count tags. Consequently, the "prestore" string is shown in the "count" column of the trace list. Note that the time counts are relative to the previous normal storage state. Turning off the count qualifier does not turn off prestore; however, the "prestore" string cannot be seen in the "count" column of the trace list.

States which satisfy the prestore qualifier and the storage qualifier at the same time are stored as normal states.

Changing the Count Qualifier

Suppose now that you are interested in only one address in the RESULTS area, say 5C2H. You wish to see how many loops of the program occur between each write of a random number to this address. You can set up the trace specification so that only writes to address 5C2H are stored; then, you can specify as a count qualifier a state which occurs once on each loop of the program. First of all, select:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-7.

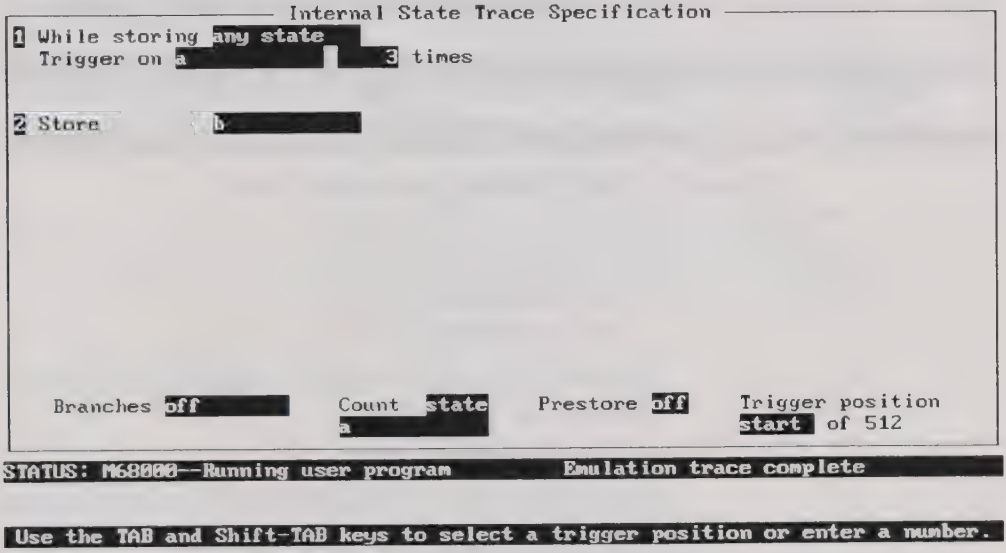
Internal State Trace Specification
1 While storing any state
Trigger on a 3 times
2 Store b
Branches off
Count state a
Prestore off
Trigger position start of 512
STATUS: M68000--Running user program
Emulation trace complete
Use the TAB and Shift-TAB keys to select a trigger position or enter a number.

Figure 3-7. Count Qualifier Specification

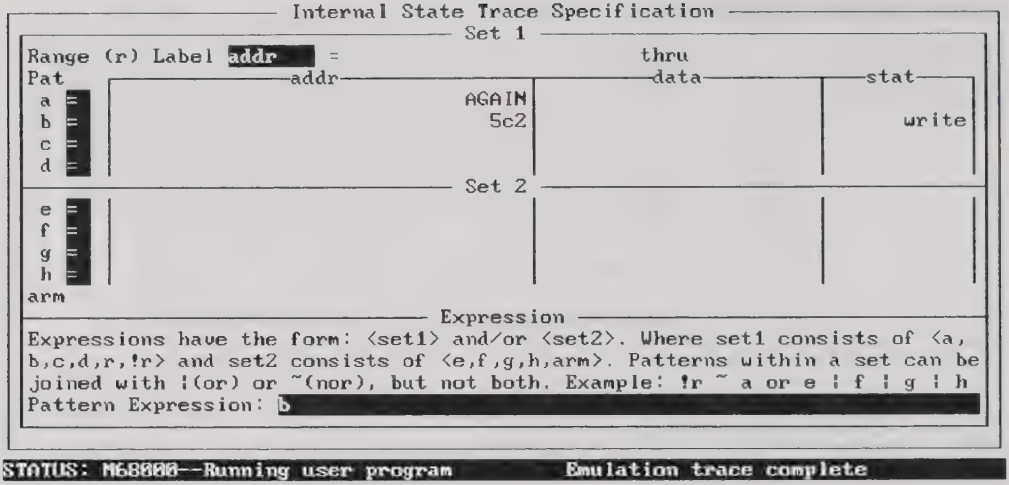

Figure 3-7. Count Qualifier Specification (Cont'd)

To begin the trace, select:

Analysis, Begin

After the "Trace complete" message is shown on the status line, display the trace by selecting:

Analysis, Display

Type the number of the starting state plus 15 into the ending state field, and press **Enter**. The resulting trace display will be similar to the display which follows.

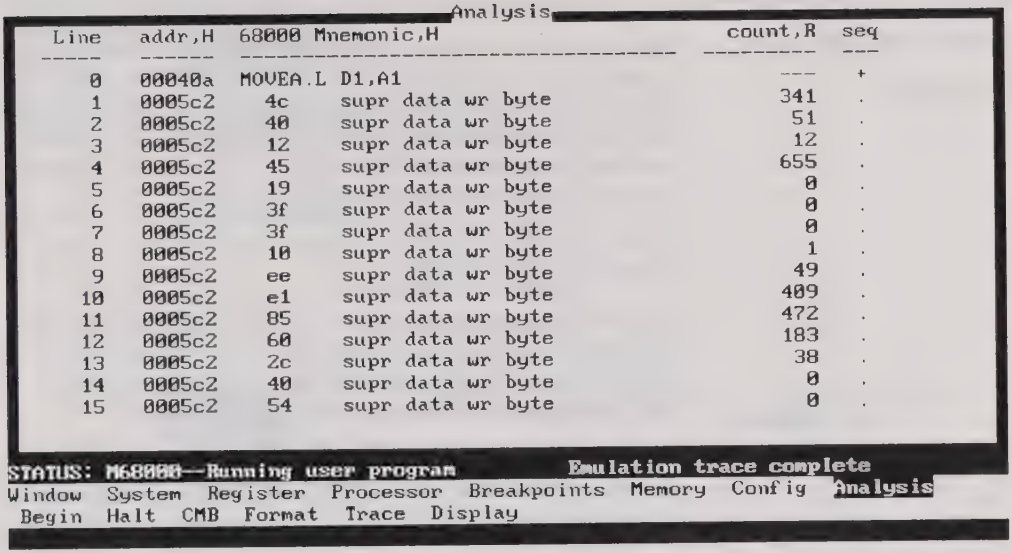
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
0 00040a MOVEA.L D1,A1 --- +
1 0005c2 4c supr data wr byte 341 .
2 0005c2 40 supr data wr byte 51 .
3 0005c2 12 supr data wr byte 12 .
4 0005c2 45 supr data wr byte 655 .
5 0005c2 19 supr data wr byte 0 .
6 0005c2 3f supr data wr byte 0 .
7 0005c2 3f supr data wr byte 0 .
8 0005c2 10 supr data wr byte 1 .
9 0005c2 ee supr data wr byte 49 .
10 0005c2 e1 supr data wr byte 409 .
11 0005c2 85 supr data wr byte 472 .
12 0005c2 60 supr data wr byte 183 .
13 0005c2 2c supr data wr byte 38 .
14 0005c2 40 supr data wr byte 0 .
15 0005c2 54 supr data wr byte 0 .
STATUS: M68000--Running user program
Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

The trace listing above shows that the program executes a variable number of times for each time that a random number is written to 5C2H. Where counts of 0 are seen, the sample program is executing in the QSORT routine which sorts the values written to the RESULTS area.

Using "Restart On" Branches

Selecting "restart on" branches is useful in some situations to trace a specific combination of events. For example, CALLER_3 can be used to write any random number, but suppose you want to trace only the situation where CALLER_3 is used to write a random number to address 5C2H. You can set up the sequence levels so that the analyzer first searches for CALLER_3.

After CALLER_3 is found, the sequencer should then search for the write to address 5C2H.

However, if the program jumps to AGAIN or calls QSORT before the write to 5C2H, you know that CALLER_3 is not used to write the random number this time, and the analyzer should start searching again from the beginning.

If the write to address 5C2H occurs before the program executes the instruction at AGAIN or some instruction in the QSORT routine, the analyzer will trigger.

To make this specification, select:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-8.

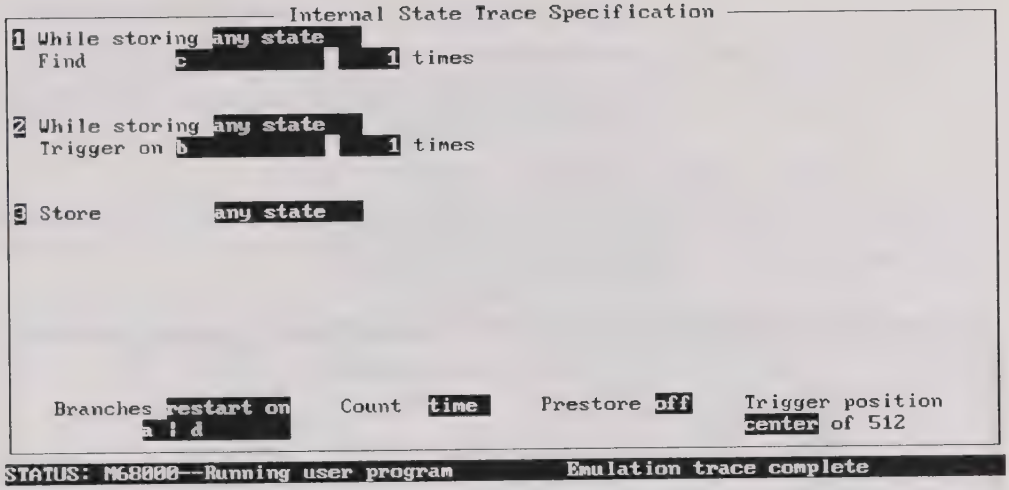
Internal State Trace Specification
1 While storing any state
Find c 1 times
2 While storing any state
Trigger on b 1 times
3 Store any state
Branches restart on a ! d
Count time
Prestore off
Trigger position center of 512
STATUS: M68000--Running user program
Emulation trace complete
Use the TAB and Shift-TAB keys to select a trigger position or enter a number.

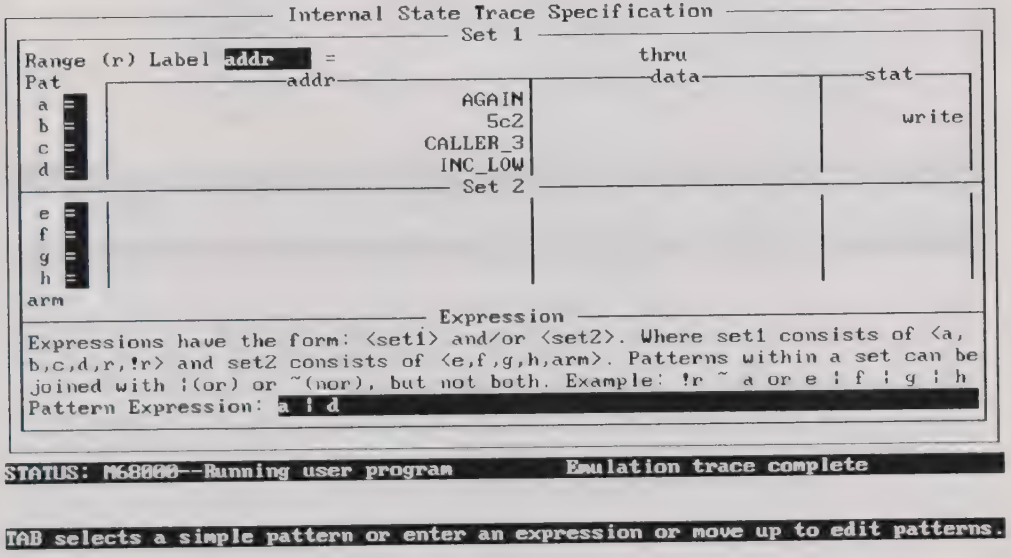

Figure 3-8. Branches "Restart On" Specification

To begin the trace, select:

Analysis, Begin

After the "Trace complete" message is shown on the status line, display the trace by selecting:

Analysis, Display

Type -7 into the starting state field and 8 into the ending state field, and press **Enter**. The resulting trace will be similar to the display which follows.

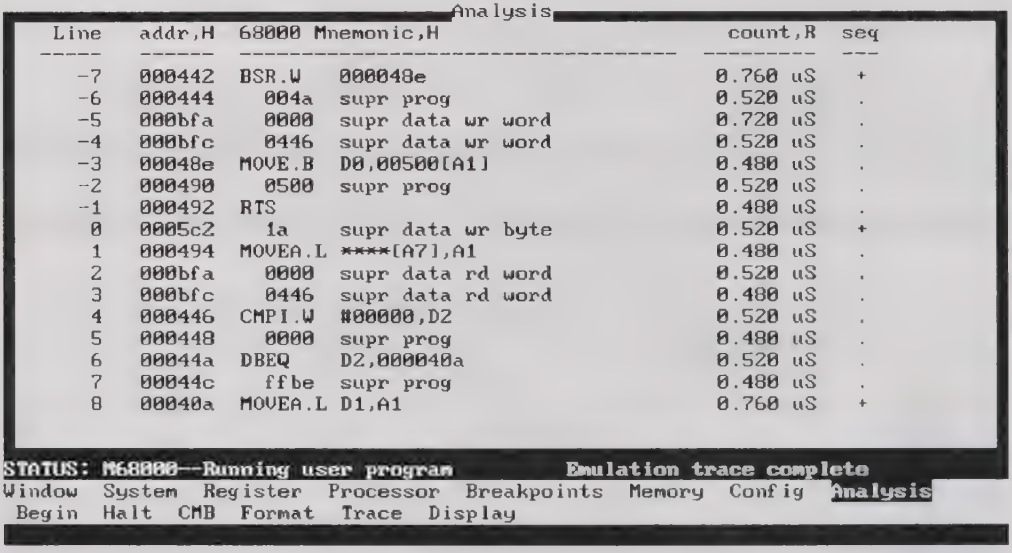
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
-7 000442 BSR.W 000048e 0.760 uS +
-6 000444 004a supr prog 0.520 uS .
-5 000bfa 0000 supr data wr word 0.720 uS .
-4 000bfc 0446 supr data wr word 0.520 uS .
-3 00048e MOVE.B D0,00500[A1] 0.480 uS .
-2 000490 0500 supr prog 0.520 uS .
-1 000492 RTS 0.480 uS .
0 0005c2 1a supr data wr byte 0.520 uS +
1 000494 MOVEA.L ****[A7],A1 0.480 uS .
2 000bfa 0000 supr data rd word 0.520 uS .
3 000bfc 0446 supr data rd word 0.480 uS .
4 000446 CMPI.W #00000,D2 0.520 uS .
5 000448 0000 supr prog 0.480 uS .
6 00044a DBEQ D2,000040a 0.520 uS .
7 00044c ffbe supr prog 0.480 uS .
8 00040a MOVEA.L D1,A1 0.760 uS +
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

Using Branches "Per Level"

Selecting branches "per level" in the trace specification gives you access to the full power and flexibility of the analyzer. Branches per level are used when you need to trace more complicated conditions.

There is a "bug" in this chapter's sample program. Occasionally, after the 256 bytes of the RESULTS area have been sorted by the QSORT subroutine, you will see a byte out of order in the last eight or so bytes of the area. You can see what happens by setting software breakpoints before and after the QSORT routine is executed, running the program, and displaying memory.

First of all, break to the monitor by selecting:

```
Processor, Break
```

Now, define a keystroke sequence macro which will:

- Set a breakpoint at the beginning of the QSORT subroutine.
- Run the program until that breakpoint is hit (so you know the contents in the RESULTS area are about to be sorted).
- Set another breakpoint at the AGAIN address.
- Run the program until the AGAIN address is hit (the contents of the RESULTS area should be sorted at this point).
- Display the contents of the results area.

To enter a keystroke macro, select:

```
Config, Key_Macro
```

The cursor is now in the field which defines the key that executes the keystroke macro. Use the **Tab** key to select F3. Leave **ESC** as the key used to quit the keystroke sequence, and position the cursor to the keystroke sequence field and type:

```
bssQSORT
```

and press **Enter**. Now type:

```
pgpbssAGAIN
```

and press **Enter**. Continue typing:

```
pgpmdbRESULTS..RESULTS+0ffh
```

and press **Enter**. Terminate the kestroke macro by pressing **ESC**.

Before executing the F3 keystroke macro, define breakpoints at QSORT and AGAIN by selecting:

```
Breakpoints, Add
```

Type in "QSORT;AGAIN" into the breakpoint addresses field, and press **Enter**. When you add breakpoints, they are also set. Because breakpoints should be cleared when you execute the keystroke macro, select:

```
Breakpoints, Clear, All
```

Now, execute the keystroke macro by pressing F3, and press **CTRL-Z** to zoom the emulation memory display window.

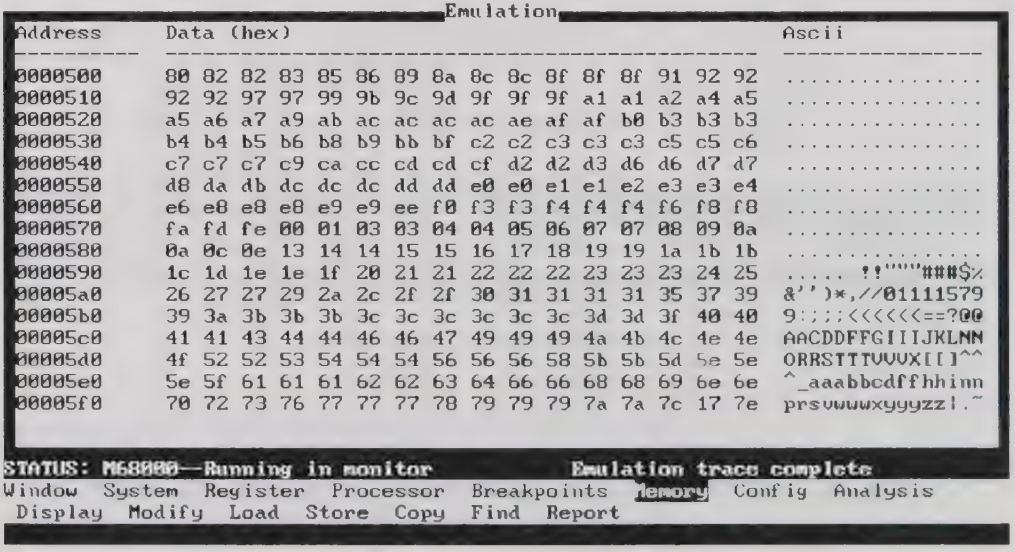

Look carefully at the last several bytes of the RESULTS area. You may notice that a byte is out of order. If not, press F3 and look at

the display again. Sometimes, the program seems to work correctly; other times, you will see a byte out of order.

The memory display shows that the QSORT routine works for the most part, which makes it look like the problem occurs on the final write to the RESULTS area. To verify this, set up the sequencer to trigger on any event, store only the address following the return from QSORT (to the main program), and prestore writes to the last eight bytes of the RESULTS area. To do this, modify the trace specification by selecting:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-9.

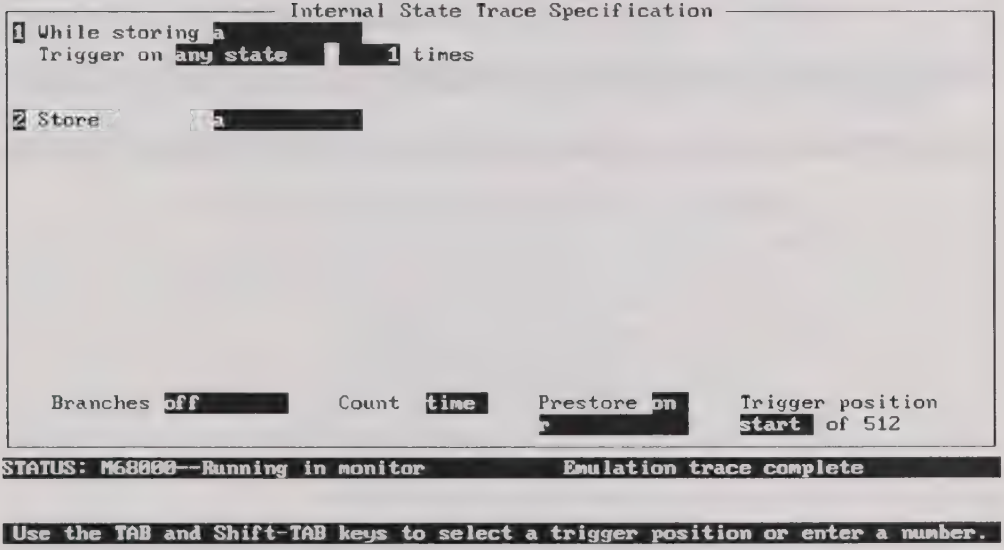
Internal State Trace Specification
1 While storing a
Trigger on any state 1 times
2 Store a
Branches off
Count time
Prestore on
Trigger position
start of 512
STATUS: M68000--Running in monitor
Emulation trace complete
Use the TAB and Shift-TAB keys to select a trigger position or enter a number.

Figure 3-9. Tracing Last Write to RESULTS Area

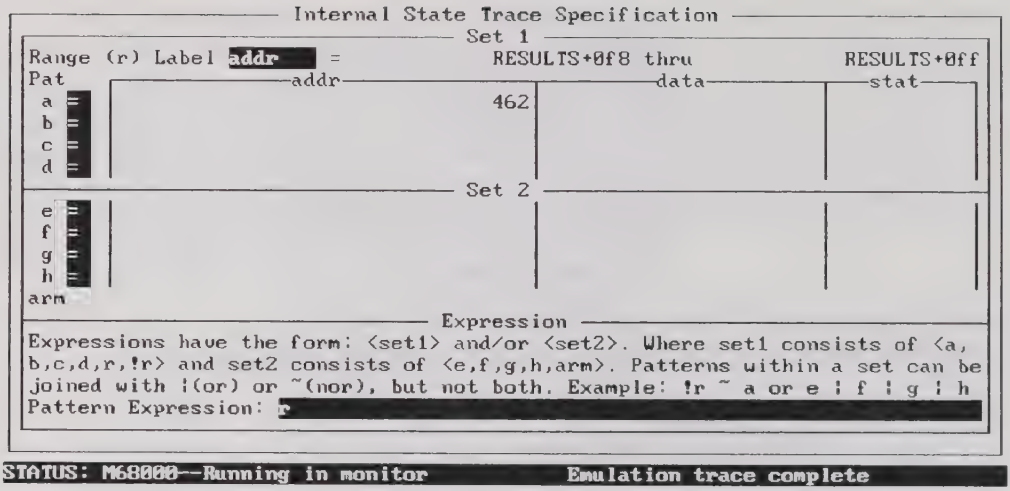

Figure 3-9. Tracing Last Write to RESULTS (Cont'd)

To begin the trace, select:

```
Processor, Go, Pc
Analysis, Begin
```

After the "Trace complete" message is shown on the status line, display the trace by selecting the following commands:

```
Window, Zoom
```

Use the **Tab** key to select the "Analysis" window, and press **Enter**. Now to display the trace, select:

```
Analysis, Display
```

Enter the first state to display in the starting state field, and the starting state plus 15 into the ending state field, and press **Enter**. The display will be similar to the following display.

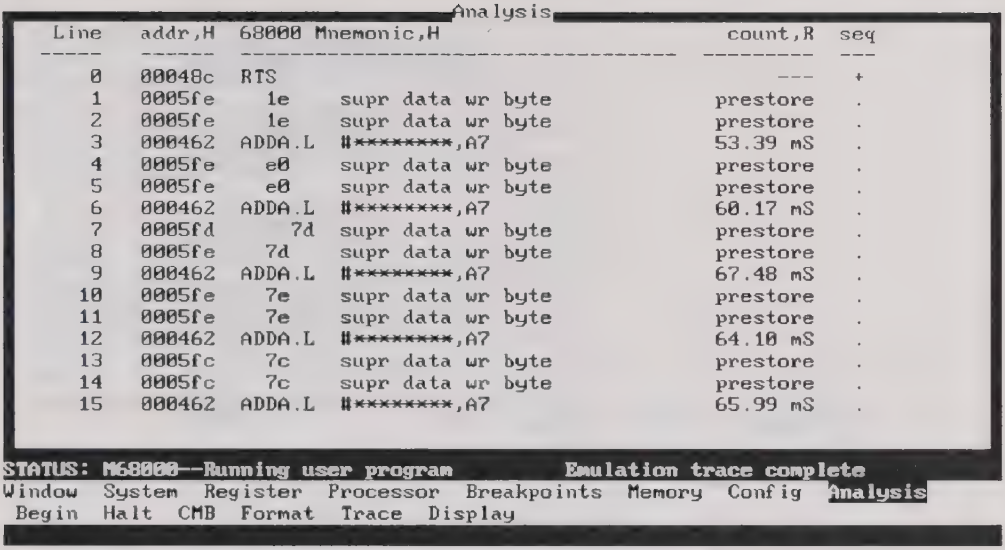
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
0 00048c RTS --- +
1 0005fe 1e supr data wr byte prestore .
2 0005fe 1e supr data wr byte prestore .
3 000462 ADDA.L #********,A7 53.39 mS .
4 0005fe e0 supr data wr byte prestore .
5 0005fe e0 supr data wr byte prestore .
6 000462 ADDA.L #********,A7 60.17 mS .
7 0005fd 7d supr data wr byte prestore .
8 0005fe 7d supr data wr byte prestore .
9 000462 ADDA.L #********,A7 67.48 mS .
10 0005fe 7e supr data wr byte prestore .
11 0005fe 7e supr data wr byte prestore .
12 000462 ADDA.L #********,A7 64.10 mS .
13 0005fc 7c supr data wr byte prestore .
14 0005fc 7c supr data wr byte prestore .
15 000462 ADDA.L #********,A7 65.99 mS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

From the previous trace, you see that the final writes made in the QSORT subroutine are indeed improper values for that part of the RESULTS area. Displaying additional lines of the trace shows you that it is common for bad values to be written to 5FEH. You can set up a trace to trigger on one of the bad writes to 5FEH, and store all the states which lead up to this event. The resulting trace may show you what is wrong with the program.

The sequencer specification which follows will trigger on a write of any value from 80H through 0FFH to 5FEH. The sequencer algorithm to capture the events which lead to a final QSORT write of an inappropriate value to 5FEH is listed below.

1. Search for the beginning of the QSORT routine. (The first occurrence of the INC_LOW address assures that the QSORT routine is actually entered; this eliminates prefetches of the QSORT address from being interpreted as entry into the routine.)

2. If a write of an inappropriate value (80H through 0FFH) to address 5FEH occurs, this may or may not be the trigger event -- another condition must be tested (see 3). Else, if the QSORT routine exits before a write of a bad value to 5FEH occurs, the trigger event has not occurred in this loop of the program; in this case, the sequencer should restart.

3. A write of an inappropriate value to 5FEH has occurred. If the QSORT routine exits without any other value being written to 5FEH, this is the trigger event. Else, if a write of some other value other is made to 5FEH, the previous write is not the event to trigger on, and the sequencer should go back to searching for writes of bad values to 5FEH.

To set up this trace specification, select:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-10.

Notice that the range of data values are from 8000H through 0FFFFH. Byte values are written to 5FEH, and they are written on the upper 8 bits of the bus. It doesn't matter what value is on the lower 8 bits of the bus, but don't cares are not allowed in values assigned to the range resource.

Notice also that the trigger position is changed to 502 of 512.

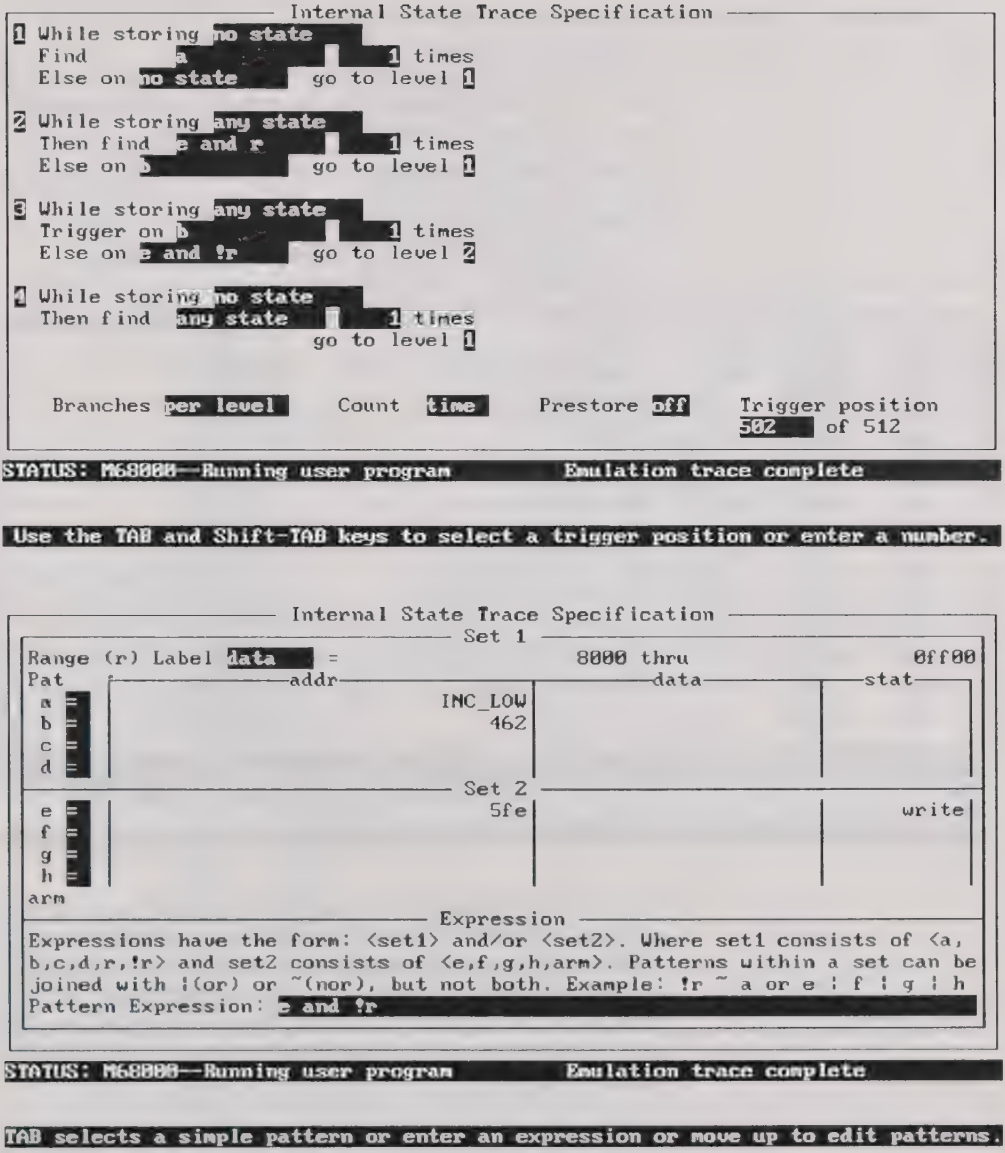
Internal State Trace Specification
1 While storing no state
Find a 1 times
Else on no state go to level 1
2 While storing any state
Then find e and r 1 times
Else on b go to level 1
3 While storing any state
Trigger on b 1 times
Else on e and !r go to level 2
4 While storing no state
Then find any state 1 times
go to level 1
Branches per level
Count time
Prestore off
Trigger position
502 of 512
STATUS: M68000--Running user program
Emulation trace complete
Use the TAB and Shift-TAB keys to select a trigger position or enter a number.
Internal State Trace Specification
Set 1
Range (r) Label data =
8000 thru
0ff00
Pat
addr
data
stat
a
b
c
d
INC_LOW
462
Set 2
e
f
g
h
arm
5fe
write
Expression
Expressions have the form: <set1> and/or <set2>. Where set1 consists of <a, b,c,d,r,!r> and set2 consists of <e,f,g,h,arm>. Patterns within a set can be joined with |(or) or ~(nor), but not both. Example: !r ~ a or e | f | g | h
Pattern Expression: e and !r
STATUS: M68000--Running user program
Emulation trace complete
TAB selects a simple pattern or enter an expression or move up to edit patterns.

Figure 3-10. Branches "Per Level" Specification

To begin the trace, select:

```
Analysis, Begin
```

After the "Trace complete" message is shown on the status line, display the trace by selecting:

```
Analysis, Display
```

Display all the lines in the trace. After the trace is displayed, use the **PgUp** to find the sequence branch prior to the trigger.

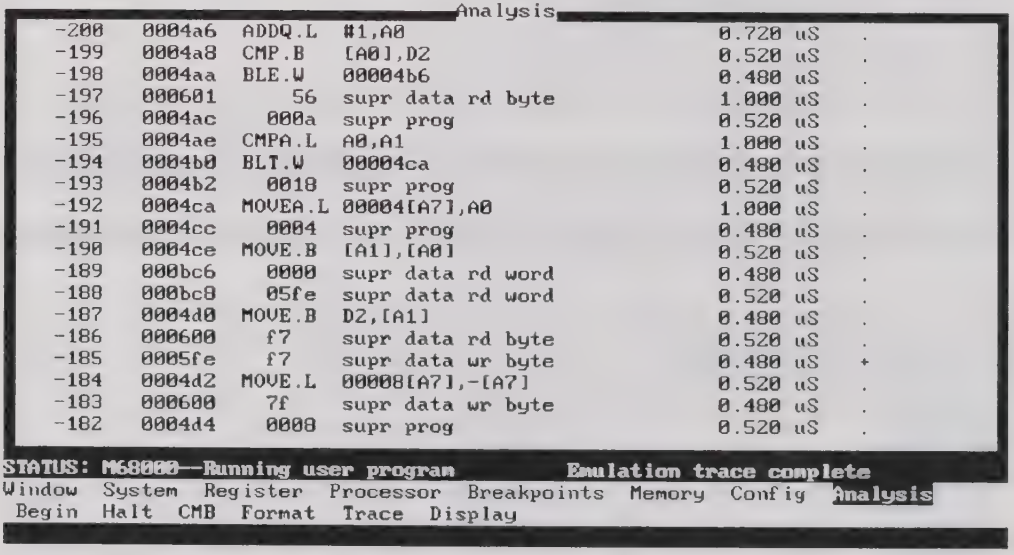
Analysis
-200 0004a6 ADDQ.L #1,A0 0.720 uS .
-199 0004a8 CMP.B [A0],D2 0.520 uS .
-198 0004aa BLE.W 00004b6 0.480 uS .
-197 000601 56 supr data rd byte 1.000 uS .
-196 0004ac 000a supr prog 0.520 uS .
-195 0004ae CMPA.L A0,A1 1.000 uS .
-194 0004b0 BLT.W 00004ca 0.480 uS .
-193 0004b2 0018 supr prog 0.520 uS .
-192 0004ca MOVEA.L 00004[A7],A0 1.000 uS .
-191 0004cc 0004 supr prog 0.480 uS .
-190 0004ce MOVE.B [A1],[A0] 0.520 uS .
-189 000bc6 0000 supr data rd word 0.480 uS .
-188 000bc8 05fe supr data rd word 0.520 uS .
-187 0004d0 MOVE.B D2,[A1] 0.480 uS .
-186 000600 f7 supr data rd byte 0.520 uS .
-185 0005fe f7 supr data wr byte 0.480 uS +
-184 0004d2 MOVE.L 00008[A7],-[A7] 0.520 uS .
-183 000600 7f supr data wr byte 0.480 uS .
-182 0004d4 0008 supr prog 0.520 uS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

From the trace display above, you can see that the instructions at addresses 4CAH and 4CEH are the ones that cause the problems. These are the instructions associated with the OUT section of the QSORT subroutine. They are used to swap the dividing value and the value at the high index after a segment of the list to be sorted is split. You can see that the high index is address 600H, which it should never be.

Looking back at the program you see that the increment of the high index so that DEC_HIGH works the first time through will cause problems when the BLT OUT instruction gets executed in

the INC_LOW loop. Changing the program in the following manner will fix the problem (notice the instructions surrounded by the "#" character).

```
*************************************************
* The QSORT subroutine is passed (on the stack)
* the high and low addresses of an area of bytes
* to be sorted.
*************************************************
QSORT           MOVE.L  8[A7],A1  ; A1 = high index.
                MOVE.L  4[A7],A0  ; A0 = low index.
;-----------------------------------------------
; The following section splits the area to be sorted
; into two areas.  QSORT will be called to sort each
; of these smaller areas.
;
; If high index is less than low index, then sort
; is done.
;-----------------------------------------------
OVER            CMPA.L  A0,A1
                BLE     DONE
;-----------------------------------------------
; D2 = dividing value (from low index).
;-----------------------------------------------
                MOVE.B  [A0],D2
;-----------------------------------------------
; (Increment allows DEC_HIGH loop to work first
; time through.)
;-----------------------------------------------
;#### The following instruction is deleted. ######
;               ADDQ.L  #1,A1
;################################################
;-----------------------------------------------
; Move low index up until it points to a value
; greater than the dividing value.
;-----------------------------------------------
INC_LOW         ADDQ.L  #1,A0
                CMP.B   [A0],D2
;#### The following instruction is changed. ######
;               BLE     DEC_HIGH
;################################################
                BLE     NEXT
                CMPA.L  A0,A1
                BLT     OUT
                BRA.B   INC_LOW
;#### The following instruction is new. ##########
NEXT            ADDQ.L  #1,A1
;################################################
;-----------------------------------------------
; Move high index down until it points to a value
; less than or equal to the dividing value.
;-----------------------------------------------
DEC_HIGH        SUBQ.L  #1,A1
                CMP.B   [A1],D2
                BLT     DEC_HIGH
;-----------------------------------------------
; If high index is less than or equal to low index,
; the area is split; do not swap values.
;-----------------------------------------------
                CMPA.L  A0,A1
                BLT     OUT
```

```
;-------------------------------------------------
; If high index is greater than low index, swap
; values and move indexes again.
;-------------------------------------------------
                MOVE.B  [A0],D3
                MOVE.B  [A1],[A0]
                MOVE.B  D3,[A1]
                BRA.B   INC_LOW
;-------------------------------------------------
; A0 = low address (needed to swap dividing value).
;-------------------------------------------------
OUT             MOVE.L  4[A7],A0)
;-------------------------------------------------
; Swap dividing value and high index value.
;-------------------------------------------------
                MOVE.B  [A1],[A0]
                MOVE.B  D2,[A1]
;-------------------------------------------------
; The area is now split into two smaller areas.
; The last high index value is the middle of the
; two areas.  The high and low addresses for the
; second QSORT call are pushed first.
;-------------------------------------------------
                MOVE.L  8[A7],-[A7]  ; Push high.
                ADDQ.L  #1,A1
                MOVE.L  A1,-[A7]  ; Push middle + 1.
                SUBQ.L  #2,A1
                MOVE.L  A1,-[A7]  ; Push middle - 1.
                MOVE.L  A0,-[A7]  ; Push low.
                BSR.W   QSORT
;-------------------------------------------------
; Increment stack pointer after call.
;-------------------------------------------------
                ADDA.L  #8,A7
                BSR.W   QSORT
                ADDA.L  #8,A7
DONE            RTS
```

Storing "Windows" of Program Execution

One common use for branches "per level" is to trace "windows" of execution. If you're only interested in the execution that occurs between two instructions, you may not want the trace to contain states that occur before and after.

Sequence levels are paired in a typical windowing trace specification. The first sequence level searches for the window enable state, and no states are stored while searching. When the window enable state is found, the analyzer proceeds to the second

sequence level which stores the states you're interested in while searching for the window disable state.

If you want to store the window before and after the trigger, use two sets of paired sequence levels: one window enable/disable pair of sequence terms before the trigger, and the another disable/enable pair after the trigger (see figure 3-11). Notice that the order of the second sequence level pair is swapped; if you find the trigger while searching for the window disable state, you want the analyzer to branch to a level that continues to search for the disable state.

For example, to trace only the execution of the sample program's RAND subroutine, you would set up the sequencer specification so that the execution of the first instruction in the RAND subroutine is the window enable state and the address of the RAND subroutine's "return" instruction is the window disable state.

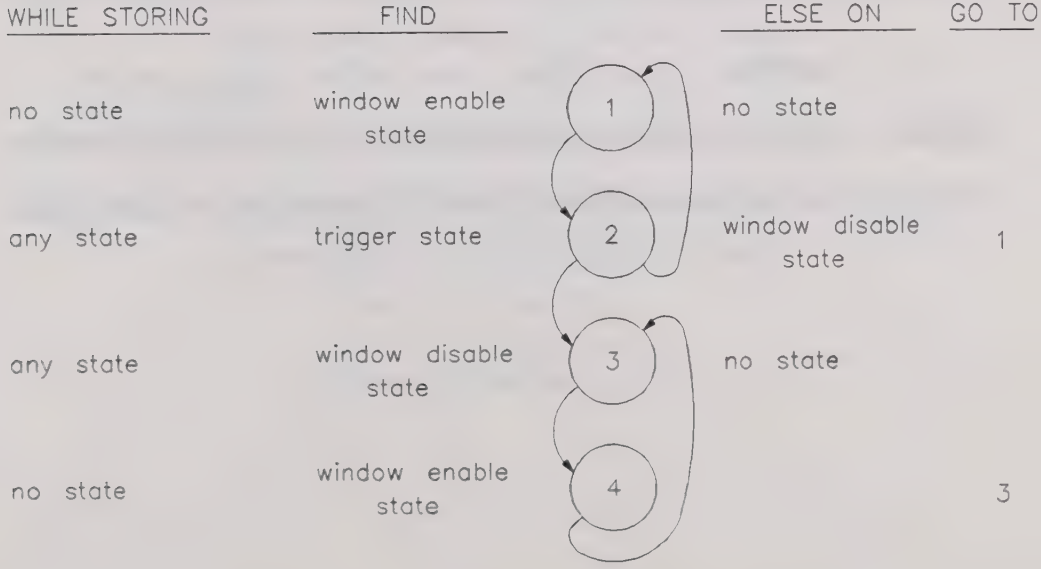

Figure 3-11. Storing a Window of Program Execution

Suppose also that you wish to trigger on the INC_LOW instruction of the QSORT routine.

To set up this trace specification, select:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-12.

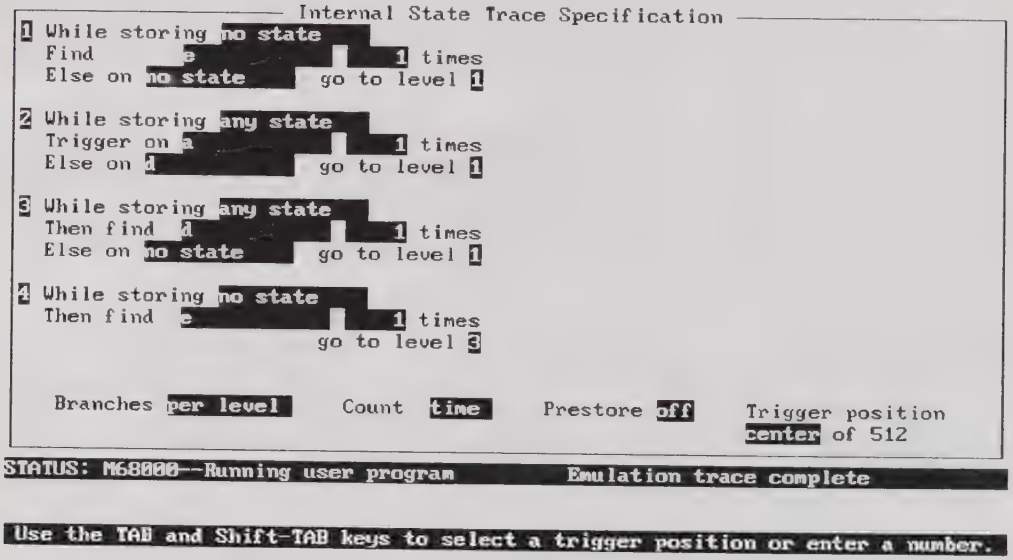

Figure 3-12. Store "Window" Trace Specification

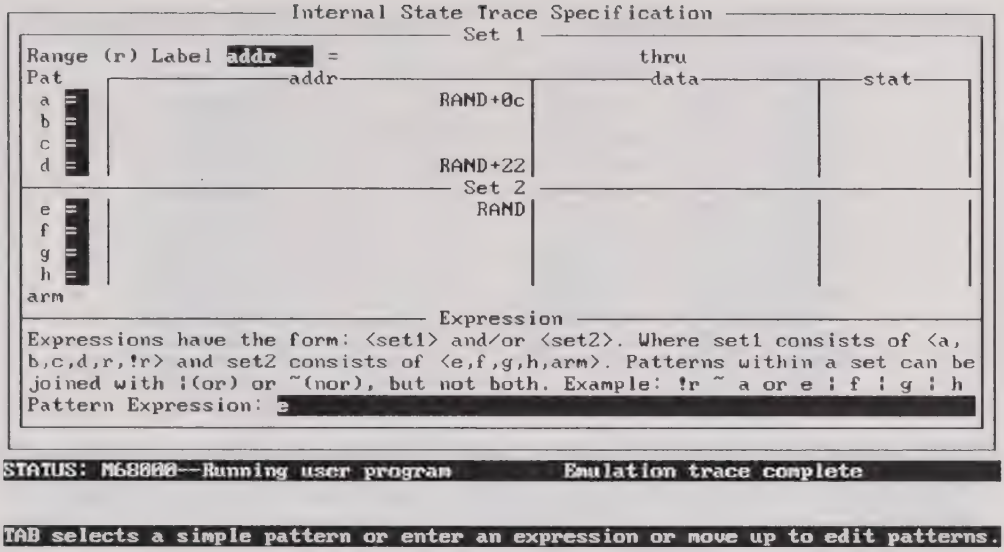

Figure 3-12. Store "Window" Trace Spec. (Cont'd)

To begin the trace, select:

```
Analysis, Begin
```

After the "Trace complete" message is shown on the status line, display the trace by selecting:

```
Analysis, Display
```

Enter -8 in the starting state field and 7 in the ending state field to display the following lines of the trace.

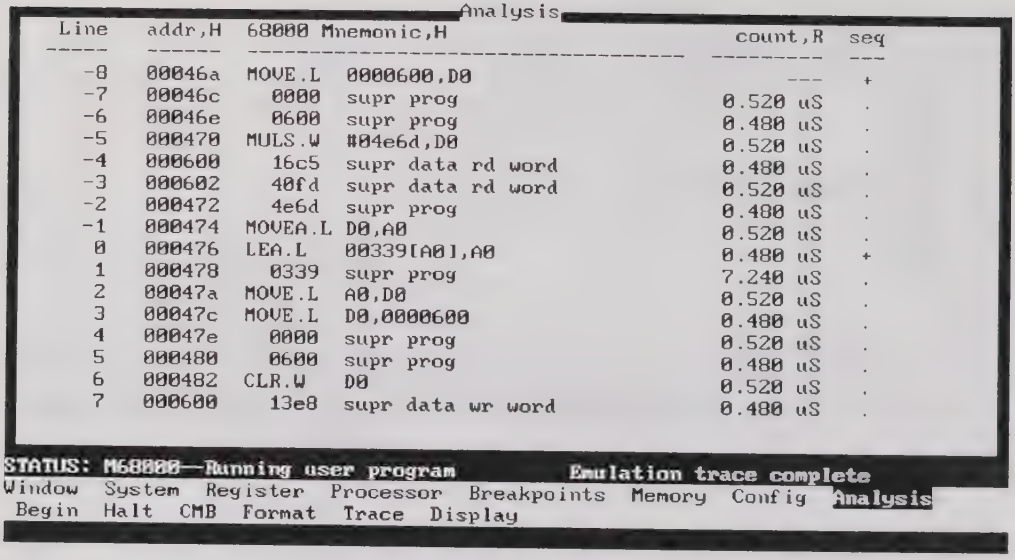
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
-8 00046a MOVE.L 0000600,D0 --- +
-7 00046c 0000 supr prog 0.520 uS .
-6 00046e 0600 supr prog 0.480 uS .
-5 000470 MULS.W #04e6d,D0 0.520 uS .
-4 000600 16c5 supr data rd word 0.480 uS .
-3 000602 40fd supr data rd word 0.520 uS .
-2 000472 4e6d supr prog 0.480 uS .
-1 000474 MOVEA.L D0,A0 0.520 uS .
0 000476 LEA.L 00339[A0],A0 0.480 uS +
1 000478 0339 supr prog 7.240 uS .
2 00047a MOVE.L A0,D0 0.520 uS .
3 00047c MOVE.L D0,0000600 0.480 uS .
4 00047e 0000 supr prog 0.520 uS .
5 000480 0600 supr prog 0.480 uS .
6 000482 CLR.W D0 0.520 uS .
7 000600 13e8 supr data wr word 0.480 uS .
STATUS: M68000—Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

Display more lines of the trace by selecting:

Analysis, Display

Press the Enter key twice to select the automatically incremented starting state and ending state numbers to display the following lines of the trace.

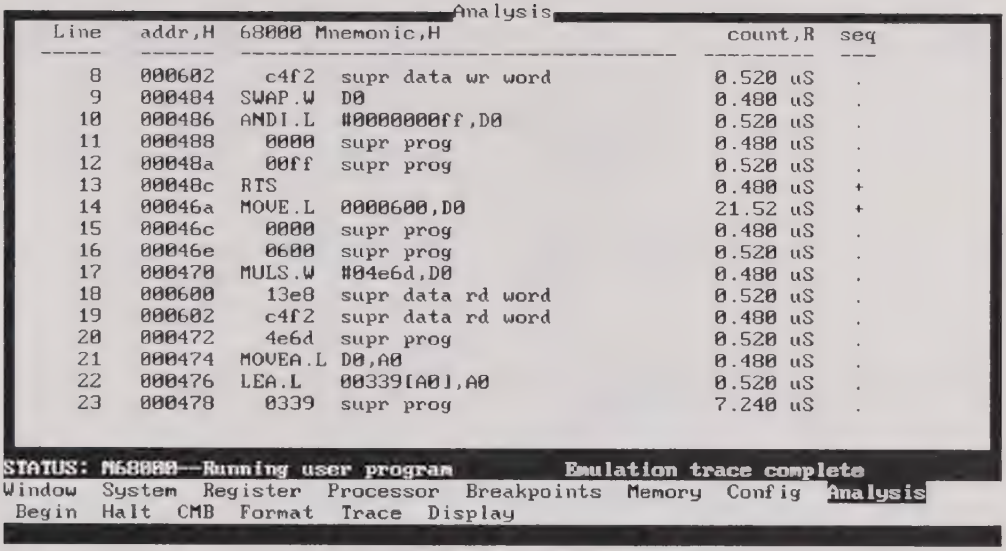
Analysis
Line addr,H 68000 Mnemonic,H count,R seq
8 000602 c4f2 supr data wr word 0.520 uS .
9 000484 SWAP.W D0 0.480 uS .
10 000486 ANDI.L #0000000ff,D0 0.520 uS .
11 000488 0000 supr prog 0.480 uS .
12 00048a 00ff supr prog 0.520 uS .
13 00048c RTS 0.480 uS +
14 00046a MOVE.L 0000600,D0 21.52 uS +
15 00046c 0000 supr prog 0.480 uS .
16 00046e 0600 supr prog 0.520 uS .
17 000470 MULS.W #04e6d,D0 0.480 uS .
18 000600 13e8 supr data rd word 0.520 uS .
19 000602 c4f2 supr data rd word 0.480 uS .
20 000472 4e6d supr prog 0.520 uS .
21 000474 MOVEA.L D0,A0 0.480 uS .
22 000476 LEA.L 00339[A0],A0 0.520 uS .
23 000478 0339 supr prog 7.240 uS .
STATUS: M68000--Running user program Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB Format Trace Display

Excluding Windows of Program Execution

You can use the sequencer to exclude windows of program execution by switching the storage qualifiers on the enable and disable sequence levels (see figure 3-13). In other words, store the states you're interested in while searching for the enable state and do not store states while searching for the disable state.

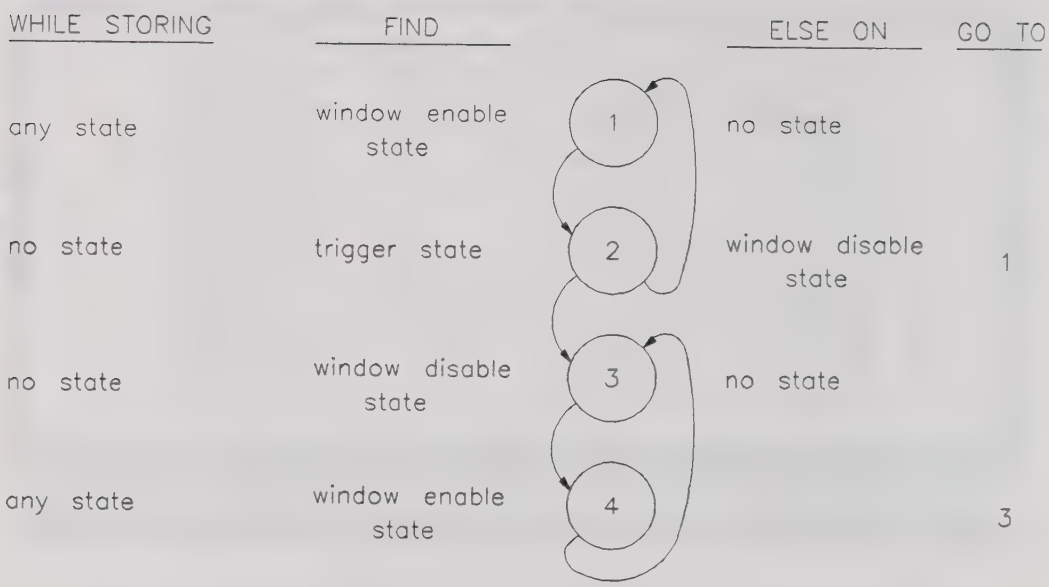

Figure 3-13. Excluding Windows of Program Execution

Triggering on a State Outside the Window

In the previous example, the trigger state occurred inside the window, between two sequence levels that searched for the window enable state. You can set up a trace specification that triggers on a state outside the window by having the trigger occur between two sequence levels that search for the window enable state as shown in figure 3-14.

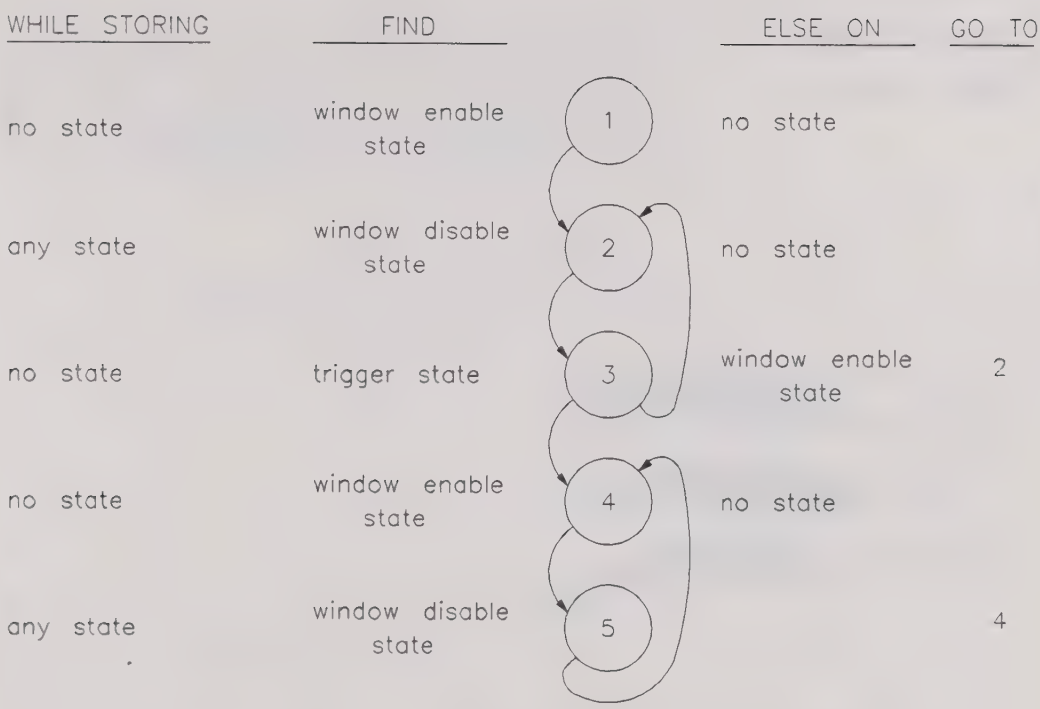

Figure 3-14. Triggering on a State Outside the Window

Using Multiple Trigger Levels

It is possible for the analyzer to trigger when finding a state in any sequence level but the last because **the trigger point is not actually when the analyzer finds the state specified in the "Trigger on" field; rather the trigger point is the *first entry* of the sequence level following the level containing the "Trigger on" field.**

To illustrate this point, select:

```
Analysis, Trace, Modify
```

Modify the trace specification as shown in figure 3-15.

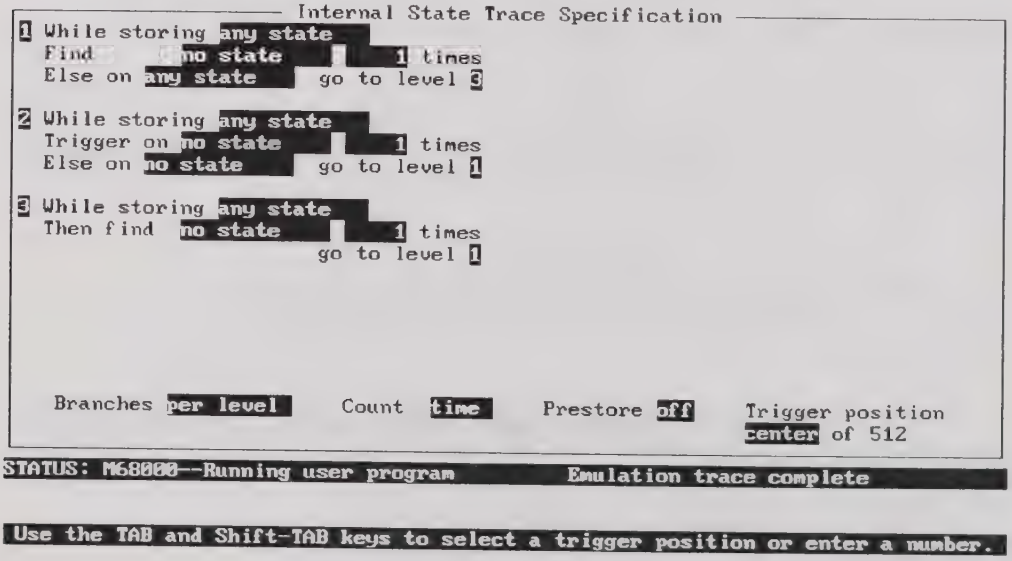
Internal State Trace Specification
1 While storing any state
Find no state 1 times
Else on any state go to level 3
2 While storing any state
Trigger on no state 1 times
Else on no state go to level 1
3 While storing any state
Then find no state 1 times
go to level 1
Branches per level
Count time
Prestore off
Trigger position
center of 512
STATUS: M68000--Running user program
Emulation trace complete
Use the TAB and Shift-TAB keys to select a trigger position or enter a number.

Figure 3-15. Using Multiple Trigger Levels

You might think that because the "Trigger on" field contains "no state" the analyzer will never trigger. But, according to the statement above, the analyzer will trigger because the branch from sequence level one is to the level following the one containing "Trigger on". To verify that this is true, select:

```
Analysis, Begin
```

The "Trace complete" message is shown on the status line, indicating that the analyzer has indeed triggered.

Notes

Using the External Analyzer

Introduction

Most HP 64700 Series emulators may be ordered with an external analyzer. The external analyzer provides 16 external data channels. These data channels allow you to capture activity on signals external to the emulator, typically other target system signals. The external analyzer may be configured as an extension to the internal emulation analyzer, as an independent external state analyzer, or as an independent external timing analyzer.

The PC Interface is different in the following ways when an external analyzer is present:

1. The "Analysis System" command is available so that you can select the external analyzer mode.

2. The "Internal" and "External" command options are present so that you can specify, when the external analyzer is configured as an independent analyzer, which analyzer the command is for.

3. The "Analysis Format" screen provides fields for selecting the threshold voltages for the external trace signals, shows the activity on the external trace signals, and allows you to define trace labels for the external analyzer trace signals.

4. The predefined "xbits" external analyzer trace label appears in the "Analysis Format" screen and in the trace specification screen.

Before You Can Use the External Analyzer

There are several things to do before you can use the external analyzer; these things are listed below and explained in the following paragraphs.

- Assemble the analyzer probe.
- Connect the probe to the emulator.
- Connect the probe wires to the target system.
- Specify the threshold voltages for the external probe signals.
- Label the external trace signals.
- Select the external analyzer mode.

Assembling the Analyzer Probe

The analyzer probe is a two-piece assembly, consisting of ribbon cable and 18 probe wires (16 data channels and the J and K clock inputs) attached to a connector. Either end of the ribbon cable may be connected to the 18 wire connector, and the connectors are keyed so they may only be attached one way. Align the key of the ribbon cable connector with the slot in the 18 wire connector, and firmly press the connectors together. (See figure 4-1.)

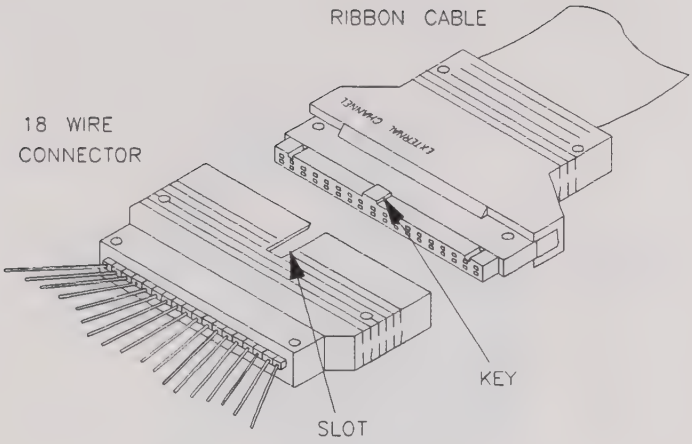

Figure 4-1. Assembling the Analyzer Probe

Each of the 18 probe wires has a signal and a ground connection. Each probe wire is labeled for easy identification. Thirty-six grabbers are provided for the signal and ground connections of each of the 18 probe wires. The signal and ground connections are attached to the pin in the grabber handle. (See figure 4-2.)

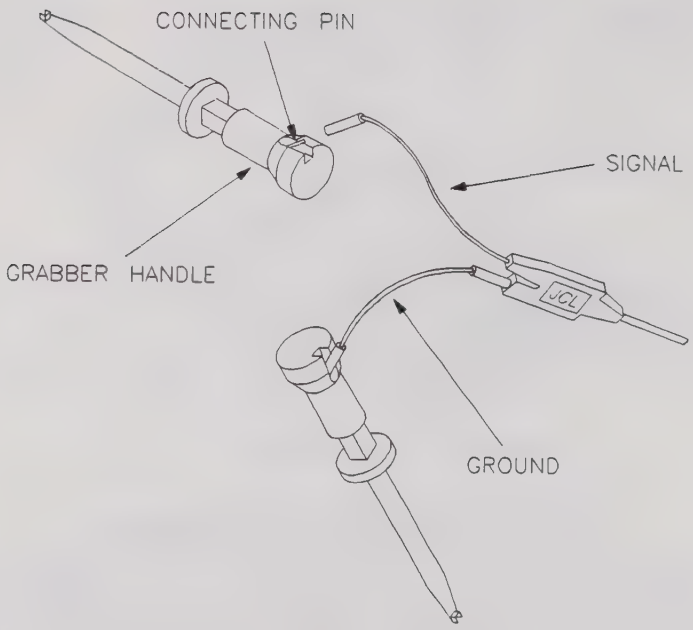

Figure 4-2. Attaching Grabbers to Probe Wires

Connecting the Probe to the Emulator

The external analyzer probe is attached to a connector under the snap-on cover in the front upper right corner of the emulator. Remove the snap-on cover by pressing the side tabs toward the center of the cover; then, pull the cover out. (See figure 4-3.)

Note

Check for bent connector pins before connecting the analyzer probe to the emulator.

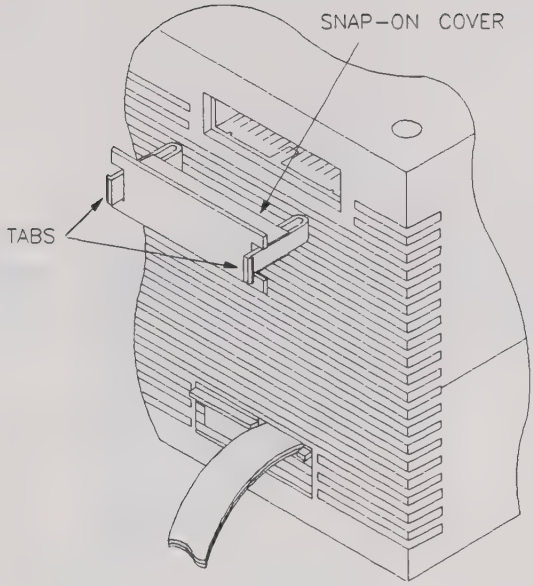

Figure 4-3. Removing Cover to Emulator Connector

Each end of the ribbon cable connector is keyed so that it can be connected to the emulator in only one way. Align the key of the ribbon cable connector with the slot in the emulator connector, and gently press the ribbon cable connector into the emulator connector. (See figure 4-4.)

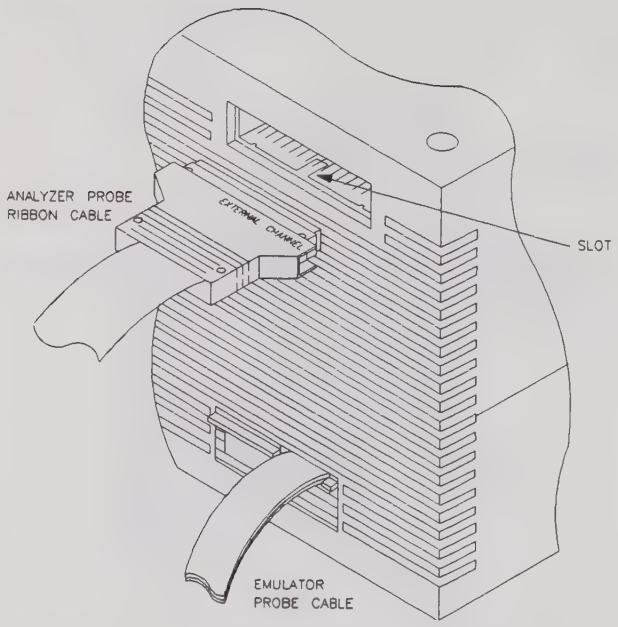

Figure 4-4. Connecting the Probe to the Emulator

Caution

Turn OFF target system power before connecting analyzer probe wires to the target system. The probe grabbers are difficult to handle with precision, and it is extremely easy to short the pins of a chip (or other connectors which are close together) with the probe wire while trying to connect it.

Connecting Probe Wires to the Target System

You can connect the grabbers to pins, connectors, wires, etc., in the target system. Pull the hilt of the grabber towards the back of the grabber handle to uncover the wire hook. When the wire hook is around the desired pin or connector, release the hilt to allow the tension of the grabber spring to hold the connection. (See figure 4-5.)

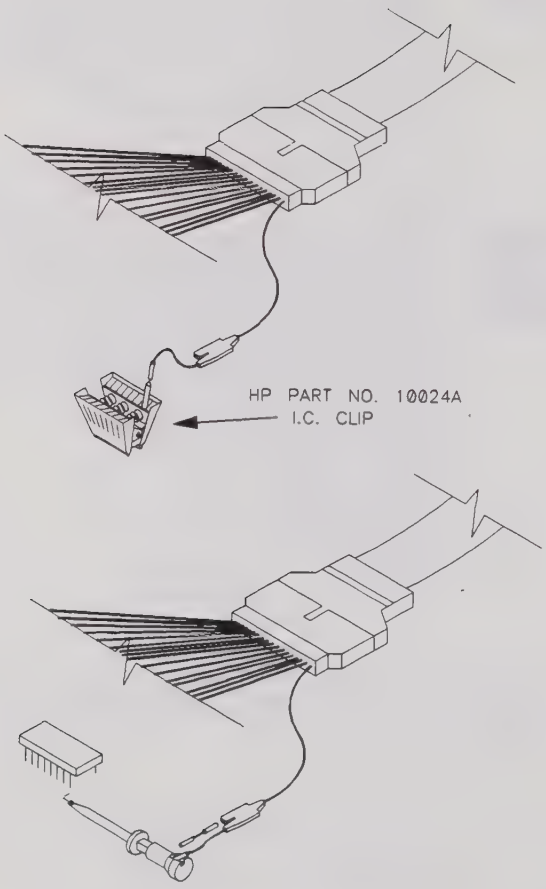

Figure 4-5. Connecting the Probe to the Target System

Specifying Threshold Voltages & Defining Labels

To specify threshold voltages for the external probe signals, select:

```
Analysis, Format, Internal
```

An example format specification display is shown in figure 4-6. This screen allows you to specify threshold voltages, informs you of activity on the external analyzer trace signals, and allows you to define external analyzer labels.

When you are done specifying the threshold voltages and defining labels, press **End** and **Enter** to save your specifications. To exit without making changes to this label configuration, press **Esc**.

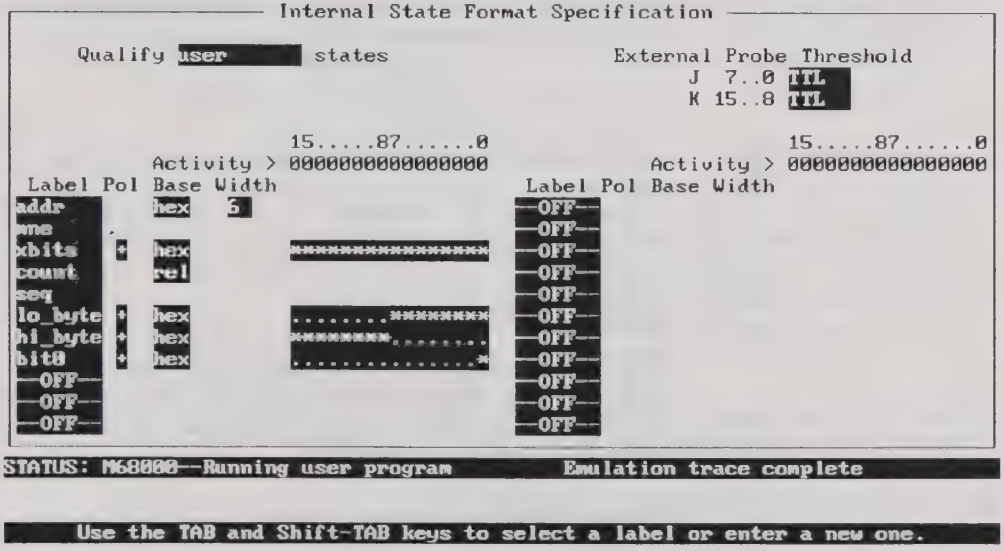

Figure 4-6. Analysis Format Display

Specifying Threshold Voltages

The external probe signals are divided into two groups, the lower byte (channels 0 through 7), and the upper byte (channels 8 through 15). Threshold voltage levels can be specified for each group. When the cursor is in one of the threshold voltage fields, you can use the **Tab** key to select one of the following values, or you can type in the voltage:

TTL	1.4 volts.
CMOS	2.5 volts.
ECL	-1.3 volts.
<number>	You can type in a threshold voltage. Voltages may be from -6.4 volts to 6.35 volts with a 50 mV resolution.

Note

The threshold settings will not take effect until the next time you begin a trace.

External Trace Signal Activity

This line of the display shows the activity on the external trace signals. A trace signal is specified as low (0) when it is below the threshold voltage, high (1) when it is above the threshold voltage, or moving (double headed arrows).

Defining External Analyzer Labels

The format specification screen allows you to define external analyzer labels. When you initially enter the PC Interface, one label, "xbits", is predefined. The "xbits" label includes all 16 external channels as specified by asterisks in the label value field.

You can define labels by moving the cursor to one of the label fields, typing in a label name (embedded spaces are not allowed), and pressing **Enter**. Once you have entered a label name, a label

value field appears. The label value field allows you to specify the external channels that make up the label. The label value field allows you to mask off unused or unimportant external channels.

New "label value" fields contain all periods. This means that the label does not currently represent any timing signals (all external channels are masked). To specify channels that the label is to represent, simply move the cursor to the appropriate column, and either use the **Tab** key to select an asterisk (include signal in the label) or type the asterisk key.

In figure 4-6, the external analyzer labels "lo_byte", "hi_byte", and "bit0" are user-defined.

Selecting the External Analyzer Mode

The external analyzer may be configured as an extension to the emulation analyzer, as an independent state analyzer, or as an independent timing analyzer. To specify the external analyzer mode, select:

```
Anlysis, System
```

Press the **Tab** key to scroll through the various options:

aligned with internal
: In this mode, the external analyzer becomes an extension of the internal emulation analyzer. In other words, they operate as one analyzer. The external trace signals may be used to capture target system signals synchronized with the emulation clock.

external state analyzer
: In this mode, the external analyzer operates as an independent state analyzer. The independent state analyzer is identical to the emulation analyzer, except that only 16 bits of analysis are available. Your HP 64700 Series emulator now contains two state analyzers; two sets of analyzer resources (trace memory, patterns, qualifiers, etc.) are available, one for the emulation analyzer and one for the independent state analyzer.

  When one of the independent analyzer modes is selected, you can use one analyzer to arm the

	other. You can specify the arm condition as a qualifier, perhaps as the trigger condition (cross-triggering). (Refer to the "Making Coordinated Measurements" chapter for more information on cross-triggering.)
external timing analyzer	In this mode, the external analyzer operates as an independent timing analyzer. Refer to the "Using the External Timing Analyzer" for more information.

Using the External Analyzer when Aligned with Internal

When the "aligned with internal" mode of the external analyzer is selected, it operates (from the PC Interface) as an extension to the emulation analyzer. In other words, they operate as one analyzer. External data is captured on the emulation clock as are the address, data, and status signals.

When an external analyzer is present, you may enter external data qualifiers in the trace specification, as shown in figure 4-7, by assigning values to "xbits", or to user-defined external analyzer labels such as "lo_byte", "hi_byte", or "bit0". Also, the trace display may contain additional columns showing the data captured on the external channels, as shown in figure 4-7. (You can use the CTRL and right-arrow or left-arrow keys to view columns that are beyond the width of the window.)

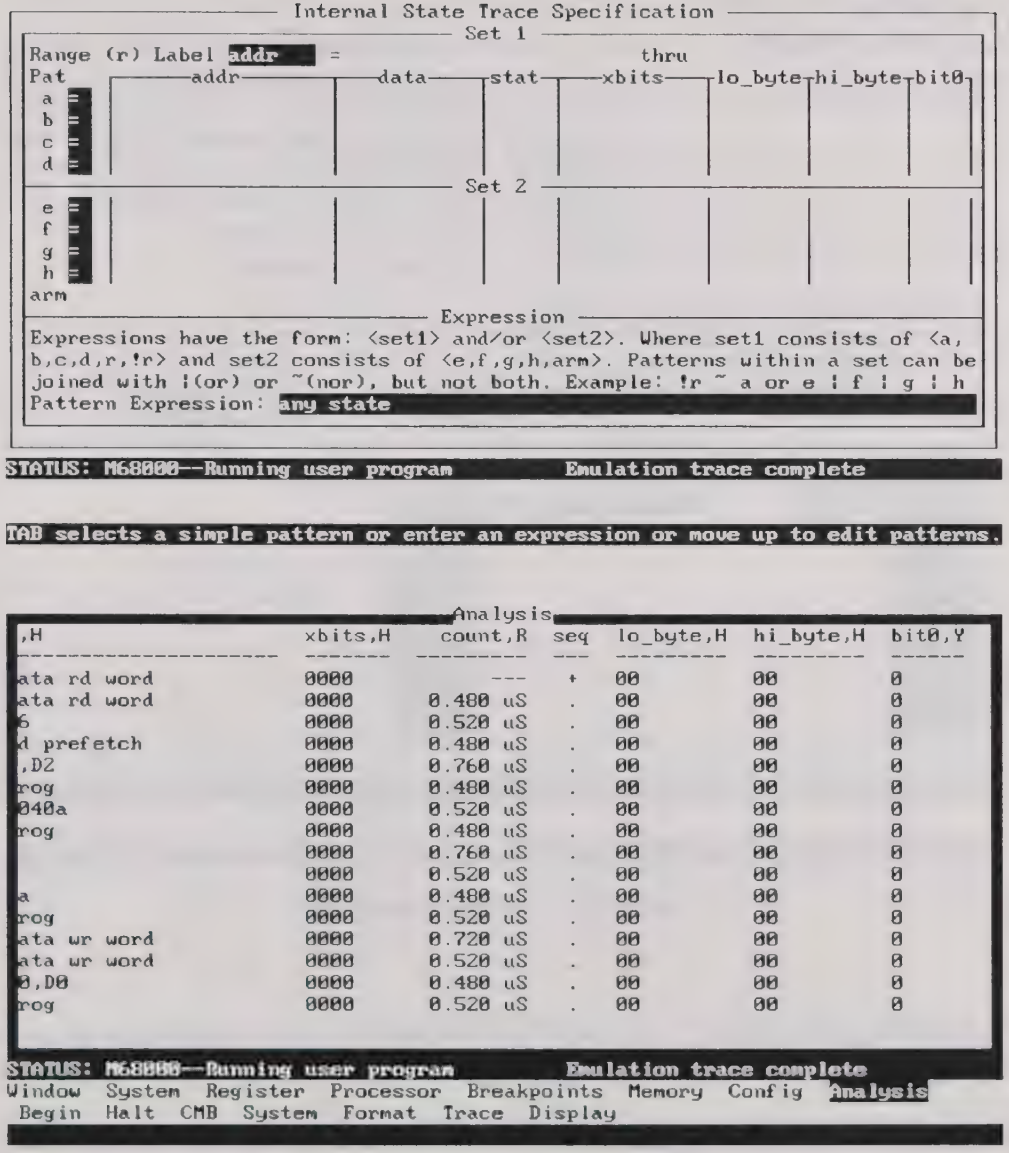
Internal State Trace Specification
Set 1
Range (r) Label addr =
thru
Pat
addr
data
stat
xbits
lo_byte
hi_byte
bit0
a
b
c
d
Set 2
e
f
g
h
arm
Expression
Expressions have the form: <set1> and/or <set2>. Where set1 consists of <a, b,c,d,r,!r> and set2 consists of <e,f,g,h,arm>. Patterns within a set can be joined with !(or) or ~(nor), but not both. Example: !r ~ a or e ! f ! g ! h
Pattern Expression: any state
STATUS: M68000--Running user program
Emulation trace complete
TAB selects a simple pattern or enter an expression or move up to edit patterns.
Analysis
,H
xbits,H
count,R
seq
lo_byte,H
hi_byte,H
bit0,Y
ata rd word 0000 --- + 00 00 0
ata rd word 0000 0.480 uS . 00 00 0
6 0000 0.520 uS . 00 00 0
d prefetch 0000 0.480 uS . 00 00 0
,D2 0000 0.760 uS . 00 00 0
rog 0000 0.480 uS . 00 00 0
040a 0000 0.520 uS . 00 00 0
rog 0000 0.480 uS . 00 00 0
0000 0.760 uS . 00 00 0
0000 0.520 uS . 00 00 0
a 0000 0.480 uS . 00 00 0
rog 0000 0.520 uS . 00 00 0
ata wr word 0000 0.720 uS . 00 00 0
ata wr word 0000 0.520 uS . 00 00 0
0,D0 0000 0.480 uS . 00 00 0
rog 0000 0.520 uS . 00 00 0
STATUS: M68000--Running user program
Emulation trace complete
Window System Register Processor Breakpoints Memory Config Analysis
Begin Halt CMB System Format Trace Display

Figure 4-7. External Data in the Trace

Using the External State Analyzer

When you select the "external state analyzer" mode, the external analyzer operates as an independent state analyzer. You use the independent state analyzer in the same way as you use the internal analyzer, except that you must select the external analyzer clock source and specify the maximum qualified clock speed. Both of these specifications are made in the external analysis format screen (see figure 4-8) which you access by selecting:

```
Analysis, Format, External
```

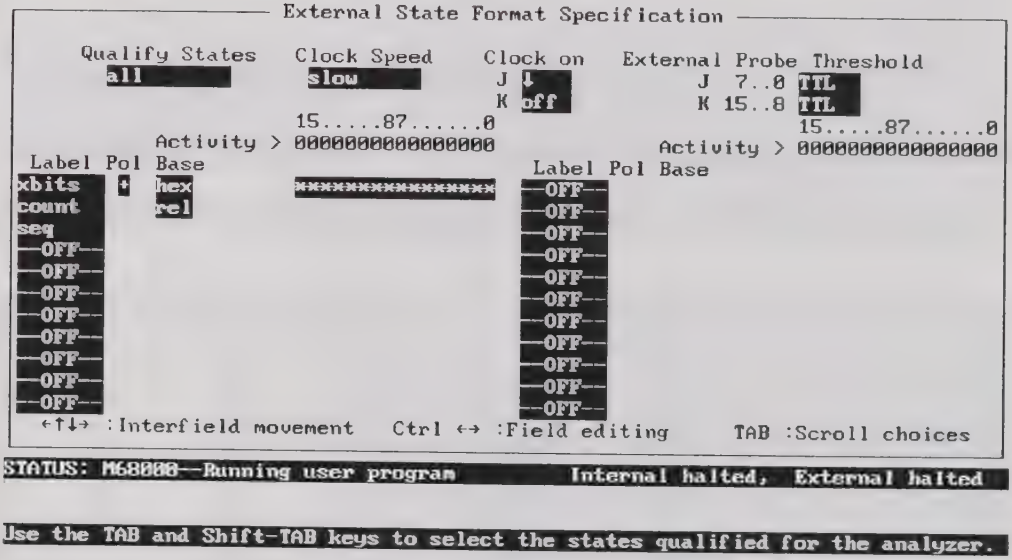

Figure 4-8. Analysis Format Display

Selecting the Clock Source

The independent state analyzer may be clocked with target system clock signals connected to the JCL and KCL external clock inputs.

Notice that there are two "Clock on" fields (see figure 4-8), one for the J signal and one for the K signal. Position the cursor in one of

these fields and press the **Tab** key repeatedly to view the following selections.

<rising edge>	Selects the rising edge of this signal as the clock.
<falling edge>	Selects the falling edge of this signal as the clock.
<both edges>	Specifies that the external analyzer be clocked on both the rising and falling edges of this signal.
high	Specifies this signal as a qualifying signal that only allows the other signal to clock the analyzer when the qualifying signal is higher than the threshold voltage (see figure 4-9).
low	Specifies this signal as a qualifying signal that only allows the other signal to clock the analyzer

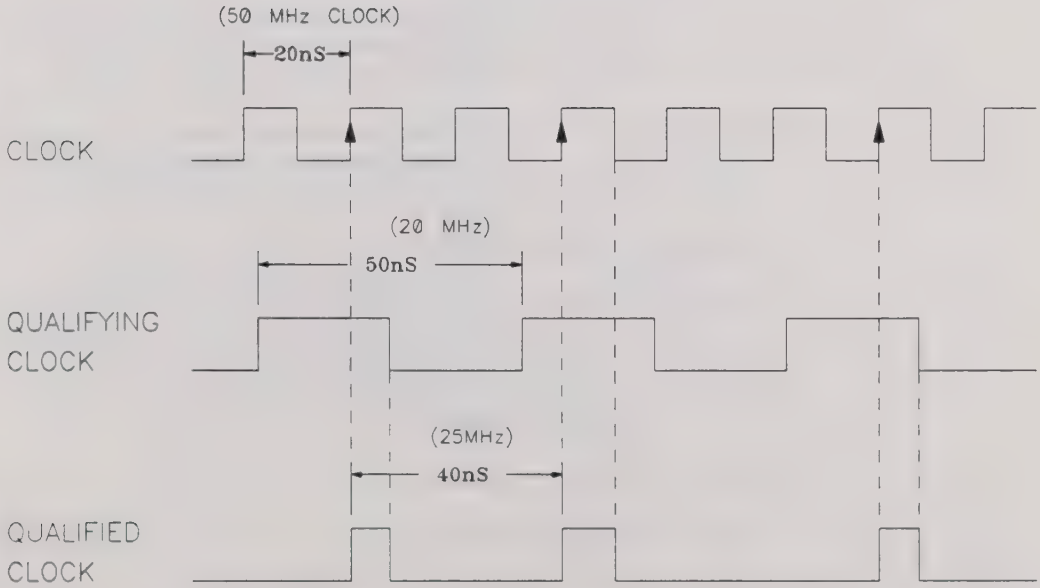

Figure 4-9. Qualified Clocks

when the qualifying signal is lower than the threshold voltage.

off	Specifies that this signal is not used.

When edges are specified for both the J and K signals, the external analyzer clocks on any of the specified edges.

Setup time for qualifying signals is approximately 20 nanoseconds. Qualifying signal hold time is approximately 5 nanoseconds.

Specifying the Maximum Qualified Clock Speed

The maximum qualified clock rate is the repetition rate of all specified clock signals (see figure 4-9). When selecting the maximum qualified clock speed of the analyzer, there are tradeoffs involving the trace count qualifier to be considered. You select the maximum qualified clock speed in the "Clock Source" field of the "Analysis Format External" screen (see figure 4-8). There are three maximum speeds that can be specified:

slow	Slow specifies a maximum qualified clock rate of 16 MHz. When "slow" is selected, there are no restrictions on the trace count qualifier.
fast	Fast specifies a maximum qualified clock rate of 20 MHz. When "fast" is selected, the trace count qualifier may be used to count states but not time.
very fast	Very fast specifies a maximum qualified clock rate of 25 MHz. When "very fast" is selected, the trace count qualifier may not be used at all (in other words, the count qualifier field in the trace specification screen must be "off").

External Analyzer Specifications

- Threshold Accuracy = +/- 50 mV.
- Threshold Voltage Range = 6 V to -6 V.
- Dynamic Range = +/- 10 V about threshold setting.
- Minimum Input Swing = 600 mV pp.
- Minimum Input Overdrive = 250 mV or 30% of threshold setting, whichever is greater.
- Absolute Maximum Input Voltage = +/- 40 V.
- Probe Input Resistance = 100K ohms +/- 2%.
- Probe Input Capacitance = approximately 8 pF.
- Maximum +5 V Probe Current = 0.650 A.
- +5 V Probe Voltage Accuracy = +5.0 +/- 5%.

External State Analyzer Specifications

- Data Setup Time = 10 ns min.
- Data Hold Time = 0 ns min.
- Qualifier Setup Time = 20 ns min.
- Qualifier Hold Time = 5 ns min.
- Minimum Clock Width = 10 ns

- Minimum Clock Period:
  - No Tagging Mode = 40 ns (25 Mhz clock).
  - Event Tagging Mode = 50 ns (20 MHz clock).
  - Time Tagging Mode = 60 ns (16 MHz clock).
- Minimum Time from Slave Clock to Master Clock = 10 ns.
- Minimum Time from Master Clock to Slave Clock = 50 ns.

Using the External Timing Analyzer

Introduction

The external analyzer can be aligned with the internal emulation analyzer, configured as an external state analyzer, or configured as an external timing analyzer. This chapter shows you how to use the external timing analyzer. The main sections in this chapter:

- Show you how to configure the external analyzer as a timing analyzer.
- Show you how to specify threshold voltages and define labels for the external probe signals.
- Describe the timing specifications.
- Describe the timing waveform display.
- Show you examples of using the external timing analyzer.

Note

Two versions of the PC Interface are shipped with your emulator; one contains interface software for the timing analyzer and the other does not. The version that contains the timing interface software is larger and requires most of the PC's 640K bytes of RAM. The version that does not contain the timing interface software requires approximately 480K bytes of RAM.

Prerequisites

Before you can use the external timing analyzer, you must have already completed the following tasks:

- You must be using the version of the PC Interface that gives you access to the external timing analyzer.
- The external analyzer probe must be assembled and connected to signals of interest as shown in the "Using the External Analyzer" chapter.

Configuring for Timing Analysis

To configure your emulator's external analyzer as a timing analyzer, select:

```
Analysis, System
```

Now, use the **Tab** key to select "external timing analyzer" and press **Enter**.

When the external analyzer is configured as a timing analyzer, the "Analysis Trace Modify External" command gives you a special timing analyzer trace specification screen (see figure 5-1) and the "Analysis Display External" command gives you a timing waveform display.

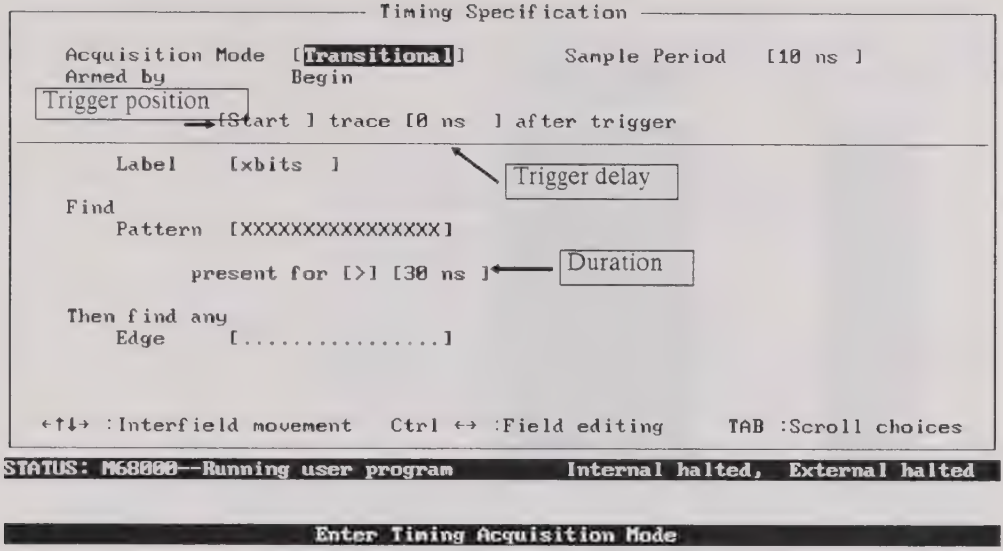

Figure 5-1. Timing Interface Main Display

Specifying Threshold Voltages & Defining Labels

To specify threshold voltages for the external probe signals, select:

```
Analysis, Format, External
```

An example format specification display is shown in figure 5-2. This screen allows you to specify threshold voltages, informs you of activity on the external analyzer trace signals, and allows you to define timing labels.

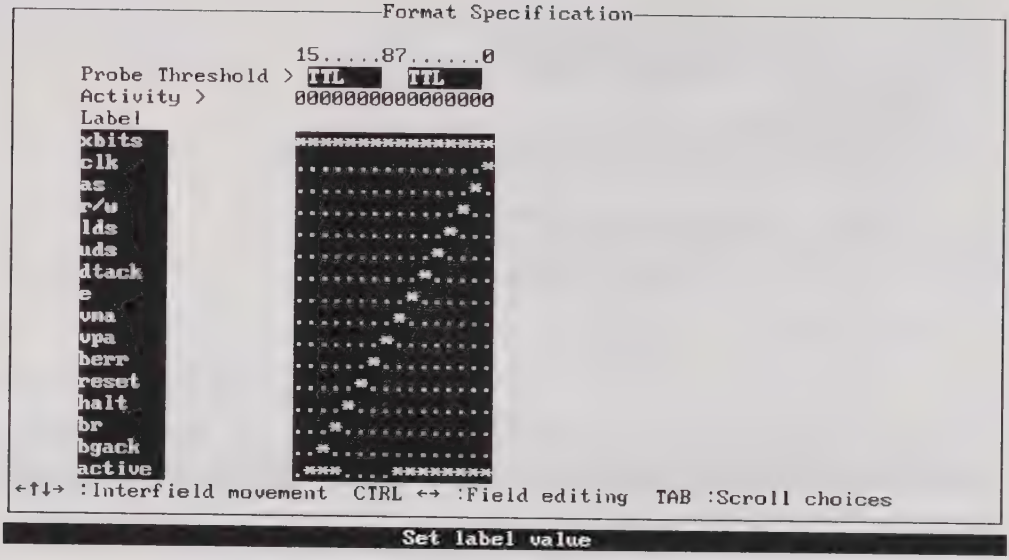

Figure 5-2. Timing Label Specification

When you are done specifying the threshold voltages and defining labels, press **End** and **Enter** to save your specifications. To exit without making changes to this label configuration, press **Esc**.

Threshold Voltages

The external probe signals are divided into two groups, the lower byte (channels 0 through 7), and the upper byte (channels 8 through 15). Threshold voltage levels can be specified for each group. When the cursor is in one of the threshold voltage fields, you can use the **Tab** key to select one of the following values, or you can type in the voltage:

TTL	1.4 volts.
CMOS	2.5 volts.
ECL	-1.3 volts.

<number> You can type in a threshold voltage. Voltages may be from -6.4 volts to 6.35 volts with a 50 mV resolution.

Activity This line of the display shows the activity on the external trace signals. A trace signal is specified as low (0) when it is below the threshold voltage, high (1) when it is above the threshold voltage, or moving (double headed arrows).

Labels The format specification screen allows you to define timing labels. When you initially enter the PC Interface, one label, "xbits", is predefined. The "xbits" label includes all 16 external channels as specified by asterisks in the label value field.

You can define labels by moving the cursor to one of the label fields, typing in a label name (embedded spaces are not allowed), and pressing **Enter**. Once you have entered a label name, a label value field appears. The label value field allows you to specify the external channels that make up the label. The label value field allows you to mask off unused or unimportant external channels.

New "label value" fields contains all periods. This means that the label does not currently represent any timing signals (all external channels are masked). To specify channels that the label is to represent, simply move the cursor to the appropriate column, and either use the **Tab** key to select an asterisk (include signal in the label) or type the asterisk key.

Labels can be used for signal identification in the waveform display. When a label consists of more than one signal, the signals within that label are numbered from the least significant active channel. For example, in figure 5-2, external channel 13 may be represented in the waveform display with the following names: xbits 13, bgack 00, or active 9.

Timing Specification

This section describes the options available when modifying the timing specification. To modify the timing specification, select:

```
Analysis, Trace, Modify, External
```

Brackets, [ ], in the timing specification display indicate fields in which the **Tab** key may be used to select choices.

When you are done modifying the timing specification, press **End** and **Enter** to save your specifications. To exit without making changes to the timing specification, press **Esc**.

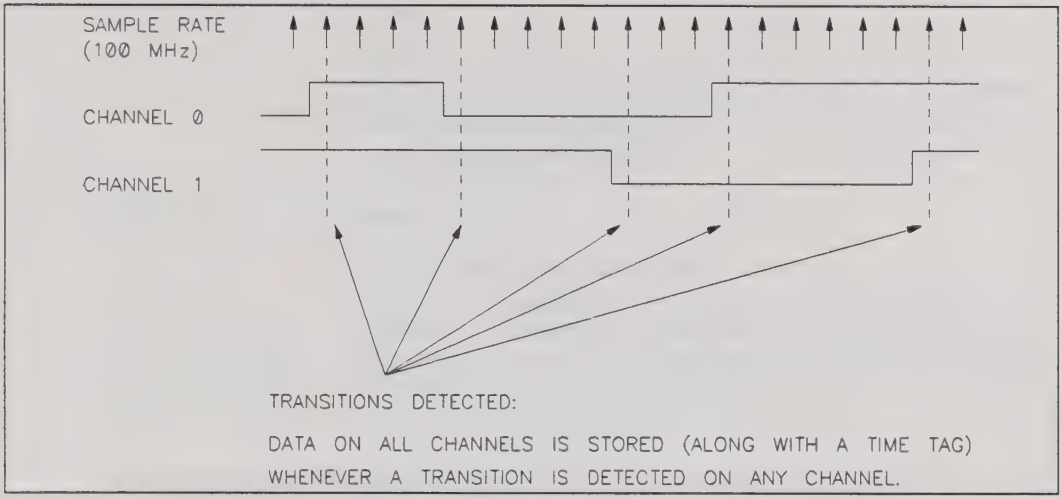
SAMPLE RATE
(100 MHz)
CHANNEL 0
CHANNEL 1
TRANSITIONS DETECTED:
DATA ON ALL CHANNELS IS STORED (ALONG WITH A TIME TAG)
WHENEVER A TRANSITION IS DETECTED ON ANY CHANNEL.

Figure 5-3. Transitional Acquisition Mode

Acquisition Modes

You can use the external timing analyzer in one of three modes: transitional, standard (data acquisition), or glitch (data and glitch acquisition).

Transitional

In the transitional mode, data is sampled at 100 MHz, but stored only when an input transition (on any channel) is detected. A time tag is also be stored so that the data can be accurately placed in the display. This mode allows the effective time window stored to be increased while maintaining resolution.

The number of data transitions stored depends on the incoming data transmission rate. The minimum number of data transitions that will be stored is 128. Because time tags are also stored, the maximum number of transitions that can be stored is 512. See figure 5-3.

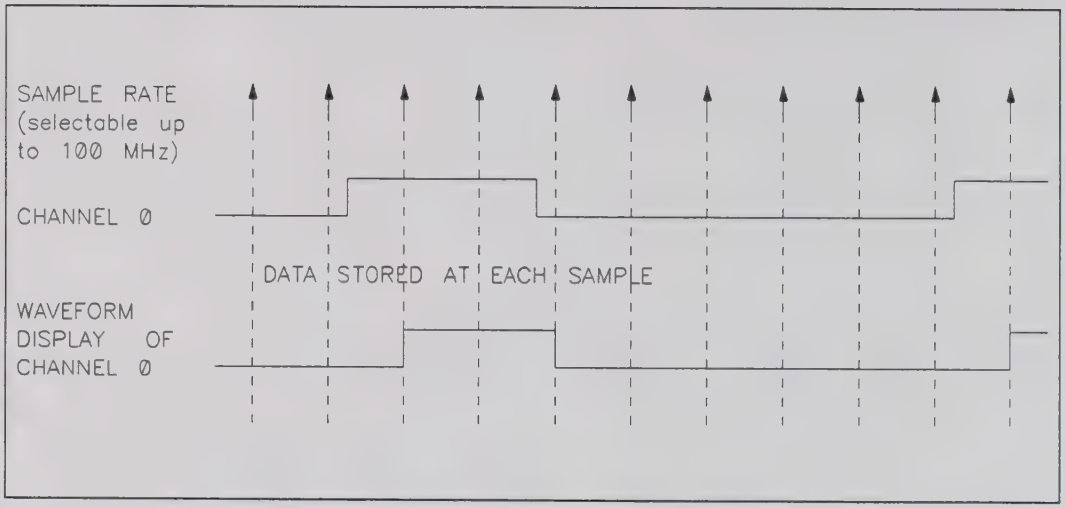

Figure 5-4. Standard Acquisition Mode

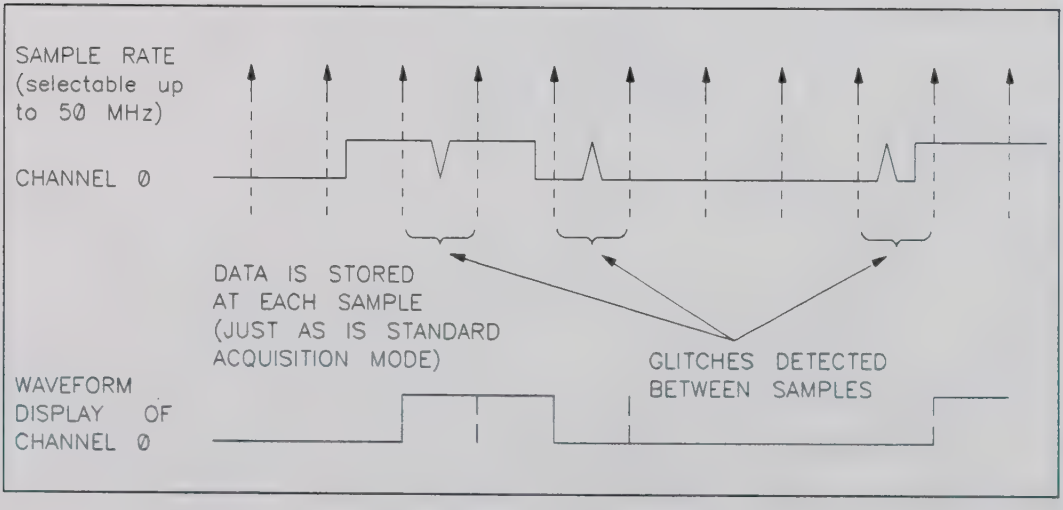

Figure 5-5. Glitch Acquisition Mode

Standard

In the standard mode, the timing analyzer samples data on the external analyzer probe at the selected sample rate. Up to 1024 samples can be stored, and the maximum sample rate is 100 MHz (10 ns intervals). See figure 5-4.

Glitch

This is the same as the standard acquisition mode except that glitch information is also stored at each sample. A glitch is detected when there are two or more transitions on a signal between samples. The storing of glitch information reduces the number of samples that can be stored to 512, and the maximum sample rate is 50 MHz (20 ns intervals). See figure 5-5.

Sample Period

The sample period in the transitional acquisition mode is always 10 ns.

Valid periods in the standard acquisition mode are between 10 ns and 50 ms in a 1/2/5 sequence.

Valid periods in the glitch acquisition mode are between 20 ns and 50 ms in a 1/2/5 sequence.

The accuracy of the sample rate is that of the crystal oscillator, approximately +/- 0.01%.

Armed By

The "Armed by" field reflects the arm condition of the external analyzer.

Begin

When "Armed by Begin" is shown, the external analyzer is always armed. This means that the analyzer can perform measurements at any time.

TRIG1 or TRIG2

When "Armed by TRIG1" or "Armed by TRIG2" is shown, the external analyzer cannot perform a measurement until the arm is received from an external trigger signal.

External trigger signals can drive the external analyzer over the TRIG1 or TRIG2 signals, as specified in the Trigger Configuration (see the "Allowing CMB and BNC Triggers to Arm the Analyzer" section in the "Coordinated Measurements" chapter).

Trigger Position

The trigger position option allows you to place the trigger at the start, center, or end of the trace. For example, if you wanted to look at events before the trigger, you would place the trigger at the end of the trace.

Trigger Holdoff (Prestore)

Trigger holdoff is the number of samples that are stored before the trigger will be recognized. Trigger holdoff is as follows for the three timing modes:

Transitional Mode	None.
Standard Mode	Start trace = 60 samples. Center trace = 512 samples. End trace = 960 samples.
Glitch Mode	Start trace = 30 samples. Center trace = 256 samples. End trace = 480 samples.

Trigger Delay

Timing trigger delay is the amount of time to delay the trigger after a valid trigger condition. Trigger delay can be anywhere between 0 and 10 ms in 10 ns increments.

Label Qualifier

The "Label" field in the timing specification display allows you to select one of the defined labels. You can use the **Tab** key to scroll through the defined labels. Once a label is selected, you can then specify patterns, edges, or glitches on the data channels associated with that label. The trigger condition is the combined specifications of all labels (that is, the pattern, edge, or glitch specifications for each label are ORed together to form the complete specification for the 16 external data channels).

All defined labels can appear in the waveform display regardless of the label qualifier selected.

Specifying the Trigger Condition

The timing specification options described above tell the timing analyzer how to capture data and how to display it, but they do not tell the analyzer when to capture data; this is done by specifying the trigger condition. The "Find" and "Then Find" options allow you to specify the trigger condition.

There are three types of trigger conditions:

1. **Pattern Trigger**. This type of trigger condition occurs when no edges (or glitches if the glitch acquisition mode is enabled) are specified in the "Then Find" options. In order for the trigger condition to become true, the pattern specified must be present for greater than or less than a specified amount of time (duration).

2. **Edge Trigger**. This type of trigger condition can only occur when edges are specified in the "Then Find" options and a greater than duration is specified. In order for this trigger condition to become true, the specified pattern trigger must be found and be present for greater than the specified period of time, and a specified edge must be found while the pattern is still present.

3. **Glitch Trigger**. This type of trigger condition can only occur in the glitch acquisition mode when glitches are specified in the "Then Find" options and a greater than duration is specified. In order for this trigger condition to become true, the specified pattern must be found and be present for greater than the specified period of time, and a specified glitch must be found while the pattern is still present.

These three types of trigger conditions are described below.

Find Pattern

Find pattern allows you to specify a data pattern consisting of 1's, 0's, or X's (don't cares) across the 16 channels. The most significant bit is channel 15 and least significant bit is channel 0.

Use the field editing keys to position the cursor to the different channels, and use the **Tab** key to select the appropriate value.

Duration

The "present for" option allows you to specify a pattern duration greater than or less than a specified amount of time before the pattern trigger condition is met.

If the pattern is valid but the duration is not met, there is a 20 ns reset time before looking for a pattern again.

Greater Than Duration

The trigger occurs after the pattern is present on the probe for the specified time duration. Selectable from 30 ns to 10 ms in 10 ns increments.

Less Than Duration

The trigger occurs when the specified pattern is present on the probe inputs for greater than 20 ns but less than the specified time duration. Selectable from 40ns to 10 ms in 10 ns increments.

An example pattern trigger, with a duration greater than 30 ns, is shown in figure 5-6.

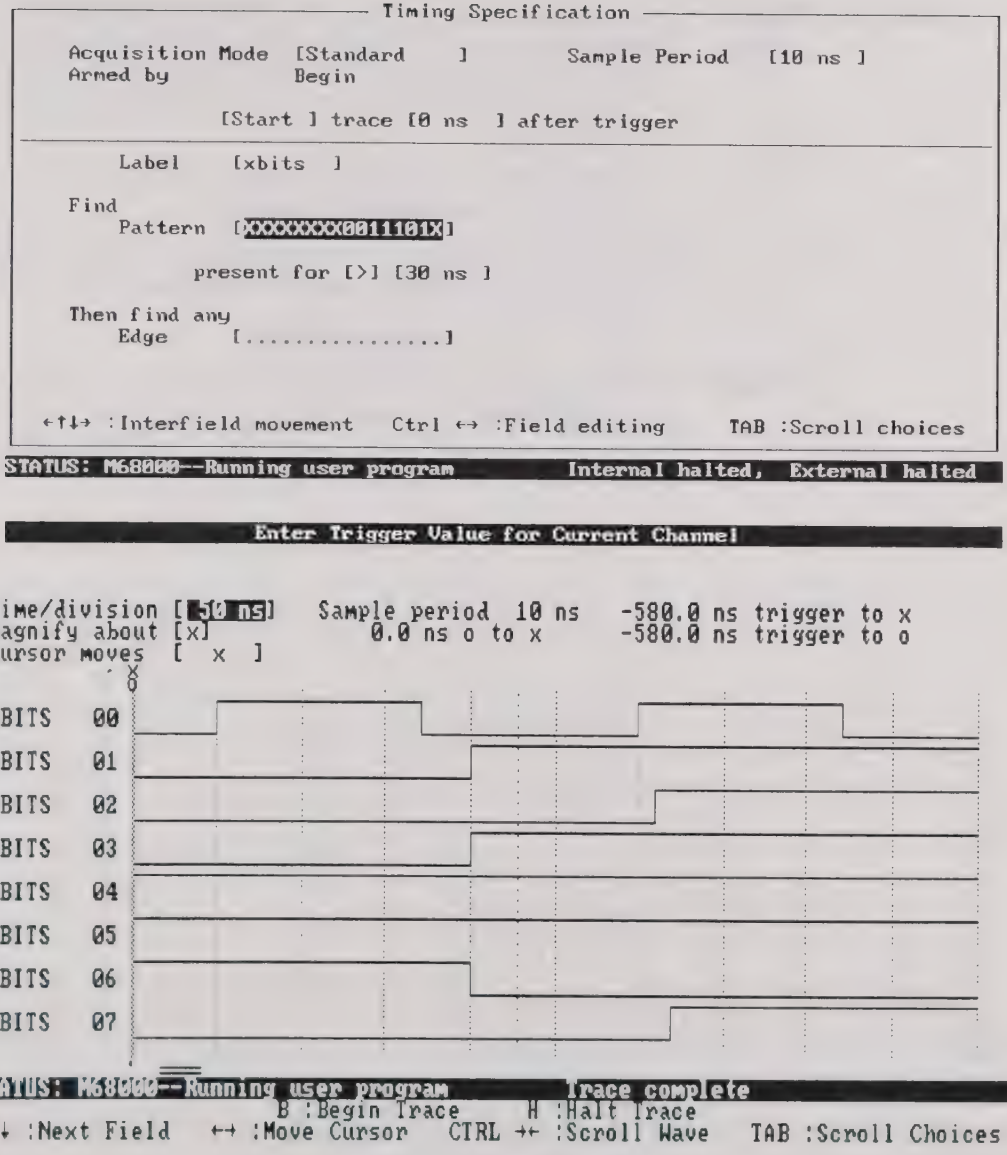
Timing Specification
Acquisition Mode [Standard] Sample Period [10 ns]
Armed by Begin
[Start] trace [0 ns] after trigger
Label [xbits]
Find
Pattern [XXXXXXXX0011101X]
present for [>] [30 ns]
Then find any
Edge [.....]
←↑↓→ :Interfield movement Ctrl ↔ :Field editing TAB :Scroll choices
STATUS: M68000--Running user program Internal halted, External halted
Enter Trigger Value for Current Channel
Time/division [30 ns] Sample period 10 ns -580.0 ns trigger to x
Magnify about [x] 0.0 ns o to x -580.0 ns trigger to o
Cursor moves [x]
XBITS 00
XBITS 01
XBITS 02
XBITS 03
XBITS 04
XBITS 05
XBITS 06
XBITS 07
STATUS: M68000--Running user program Trace complete
B :Begin Trace H :Halt Trace
↑↓ :Next Field ↔ :Move Cursor CTRL →← :Scroll Wave TAB :Scroll Choices

Figure 5-6. Pattern Trigger

Then Find Edge or Glitch

Edge or glitch triggers occur after the pattern has been present on the probe for the specified duration and, while the pattern is still present, an edge or glitch occurs on any of the selected channels. Edges on each channel can be specified as rising, falling, or either rising or falling.

Edge triggers may only be specified with "greater than" durations. See figure 5-7 for an edge trigger example.

Glitch triggers may only be specified while in the glitch acquisition mode and with "greater than" durations. See figure 5-8 for a glitch trigger example.

Reset

The timing specification reset command allows you to return the timing specification to its default values (see figure 5-1).

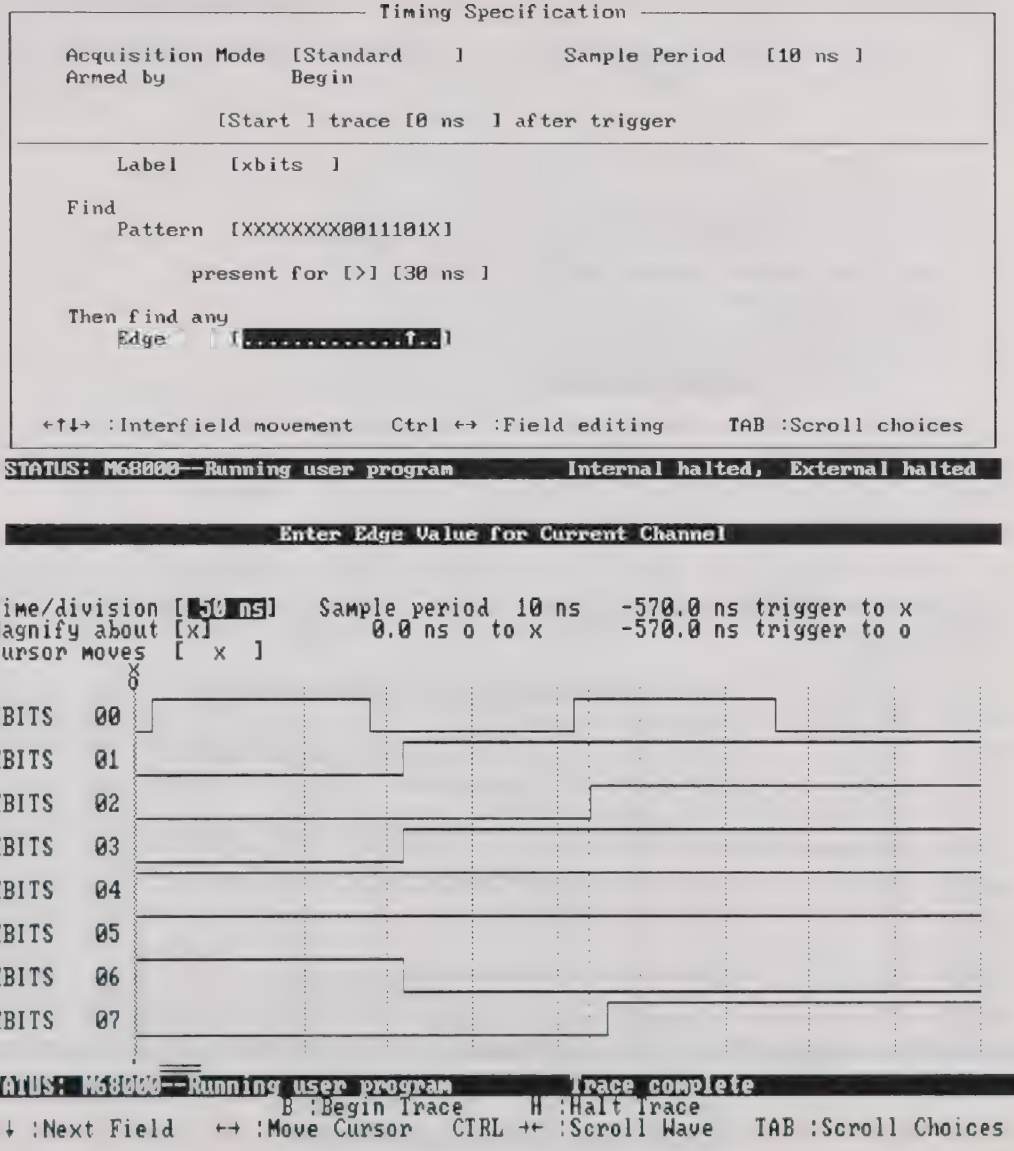
Timing Specification
Acquisition Mode [Standard] Sample Period [10 ns]
Armed by Begin
[Start] trace [0 ns] after trigger
Label [xbits]
Find
Pattern [XXXXXXXX0011101X]
present for [>] [30 ns]
Then find any
Edge [.....f..]
←↑↓→ :Interfield movement Ctrl ↔ :Field editing TAB :Scroll choices
STATUS: M68000--Running user program Internal halted, External halted
Enter Edge Value for Current Channel
Time/division [30 ns] Sample period 10 ns -570.0 ns trigger to x
Magnify about [x] 0.0 ns o to x -570.0 ns trigger to o
Cursor moves [x]
XBITS 00
XBITS 01
XBITS 02
XBITS 03
XBITS 04
XBITS 05
XBITS 06
XBITS 07
STATUS: M68000--Running user program Trace complete
B :Begin Trace H :Halt Trace
↑↓ :Next Field ↔ :Move Cursor CTRL →← :Scroll Wave TAB :Scroll Choices

Figure 5-7. Edge Trigger

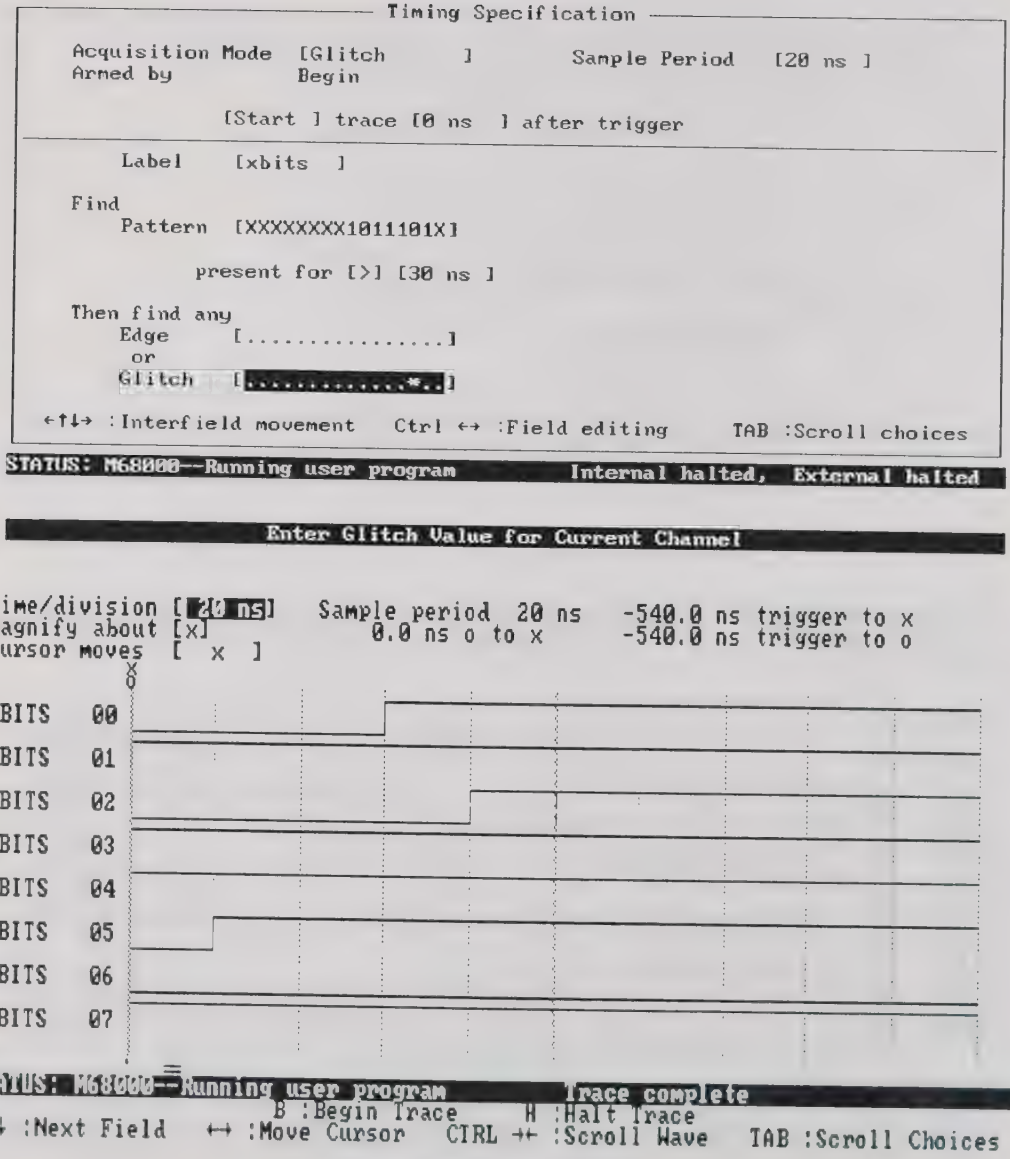
Timing Specification
Acquisition Mode [Glitch] Sample Period [20 ns]
Armed by Begin
[Start] trace [0 ns] after trigger
Label [xbits]
Find
Pattern [XXXXXXXX1011101X]
present for [>] [30 ns]
Then find any
Edge [.....]
or
Glitch [.....*..]
←↑↓→ :Interfield movement Ctrl ↔ :Field editing TAB :Scroll choices
STATUS: M68000--Running user program Internal halted, External halted
Enter Glitch Value for Current Channel
Time/division [20 ns] Sample period 20 ns -540.0 ns trigger to x
Magnify about [x] 0.0 ns o to x -540.0 ns trigger to o
Cursor moves [x]
XBITS 00
XBITS 01
XBITS 02
XBITS 03
XBITS 04
XBITS 05
XBITS 06
XBITS 07
STATUS: M68000--Running user program Trace complete
B :Begin Trace H :Halt Trace
↑↓ :Next Field ↔ :Move Cursor CTRL →← :Scroll Wave TAB :Scroll Choices

Figure 5-8. Glitch Trigger

Timing Waveform Display

To view a timing waveform display, select:

```
Analysis, Display, External
```

You can exit the waveform display by pressing **ESC**, and you can re-enter the waveform display by selecting the "**A**nalysis **D**isplay **E**xternal" command. When you enter the waveform display, there are several fields which allow you to change how the trace information is displayed. This section describes the waveform display and the features that allow you to change the display. An example timing waveform display is shown in figure 5-9.

Setting the Time per Division

By moving the cursor to the time/division field and using the **Tab** key, you can change the time per division on the display. There are 10 divisions on the display, represented by vertical dotted lines.

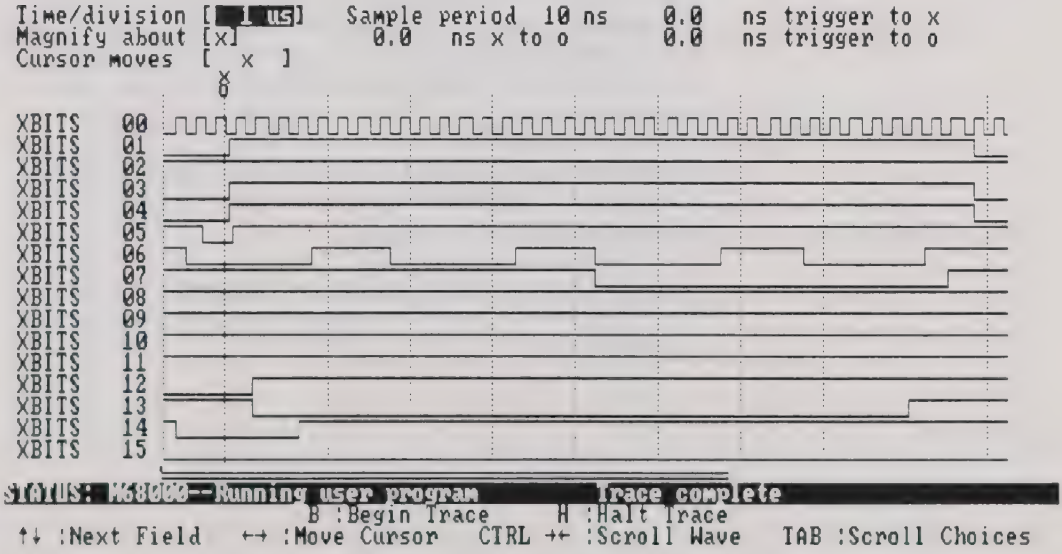

Figure 5-9. Timing Waveform Display

Scrolling through the Waveform Display

When the time per division is decreased, not all of the trace can be displayed on the screen. However, you can scroll the trace across the screen by pressing the **CTRL** left arrow and **CTRL** right arrow keys. The portion of the trace that is currently displayed is represented by a bar at the bottom of the screen.

Reference Points

Three reference points appear in the waveform display. The first is the trigger point. The two remaining reference points are movable, and you can place them at areas of interest in the trace.

Trigger

The trigger point is represented by the vertical dashed line. The trigger point is the actual trigger condition (pattern, edge, or glitch) plus the trigger delay.

User Defined (X, O)

The user defined reference points can be moved anywhere in the display. These points are also represented by vertical dashed lines, and they are labeled "x" and "o". The top of the waveform display shows time between these two points and the time between them and the trigger.

Cursor moves (X, O, X & O) The third field from the top allows you to select which reference points the cursor will move, "x", "o", or both "x & o".

Magnify About (X or O) Toggling the "display about" value from "x" to "o" causes the waveforms to be displayed about the different reference points.

Inserting/Deleting Channels

The **Insert** key allows you to increase the number of channels included in the waveform display. By inserting channels, you can display a maximum of 16 channels on the display.

Each channel can be used to display any of the defined labels.

The **Delete** key allows you to decrease the number of waveforms included on the display.

Examples

Starting the Timing Measurement

To start a timing measurement, select:

```
Analysis, Begin, External
```

Also, while in the waveform display, you can enter the "B" key to start a timing measurement.

Halting the Trace

To halt a currently running timing measurement, select:

```
Analysis, Halt, External
```

Also, while in the waveform display, you can enter the "H" key to halt a timing measurement.

External Timing Analyzer Specifications

Sample Rate Accuracy = 0.01%

Asynchronous Pattern. Trigger on pattern less than or greater than specified duration. Pattern is logical AND of specified low, high, or "don't care" for each channel. If pattern is true then false for less than the duration, there is a 20 ns reset time before looking for the pattern again.

Greater Than Duration. Range is 30 ns to 20 ms. Resolution is +/- 10 ns or 0.01%, whichever is greater. Accuracy is (10 ns + 0.01%) to (-30 ns - 0.01%).

Less Than Duration. Range is 40 ns to 10 ms. Resolution is +/- 10 ns or 0.01%, whichever is greater. Pattern must be valid for at least 20 ns. Accuracy is (30 ns + 0.01%) to (-10 ns - 0.01%).

Delay Accuracy = 0.01% +/- 10 ns

Minimum Detectable Glitch = 5 ns at threshold

Typical Skew < 4 ns

Making Coordinated Measurements

Introduction

Coordinated measurements are measurements synchronously made in multiple emulators or analyzers. Coordinated measurements can be made between HP 64700 Series emulators which communicate over the Coordinated Measurement Bus (CMB). Coordinated measurements can also be made between an emulator and some other instrument connected to the BNC connector.

This chapter will describe coordinated measurements which involve the emulation or external analyzers. These types of coordinated measurements are:

- Starting a trace on reception of the CMB EXECUTE signal.
- Using the analyzer trigger to break emulator execution into the monitor.
- Using the analyzer trigger to drive the CMB or BNC TRIGGER signal.
- Allowing CMB or BNC TRIGGER signals to arm the analyzer.
- Using the external analyzer to arm the emulation analyzer, and vice-versa.

Note

You must use the background emulation monitor to perform coordinated measurements. Refer to your *PC Interface: Emulator User's Guide* for more information on the emulation monitor.

Three signal lines on the CMB are active and serve the following functions when enabled:

TRIGGER Active low. The analyzer trigger line on the CMB and on the BNC serve the same logical purpose. They provide a means for the analyzer to drive its trigger signal out of the system or for external trigger signals to arm the analyzer or break the emulator into its monitor.

READY Active high. This line is for synchronized, multi-emulator start and stop. When CMB run control interaction is enabled, all emulators are required to break to background upon reception of a false READY signal and will not return to foreground until this line is known to be in a true state.

EXECUTE Active low. This line serves as a global interrupt signal. Upon reception of an enabled EXECUTE signal, each emulator is to interrupt whatever it is doing and execute a previously defined process, typically, run the emulator or start a trace measurement.

Tracing at EXECUTE

To specify that an analyzer measurement begin upon reception of the CMB EXECUTE signal, select the following PC Interface command:

```
Analysis, CMB, Begin
```

The trace measurement defined by the current trace specification will be started when the EXECUTE signal becomes active. When the trace measurement begins, you will see the message "ALERT: CMB execute; emulation trace started".

Using the Analyzer Trigger to Break into the Monitor

To cause emulator execution to break into the monitor when the analyzer trigger condition is found, you must modify the trigger configuration. To access the trigger configuration, select:

```
Config, Trigger
```

The trigger configuration display contains two diagrams, one for each of the internal TRIG1 and TRIG2 signals.

To use the internal TRIG1 signal to connect the analyzer trigger to the emulator break line, highlight the "Analyzer" field in the TRIG1 portion of the display, and use the **Tab** key to select the single-headed arrow pointing towards TRIG1; this shows that the analyzer is driving TRIG1.

Next, highlight the "Emulator" field and use the **Tab** key to select the arrow pointing towards the emulator; this specifies that emulator execution will break into the monitor when the TRIG1 signal is driven.

The resulting trigger configuration display is shown in figure 6-1.

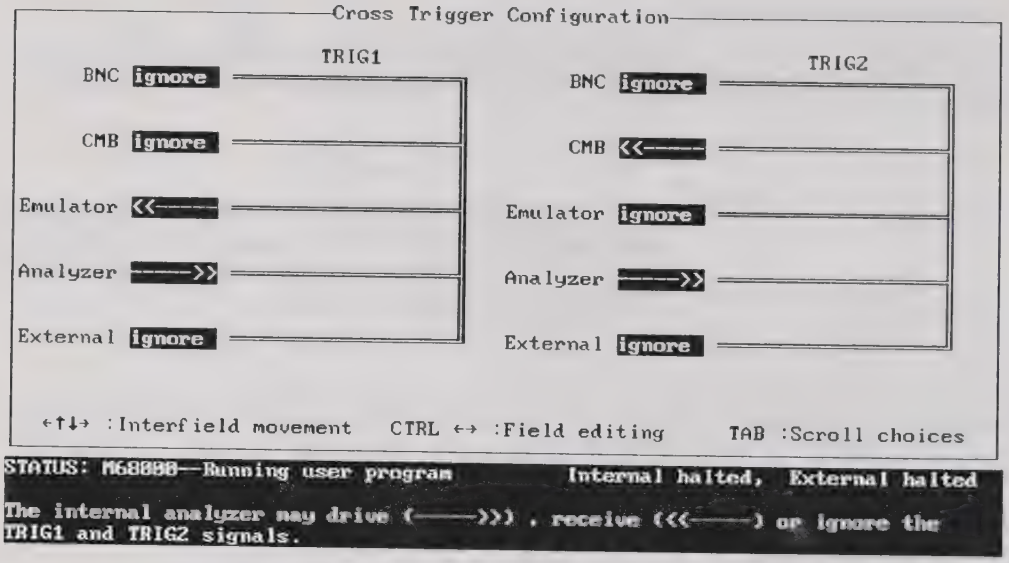

Figure 6-1. Cross Trigger Configuration

Both the emulation analyzer and the external analyzer may drive the same internal signal; in this case, the internal signal will be driven by the analyzer that finds its trigger condition (point) first.

Using the Analyzer Trigger to Drive External Signals

To specify that external TRIGGER signals (either CMB or BNC) become active when the analyzer trigger condition is found, access the trigger configuration by selecting:

```
Config, Trigger
```

To use the internal TRIG2 signal to connect the analyzer trigger to the CMB TRIGGER line, highlight the "Analyzer" field in the TRIG2 portion of the trigger configuration display, and use the

Tab key to select the single-headed arrow pointing towards TRIG2; this shows that the analyzer trigger is driving TRIG2.

Next, highlight the "CMB" field and use the **Tab** key to select the single-headed arrow pointing towards CMB; this shows that the CMB TRIGGER signal becomes active when the TRIG2 signal is driven.

This trigger configuration is also shown in figure 6-1.

Allowing CMB or BNC TRIGGERs to Arm the Analyzer

The two previous examples show how the analyzer can be used to drive signals. You can also specify that the analyzer be armed (turned on, or enabled) on the reception of CMB or BNC TRIGGER signals. (The analyzer is always armed unless one of these signals is specifically used to arm the analyzer.) Until the analyzer is armed, trace measurements cannot be performed.

Arming the Internal Emulation Analyzer

To arm the internal emulation analyzer on reception of an external CMB or BNC TRIGGER signal, select the following command from within the PC Interface:

```
Config, Trigger
```

For example, to specify that the state analyzer be armed by the CMB TRIGGER over TRIG2, highlight the "CMB" field and use the **Tab** key to select the single-headed arrow pointing towards TRIG2; this shows that the TRIG2 signal is driven when the CMB TRIGGER signal becomes active.

Next, highlight the "Analyzer" field in the TRIG2 portion of the display, and use the **Tab** key to select the arrow which points towards "Analyzer"; this shows that the analyzer trigger receives TRIG2.

This trigger configuration is shown in figure 6-2.

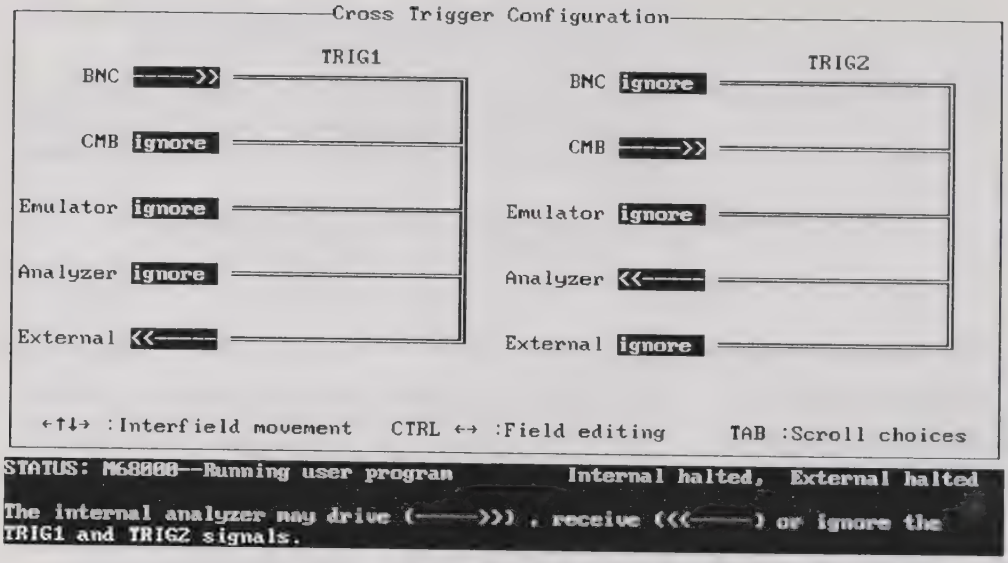

Figure 6-2. Receiving External Signals

In the internal emulation analyzer trace specification display, you can use the "arm" resource in any of the state qualifier fields. For example, if "arm" is shown in the "trigger on" field, the analyzer triggers when it is armed.

Arming the External Analyzer

To arm the external analyzer on reception of an external CMB or BNC TRIGGER signal, select the following command from within the Timing Interface:

```
Config, Trigger
```

For example, to specify that the timing analyzer be armed by the BNC TRIGGER over TRIG1, highlight the "BNC" field and use the **Tab** key to select the single-headed arrow pointing towards TRIG1; this shows that the TRIG1 signal is driven when the BNC TRIGGER signal becomes active.

Next, highlight the "External" field in the TRIG1 portion of the display, and use the **Tab** key to select the arrow which points towards "External"; this shows that the analyzer trigger receives TRIG1.

This trigger configuration is shown in figure 6-2.

In the external state analyzer trace specification display, you can use the "arm" resource in any of the state qualifier fields. For example, if "arm" is shown in the "trigger on" field, the analyzer triggers when it is armed.

When the external analyzer is configured as a timing analyzer and is to be armed by an external CMB or BNC TRIGGER signal, the timing trace specification display is updated to show "Armed by External". The timing measurement begins when the arm signal is received.

Using One Analyzer to Arm the Other

You can use the trigger condition of the external analyzer to arm the emulation analyzer, and vice-versa. To make a specification like this, you also select:

```
Config, Trigger
```

For example, in figure 6-3, the TRIG1 signal is used to arm the internal analyzer when the external analyzer's trigger condition is found.

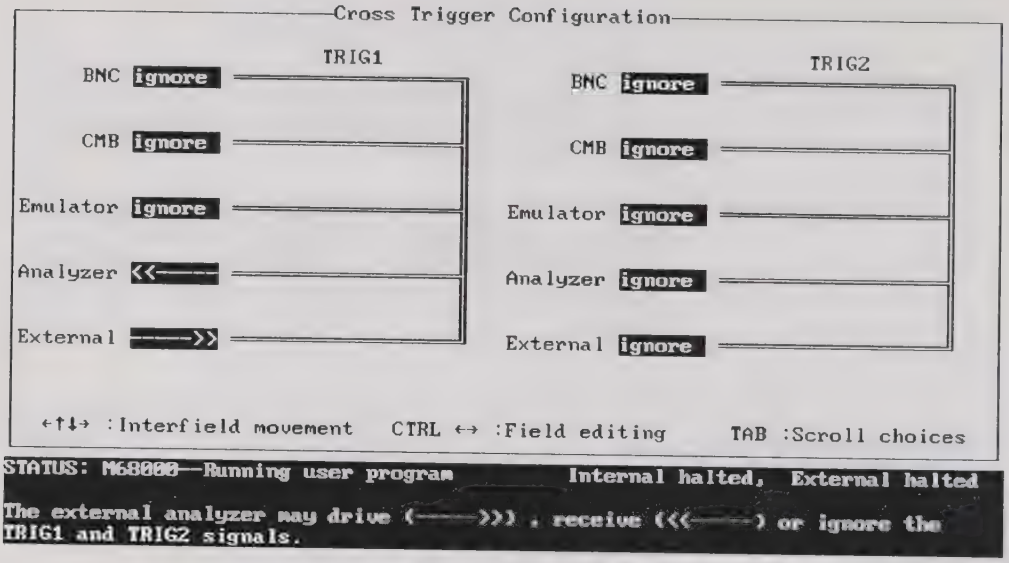

Figure 6-3. Using One Analyzer to Arm the Other

Other Trigger Combinations

You may have noticed that the CMB or BNC TRIGGER signals may be driven by the internal TRIG1 and TRIG2 signals, be received by external sources, or both. When a CMB or BNC signal is received from an external source, it may be used to break emulator execution into the monitor. When a CMB or BNC signal is both driven and received (double-headed arrow shown in the associated field), you can set up the emulation analyzer to drive the internal signal; if the internal signal drives the emulator break line, the emulator will break into the monitor on either the analyzer trigger or on the reception of an external TRIGGER signal.

When an emulator break occurs due to the analyzer trigger, the analyzer will stop driving the internal signal that caused the break. Therefore, if TRIG2 is used both to break and to drive the CMB TRIGGER (for example), TRIGGER will go true when the trigger is found and then will go false after the emulator breaks. However, if TRIG1 is used to cause the break and TRIG2 is used to drive the CMB TRIGGER, TRIGGER will stay true until the trace is halted or until the next trace starts.

Notes

Index

A
absolute count display, **2-16**
absolute files, loading, **3-9**
acquisition modes, **5-7**
activity, external trace channels, **4-10, 5-5**
add operator, **2-9**
addr trace label, **2-10**
analysis begin, **2-13**
analysis display, **2-14**
analysis halt, **2-14**
analysis specification
  trace at EXECUTE, **6-3**
analyzer
  features of, **1-3**
  internal, using the, **2-1**
analyzer probe
  assembling, **4-2**
  connecting to the emulator, **4-4**
  connecting to the target system, **4-7**
AND operator (bitwise), **2-9**
armed by, timing specification, **5-9**

B
bases (number), **2-8**
binary numbers, **2-8**
bitwise AND operator, **2-9**
bitwise OR operator, **2-9**
bitwise XOR operator, **2-9**
BNC connector, **6-1**
branch state, **1-3, 2-5**
branches, **2-5**
  per level, **3-27**
  restart on, **3-24**
breaking into the monitor on trigger, **6-3**

C
channels, inserting deleting from waveform display, **5-19**
clock source for external state analyzer, **4-14**
clock speed, maximum qualified, **4-16**

CMB (coordinated measurement bus), **6-1**
signals on, **6-2**
CMOS threshold voltage specification, **4-10, 5-4**
constants, **2-8**
coordinated measurements, **1-5**
definition, **6-1**
count information in the trace listing, **1-3**
count information in trace listing, **2-15**
count qualifiers, **2-6, 3-21**
counts
displaying relative or absolute, **2-16**
cross-arming emulation and external analyzers, **6-7**

D
data trace label, **2-11**
decimal numbers, **2-8**
default trace specification, **2-2**
DeMorgan's law, **2-13**
display about x or o, timing waveform display, **5-18**
displaying the trace, **2-14**
divide operator, **2-9**
don't care digits, **2-8**
duration, **5-12**

E
ECL threshold voltage specification, **4-10, 5-4**
edge trigger, **5-11, 5-14**
emulation analyzer
definition, **1-1**
emulator status lines, predefined values for, **2-11**
EXECUTE
CMB signal, **6-2**
tracing at, **6-3**
executing programs, **3-10**
expressions
pattern and range resource, **2-7**
external analyzer, **1-3, 2-15**
definition, **1-1**
extension to emulation analyzer, **4-11/4-12**
independent state analyzer, **4-11, 4-14**
independent timing analyzer, **4-12**
selecting the mode, **4-11**
setup and hold times for qualifying signals, **4-16**
specifications, **4-17**

external analyzer (cont'd)
timing analyzer, using the, **5-1**
trace labels, creating, **4-10**
using, **4-1**
external timing analyzer, **1-4**

F features of the analyzer, **1-3**
find state, **1-3, 2-4**

G glitch acquisition mode, **5-9**
glitch trigger, **5-12, 5-14**
global restart state, **2-5**
grabbers
connecting to analyzer probe, **4-3**
greater than duration, **5-12**

H halting the trace, **2-14**
hexadecimal numbers, **2-8**
hold times for qualifying signals, **4-16**
holdoff, trigger, **5-10**

I instruction queues, **2-16**
internal analyzer
definition, **1-1**
examples, **3-1**
using the, **2-1**
interset operators, **2-12**
intraset operators, **2-12**

L labels (external analyzer)
defining, **4-10**
labels (timing)
defining, **5-5**
qualifying the timing specification, **5-11**
less than duration, **5-12**
line numbers, **2-15**
loading absolute files, **3-9**
logical AND/bitwise merge operator, **2-9**
logical NOT, **2-12/2-13**

M memory
mapping for the sample program, **3-8**
mnemonic information in trace listing, **2-15**

modulo operator, **2-9**
multiply operator, **2-9**

N notes
Internal and External command options, **2-1**
monitors/adapters to display timing waveforms, **1-4**
threshold settings take effect when you begin the trace, **4-10**
timing interface software, **1-4, 5-1**
number bases, **2-8**

O occurrence counts, **2-5**
octal numbers, **2-8**
operators, **2-9**
interset, **2-12**
intraset, **2-12**
OR operator (bitwise), **2-9**

P pattern expressions, **2-12**
pattern resources, **2-10**
pattern trigger, **5-11**
pattern, timing specification, **5-12**
patterns, **2-7**
per level branches, **3-27**
pipelined architecture, **2-16**
predefined trace labels, **2-11**
prefetch, **2-16**
present for (duration), **5-12**
prestore (trigger holdoff), **5-10**
prestore qualifier, **2-6**
prestore qualifiers, **3-18**

Q qualified clock speed
maximum, **4-16**
qualifiers
count, **3-21**
prestore, **3-18**
storage, **3-15**

R range resource, **2-10**
READY, CMB signal, **6-2**
reference points, timing waveform display, **5-18**
using the cursor to move, **5-18**
relative count display, **2-16**

relative display of count information, **2-15**
reset
  emulation analyzer specification, **2-13**
  timing specification, **5-14**
restart on, **3-24**
restart state, **2-5**
rotate left operator, **2-9**
rotate right operator, **2-9**
running programs, **3-10**

S
sample period, **5-9**
sequence levels, **1-3, 2-2/2-3**
  deleting, **2-3**
  inserting, **2-3**
  maximum, **2-3**
  setting the trigger level, **2-3**
sequencer, **1-3, 2-16**
set operators
  limitations, **2-13**
setup times for qualifying signals, **4-16**
shift left operator, **2-9**
shift right operator, **2-9**
simple measurements, **1-3**
specifications
  external analyzer, **4-17**
  external timing analyzer, **5-20**
standard acquisition mode, **5-9**
starting the trace, **2-13**
stat trace label, **2-11**
status lines, predefined values for, **2-11**
storage (trace), **1-3**
storage qualifiers, **2-4, 3-15**
subtract operator, **2-9**

T
threshold voltages, **4-10, 5-4**
time/division, timing waveform display, **5-17**
timing analyzer
  configuring the external analyzer, **5-2**
  trace labels, creating, **5-5**
timing analyzer, using the, **5-1**
timing specification, **5-6**
  reset, **5-14**

timing waveform display, **5-17**
trace
  at EXECUTE, **6-3**
  definition of, **1-1**
  description of listing, **2-15**
  displaying the, **2-14**
  halting the, **2-14**
  starting the, **2-13**
  window, **3-10**
trace format, **2-16**
trace labels, **2-10**
  external analyzer, creating, **4-10**
  timing analyzer, creating, **5-5**
  trace specification, **2-10**
trace specification
  count qualifier, **3-21**
  default, **2-2**
  modifying, **2-1**
  prestore qualifiers, **3-18**
  resetting the, **2-13**
  storage qualifiers, **3-15**
  trigger level, **3-11**
transitional acquisition mode, **5-7**
TRIG1, TRIG2 internal signals, **6-3**
trigger
  breaking into monitor on, **6-3**
  definition, **1-1**
  driving external signals on, **6-4**
  other combinations, **6-8**
  specifying a simple, **3-11**
  stop driving on break, **6-8**
trigger condition, **3-11**
  timing specification, **5-11**
trigger holdoff (prestore), **5-10**
trigger level
  setting the, **2-3**
trigger point, timing waveform display, **5-18**
trigger position, **2-7**, **5-10**
  accuracy of, **2-7**
trigger state, **1-3**, **2-4**

TRIGGER, CMB signal, **6-2**
TTL threshold voltage specification, **4-10, 5-4**

U unary one's complement operator, **2-9**
unary two's complement operator, **2-9**
user defined reference points, **5-18**
using the external timing analyzer, **5-1**

V values
assigning to pattern and range resources, **2-7**
values, predefined for emulator status, **2-11**
voltages, threshold, **4-10, 5-4**

W waveform (timing) display, **5-17**
window zoom, **3-10**
windows of program execution, tracing, **3-36**

X xbits, external analyzer trace label, **2-11, 2-15**
xbits, predefined timing label, **4-10, 5-5**
XOR operator (bitwise), **2-9**

Z zoom (windows), **3-10**

Notes

Hewlett-Packard
Printed in the USA

Please send directory corrections to:
Test & Measurement Catalog, 54-AF
Hewlett-Packard Company
5301 Stevens Creek Blvd.
P.O. Box 58059
Santa Clara, CA 95052-8059
Tel: (408) 553-7271
Fax: (408) 983-1006

HEADQUARTERS OFFICES

If no sales office is listed for your country or area, please contact one of these headquarters offices.

AUSTRALIA/ NEW ZEALAND

Hewlett-Packard Ltd.
31 - 41 Joseph St.
BLACKBURN, Victoria 3130
Tel: (61/3) 895-2895
Fax: (61/3) 898-7831
Telex: 31024MELB

FAR EAST

Hewlett-Packard Asia Ltd.
22/F Bond Centre, West Tower
89 Queensway, Central
G.P.O. Box 863
HONG KONG
Tel: (852/5) 848-7777
Fax: (852/5) 868-4997
Telex: 76793 HPA HX
Cable: HPASIAL TD

JAPAN

Yokogawa-Hewlett-Packard Ltd.
3-29-21, Takaido-Higashi
Suginami-Ku, **TOKYO** 168
Tel: (81/3) 331-6111
Fax: (81/3) 335-1478

UNITED KINGDOM

Hewlett-Packard Ltd.
Nine Mile Ride
WOKINGHAM
Berkshire, RG11 3LL
Tel: (44/34) 477-3100
Fax: (44/34) 476-3526

EASTERN EUROPE

Hewlett-Packard GmbH
Liebigasse 1
P.O. Box 72
1222 **VIENNA,** Austria
Tel: (43/222) 2500-0
Fax: (43/222) 2500-444
Telex: 134 425

NORTHERN EUROPE

Hewlett-Packard S.A.
Van der Hooplaan 241
P.O. Box 999
1185 LN **AMSTELVEEN**
The Netherlands
Tel: (31/20) 547 9999
Fax: (31/20) 43 1120
Telex: 18919 hpner nl

SOUTH EAST EUROPE

Hewlett-Packard GmbH
Leibigasse 1
P.O. Box 72
1222 **VIENNA,** Austria
Tel: (43/222) 2500-0
Fax: (43/222) 2500-444
Telex: 134 425 hpner nl

EUROPEAN MULTICOUNTRY REGION

Hewlett-Packard S.A.
150, Route du Nant d'Avril
1217 Meyrin 2
GENEVA, Switzerland
Tel: (41/22) 780 8111
Fax: (41/22) 780 8609

MIDDLE EAST AND AFRICA

Hewlett-Packard S.A.
International Sales Branch
Middle East/Africa
7, rue du Bois-du-Lan
P.O. Box 364
1217 Meyrin 1
GENEVA, Switzerland
Tel: (41/22) 780 7111
Fax: (41/22) 783 7535

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Fax: (416) 673-7253

LATIN AMERICA

Hewlett-Packard Company
Latin American Region, Miami Office
7208 N.W. 31st St
MIAMI, FL 33122
United States
(305) 590-1400/1401
Fax: (305) 590-1427/1428
Telex: 441603HPMIAMI

UNITED STATES OF AMERICA

Customer Information Center
(800) 752-0900
6:00 AM to 5:00 PM Pacific Time

U.S. GOVERNMENT SPECIALISTS

ARMY
Tel: (201) 562-6107
Fax: (201) 562-6246
NAVY
Tel: (301) 258-2311
Fax: (301) 948-5986
AIR FORCE
Tel: (512) 491-1223
Fax: (512) 491-1299
FEDERAL PROGRAMS
Tel: (301) 362-7702
Fax: (301) 362-7650

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 670-4300

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600

ALGERIA

Hewlett-Packard Trading S.A.
Bureau de Liaison
71, Lot. Benachour Abdelkader
CHERAGA
Tel: (213) 281 0287
Fax: (213) 281 0287
Telex: 0408 63161

ARGENTINA

Hewlett-Packard Argentina S.A.
Montaneses 2140/50
1428 BUENOS AIRES
Tel: (54/1) 781 4069
(54/1) 781-4090

AUSTRALIA

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: (61/7) 300-4133
Fax: (61/7) 300-5592
Telex: 42133
Cable: HEWPARD Brisbane

Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Ltd.
Thynne Street, Fern Hill Park
BRUCE, A.C.T. 2617
Tel: (61/6) 251-6999
Fax: (61/6) 251-6948
Telex: 62650
Cable: HEWPARD Canberra

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
126-142 Trennery Crescent
Abbotsford, VIC 3067
Tel: (61/3) 895-2895
Fax: (61/3) 898-7831
Cable: HEWPARD Melbourne

Parkside, South Australia Office

Hewlett-Packard Australia Ltd.
153 Greenhill Road
PARKSIDE, S.A. 5063
Tel: (61/8) 272-5911
Fax: (61/8) 373-1398

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
Herdsman Business Park
Cnr. Hasler & Gould St.
OSBORNE PARK, W.A. 6017
Tel: (61/9) 441-8000
Fax: (61/9) 242-1682
Cable: HEWPARD Perth

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Tel: (61/2) 888-4444
Fax: (61/2) 888-9072
Cable: HEWPARD Sydney

AUSTRIA

Hewlett-Packard GmbH
Verkaufsbüro Graz
Grottenhofstrasse 94
8052 GRAZ
Tel: (43/316) 28 3066
Fax: (43/316) 28 1756
Telex: 312375

Hewlett-Packard GmbH
Liebigasse 1
P.O. Box 72
1222 VIENNA
Tel: (43/222) 2500-0
Fax: (43/222) 2500 - 444

BAHRAIN

Wael Pharmacy and Drugstore
P.O. Box 648
MANAMA
Tel: (973) 25 61 23
Fax: (973) 23 36 38
Telex: 8550 WAEL BN

SALES OFFICES
Arranged alphabetically by country (cont'd)

BARBADOS
Computers & Controls (Barbados) Ltd.
Suite 5, 1st Floor
Wildey Shopping Plaza
ST. MICHAEL
Tel: (809) 429-4103
Fax: (809) 429-4103

BELGIUM
Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
1200 **BRUSSELS**
Tel: (32/2) 761 31 11
Fax: (32/2) 763 06 13

BENIN
Engineering Business Concept (E.B.C)
21, Route du Canal
Zone 3
04 B.P. 1357
ABIDJAN
Ivory Coast
Tel: (225) 21 50 24
Fax: (225) 35 37 90

BERMUDA
Applied Computer Technologies
17 Reid St.
HAMILTON 5
Tel: (809) 295-1616
Fax: (809) 292-7967
Telex: 380 3589/ACT BA

BOLIVIA
Siser Ltda. (Sistemas de
Importacion y Servicios Ltda.)
Gabriel Gozalvez 221
Casilla 4084
LA PAZ
Tel: (591/2) 340962/
363365/343245
Fax: (591/2) 359268

BRAZIL
Edisa Informatica S.A.
Alameda Rio Negro, 750-Alphaville
06454-**BARUERI**-SP
Tel: (55/11) 709-1444
Fax: (55/11) 709-1244
Telex: 1171351

Edisa Informatica S.A.
Rua dos Andradas, 1001-10 andar
90020-**PORTO ALEGRE**-RS
Tel: (55/51) 225-7166
Fax: (55/51) 225-4060
Telex: 515663

Edisa Informatica S.A.
Av. Eng. Abdias de Carvalho, 1111-5 andar
50751-**RECIFE**-PE
Tel: (55/81) 227-2722
Fax: (55/81) 228-3793
Telex: 812904

Edisa Informatica S.A.
Praia de Botafogo, 228-4 andar
22250-**RIO DE JANEIRO**-RJ
Tel: (55/21) 552-0222
Fax: (55/21) 551-1449
Telex: 2121905

BRUNEI
Komputer Wisman Sdn Bhd
Room 1, 3rd Floor
Jalan Tutong
BS Begawan
BRUNEI DARUSSALEM
Tel: (673/2) 23918
Telex: 0809 2447

BURKINA FASSO
Engineering Business Concept (E.B.C.)
21, Route du Canal
04 B.P. 1357
ABIDJAN
Ivory Coast
Tel: (225) 21 50 24
Fax: (225) 35 37 90

CANADA

Alberta
Hewlett-Packard (Canada) Ltd.
150 - 6th Avenue S.W.
CALGARY, Alberta T2P 3Y7
Tel: (403) 262-0777
Fax: (403) 237-9309
Hewlett-Packard (Canada) Ltd.
11120-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (403) 486-6666
Fax: (403) 489-8764

British Columbia
Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND,
British Columbia V6X 2W8
Tel: (604) 270-2277
Fax: (604) 270-0859

Manitoba
Hewlett-Packard (Canada) Ltd.
1825 Inkster Blvd.
WINNIPEG, Manitoba R2X 1R3
Tel: (204) 694-2777
Fax: (204) 694-3901

Nova Scotia
Hewlett-Packard (Canada) Ltd.
201 Brownlow Avenue
DARTMOUTH, Nova Scotia B3B 1W2
Tel: (902) 468-4725
Fax: (902) 468-2817

Hewlett-Packard (Canada) Ltd.
475 Hood Rd., Unit #2
MARKHAM, Ontario L3R 8H1
Tel: (416) 479-1770
Fax: (416) 479-3105

Ontario
Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
Fax: (519) 686-9145

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Fax: (416) 678-9421

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-6483
Fax: (613) 820-0377

Quebec
Hewlett-Packard (Canada) Ltd.
17500 Trans Canada Highway
South Service Road
KIRKLAND, Quebec H9J 2X8
Tel: (514) 697-4232
Fax: (514) 697-6941

Saskatchewan
Hewlett-Packard (Canada) Ltd.
#1, 2175 Airport Rd.
SASKATOON, Saskatchewan S7L 7E1
Tel: (306) 242-3702

CHILE
Avanzados Sistemas de
Conocimientos S. A. (ASC)
Austria 2041
SANTIAGO
Tel: (56/2) 223-5946/6148
Fax: (56/2) 223-1912

CHINA, PEOPLE'S REPUBLIC OF
China Hewlett-Packard Co., Ltd.
38 Bei San Huan Xi Road
Shuang Yu Shu, Hai Dian District
P.O. Box 9610
BEIJING
Tel: (86/1) 256-6888
Fax: (86/1) 256-3207

China Hewlett-Packard Co., Ltd.
28/F Shanghai Union Building
100 Yan An Dong Road
SHANGHAI 200002
Tel: (86/21) 320-3240
Fax: (86/21) 320-2149

COLOMBIA
Carbajal S.A.
Calle 29 Norte No. 6 A 40
Apartado Aereo 46
CALI
Tel: (57/23) 675 011
Fax: (57/23) 688 466

COSTA RICA
I.S. de Costa Rica S.A.
Calle 25, Avs. 6 y 8 No 648
SAN JOSE
Tel: (50/6) 33 3722
Fax: (50/6) 55 3528

CYPRUS
Telerexa Ltd.
P.O. Box 1152
Valentine House
8 Stassandrou St.
NICOSIA
Tel: (357/2) 445 628
Telex: 0605 5845 tlrx cy

DENMARK
Hewlett-Packard A/S
Birkerød Kongevejen 25
3460 **BIRKERØD**
Tel: (45/42) 81 66 40
Fax: (45/42) 81 58 10

Hewlett-Packard A/S
Voldbjergvej 16
8240 **RISSKOV,** Aarhus
Tel: (45/06) 17 60 00
Fax: (45/06) 17 60 58
Telex: 37409 hpas dk

DOMINICAN REPUBLIC
Esacomp S.A.
Edificio Mercantil del Caribe
Ave. John F. Kennedy No. 11
P.O. Box 1496
SANTO DOMINGO
Tel: (809) 567 3241
Fax: (809) 566 9774
Telex: ITT 346 0439

ECUADOR
CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
y Belgica
Casilla 6423 CCI
QUITO
Tel: (593) 245-0075
Fax: (593) 224-4223
Telex: 39322548 CYEDE ED

EGYPT
International Engineering Associates
6 El Gamea Street
AGUZA/CAIRO
Tel: (20/2) 71 21 68
Telex: 93830 IEA UN
Cable: INTEGASSO

EL SALVADOR
IPESA de El Salvador S.A.
29 Avenida Norte 1223
SAN SALVADOR
Tel: (503) 266 858
Telex: 301 20539 IPESA SAL

FINLAND
Hewlett-Packard Oy
Piispankallontie 17
02200 **ESPOO (Helsinki)**
Tel: (358/0) 887 21
Fax: (358/0) 887 22 77

Hewlett-Packard Oy
Väinönkatu 9 C
40100 **JYVÄSKYLA**
Tel: (358/41) 21 85 11

Hewlett-Packard Oy
Valtatie 57
90500 **OULU**
Tel: (358/81) 340 144
Fax: (358/81) 340 145

FRANCE

Aix-En-Provence
Hewlett-Packard France
ZI Mercure B
Rue Berthelot
13763 **LES MILLES** Cédex
Tel: (33) 42 24 32 43
Fax: (33) 42 59 48 72
Telex: 410 770

Bordeaux
Hewlett-Packard France
Domaine de Pélus
5, avenue de Pythagore
33700 **MERIGNAC**
Tel: (33) 56 34 00 84
Fax: (33) 56 34 80 84
Telex: 550 105

Brest
Hewlett-Packard France
ZAC Kergaradec
8, rue Fernand Forest
29239 **GOUESNOU**
Tel: (33) 98 41 87 90
Fax: (33) 98 41 74 77

Grenoble
Hewlett-Packard France
57, chemin du Vieux Chêne
ZIRST
38240 **MEYLAN**
Tel: (33) 76 90 38 40
Fax: (33) 76 41 05 36

Lille
Hewlett-Packard France
Parc d'activités des Prés
1, rue Papin
59658 **VILLENEUVE D'ASCQ**
Tel: (33) 20 47 78 78
Fax: (33) 20 33 36 77
Telex: 160 124

Lyon
Hewlett-Packard France
Chemin des Mouilles
BP 162
69131 **ECULLY** Cédex
Tel: (33) 72 29 32 93
Fax: (33) 78 33 49 82
Telex: 310 617

Nice
Hewlett-Packard France
Les Cardoulines - Bât. 2
Route des Dolines
Sophia Antipolis
06560 **VALBONNE**
Tel: (33) 93 65 39 40
Fax: (33) 93 65 31 34

Orléans
Hewlett-Packard France
Parc Tertiaire Héliopolis
Route de Micy
45380 **LA CHAPELLE ST MESMIN**
Tel: (33) 38 43 94 56
Fax: (33) 38 88 22 81
Telex: 783 497

Orsay
Hewlett-Packard France
Zone Industrielle de Courtaboeuf
1, avenue du Canada
91947 **LES ULIS** Cédex
Tel: (33/1) 69 82 60 60
Fax: (33/1) 69 82 60 61
Telex: 600 048

Rennes
Hewlett-Packard France
Parc d'activités de la Poterie
Rue Louis Kerautret-Botmel
35000 **RENNES**
Tel: (33) 99 51 42 44
Fax: (33) 99 32 29 19
Telex: 740 912

Rouen
Hewlett-Packard France
PAT Lavatine
3, rue Jacques Monod
BP 228
76136 **MONT-ST-AIGNAN**
Tel: (33) 35 59 19 20
Fax: (33) 35 59 85 11
Telex: 770 035

Strasbourg
Hewlett-Packard France
4, rue de la Faisanderie
Parc Club des Tânneries
BP 40
67381 **LINGOLSHEIM** Cédex
Tel: (33) 88 76 15 00
Fax: (33) 88 78 17 83
Telex: 890 141

Toulouse
Hewlett-Packard France
Innoparc
BP 167 Voie n° 7
31328 **LABEGE** Cédex
Tel: (33) 61 39 11 40
Fax: (33) 61 39 10 97
Telex: 531 639

GERMAN FEDERAL REPUBLIC

HEADQUARTERS
Hewlett-Packard GmbH
Herrenberger Strasse 130
7030 **BÖBLINGEN**
Tel: (49/7031) 14-0
Fax: (49/7031) 14-2999

Hewlett-Packard GmbH
Bad Homburg
Hewlett-Packard-Strasse
6380 **BAD HOMBURG**
Tel: (49) 6172 16-0
Fax: (49) 6172 16-1309
Telex: 410 844 hpbhg

Berlin
Hewlett-Packard GmbH
Lützowplatz 15
1000 **BERLIN 30**
Tel: (49/30) 2500 02-0
Fax: (49/30) 2500 02-62
Telex: 018 3405 hpbin d

Böblingen
Hewlett-Packard GmbH
Schickardstrasse 2
7030 **BÖBLINGEN**
Tel: (49/7031) 645-0
Fax: (49/7031) 645-429

Bonn
Hewlett-Packard GmbH
Friedrich-Ebert-Allee 26
5300 **BONN** 1
Tel: (49/228) 23400-1
Fax: (49/228) 235 315

Dortmund
Hewlett-Packard GmbH
Schleefstrasse 28
4600 **DORTMUND**-Aplerbeck
Tel: (49/231) 45001-0
Fax: (49/231) 45001-37
Telex: 822858 hepdod

Frankfurt
Hewlett-Packard GmbH
Reparaturzentrum Frankfurt
Berner Strasse 117
6000 **FRANKFURT 56**
Tel: (49/69) 5000 60
Fax: (49/69) 5000 6-200
Telex: 412 815 hpffm

Hamburg
Hewlett-Packard GmbH
Kapstadtring 5
2000 **HAMBURG 60**
Tel: (49/40) 63804-0
Fax: (49/40) 63804-327
Telex: 2163032

Hannover
Hewlett-Packard GmbH
Heidering 37-39
3000 **HANNOVER** 61
Tel: (49/511) 5706-0
Fax: (49/511) 5706-126

Mannheim
Hewlett-Packard GmbH
Rosslauer Weg 2-4
6800 **MANNHEIM** 31
Tel: (49/621) 7005-0
Fax: (49/621) 7005-200
Telex: 462105

Munchen (Munich)
Hewlett-Packard GmbH
Eschenstrasse 5
8028 **TAUFKIRCHEN**
Tel: (49/89) 61207-0
Fax: (49/89) 61207-300
Telex: 0524985 hpmch

Nürnberg
Hewlett-Packard GmbH
Emmericher Strasse 13
8500 **NURNBERG** 10
Tel: (49/911) 5205-0
Fax: (49/911) 5205-140
Telex: 623857

Ratingen
Hewlett-Packard GmbH
Berliner Strasse 111
4030 **RATINGEN** 1
Tel: (49/2102) 494-0
Fax: (49/2102) 494-300
Telex: 8589070

Ulm
Hewlett-Packard GmbH
Messerschmittstrasse 7
7910 **NEU ULM**
Tel: (49/731) 7073-0
Fax: (49/731) 7076-66
Telex: 712816

Waldbronn
Hewlett-Packard GmbH
Ermis-Allee
7517 **WALDBRONN** 2 (Karlsruhe)
Tel: (49/7243) 602-0
Fax: (49/7243) 602-512
Telex: 7265743

GHANA
Engineering Business Concept (E.B.C.)
21, Route du Canal
Zone 3
04 B.P. 1357
ABIDJAN
Ivory Coast
Tel: (225) 31 50 24
Fax: (225) 35 37 90

GREAT BRITAIN
See United Kingdom

GREECE
Hewlett-Packard Hellas
32, Kiffissias Avenue
15125 Amaroussion
ATHENS
Greece
Tel: (30/1) 682 88 11
Fax: (30/1) 683 29 78
Telex: 216588 hpat gr

GUATEMALA
ipesa de Guatemala
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: (502) 231-7853
Fax: (502) 231-6627
Telex: 3055765 IPESA GU

HONG KONG
Hewlett-Packard Asia, Ltd.
22/F, Bond Centre, West Tower
89 Queensway Central
HONG KONG
Tel: (852/5) 848-7777
Fax: (852/5) 868-4997
Cable: HEWPACK HONG KONG

SALES OFFICES
Arranged alphabetically by country (cont'd)

HUNGARY
Hewlett-Packard
Accredite Office Hungary
Radvany u. 7
1118 **BUDAPEST**
Tel: (36/1) 185 23 68
Fax: (36/1) 165 10 85
Telex: 861 227 632

ICELAND
Hewlett-Packard Iceland
Höfdabakka 9
110 **REYKJAVIK**
Tel: (354/1) 67-1000
Fax: (354/1) 67-3031
Telex: 37409

INDIA

Bangalore
Hewlett-Packard India Pvt. Ltd.
29 Cunningham Road
BANGALORE 560 052
Tel: (91/812) 261075
Fax: (91/812) 261554

Bombay
Hewlett-Packard India Pvt. Ltd.
Sahas
414/2 Veer Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: (91/22) 4306155
Fax: (91/22) 4307078

Calcutta
Hewlett-Packard India Pvt. Ltd.
DBS Executive Centre
8 Acharya J. C. Bose Road
CALCUTTA 700 017
Tel: (91/33) 444990
Fax: (91/33) 444614

Hyderabad
Hewlett-Packard India Pvt. Ltd.
9-5-13 Taramandal Complex
9th Floor
Saifabad
HYDERABAD 500 004
Tel: (91/842) 231756
Fax: (91/842) 8313444

New Delhi
Hewlett-Packard India Pvt. Ltd.
B-8 Jangpura
Mathura Road
NEW DELHI 110 014
Tel: (91/11) 690329
Fax: (91/11) 353315

INDONESIA
BERCA Indonesia P.T.
Wisma Dharmala Sakti
10/F, J1. Jendral Sudirman K.av 32
P.O. Box 41/JKPDS
JAKARTA 10001
Tel: (62/21) 578-0005
Fax: (62/21) 570-1287
Telex: 62065 BERCAMIA

IRAQ
Hewlett-Packard Trading S.A.
(Service Operation)
Al Mansoor City 609/10/7
BAGHDAD
Tel: (964/1) 541 49 73
Fax: (964/1) 541 49 73
Telex: 212455 hepairagik

IRELAND
Hewlett-Packard Ireland Ltd.
Temple House, Temple Road
Blackrock, Co. **DUBLIN**
Tel: (353/1) 883399
Fax: (353/1) 883742
Telex: 30439

ISRAEL
Computation and Measurement
Systems (CMS) Ltd.
11, Hashiosha Street
TEL-AVIV 67060
Tel: (972) 3 5380-333
Fax: (972) 3 5375-055
Telex: 371234 HPCMS

ITALY

Anzola Emilia-Bologna
Hewlett-Packard Italiana S.p.A.
Via Emilia, 51/C
40011 **ANZOLA EMILIA-BOLOGNA**
Tel: (39/51) 73 10 61
Fax: (39/51) 73 48 30
Telex: 51 16 30

Bari
Hewlett-Packard Italiana S.p.A.
Via Vitantonio di Cagno, 34
70124 **BARI**
Tel: (39/80) 41 07 44
Fax: (39/80) 41 78 51

Catania
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola, 43 G/C
95126 **CATANIA**
Tel: (39/95) 37 10 87
Fax: (39/95) 38 85 69

Corsico
Hewlett-Packard Italiana S.p.A.
Via G. di Vittorio, 10
20094 **CORSICO** (MI)
Tel: (39/2) 440 83 51
Fax: (39/2) 440 95 64
Telex: 440 9564

Firenze
Hewlett-Packard Italiana S.p.A.
Via Sacco e Vanzetti, 1
50145 **FIRENZE**
Tel: (39/55) 31 85 53
Fax: (39/55) 37 39 65

Genova
Hewlett-Packard Italiana S.p.A.
Viale Brigata Bisagno, 2
16129 **GENOVA**
Tel: (39/10) 54 11 41
Fax: (39/10) 59 17 33
Telex: 28 52 38

Limito
Hewlett-Packard Italiana S.p.A.
Via Nuova Rivoltana, 95
20090 **LIMITO** (MI)
Tel: (39/2) 757 61
Fax: (39/2) 757 6230
Telex: 32 31 16

Napoli
Hewlett-Packard Italiana S.p.A.
Via Orazio, 16
80122 **NAPOLI**
Tel: (39/81) 761 14 44
Fax: (39/81) 68 01 64
Telex: 71 06 98

Padova
Hewlett-Packard Italiana S.p.A.
Via Pellizzo, 15
35128 **PADOVA**
Tel: (39/49) 807 01 66
Fax: (39/49) 77 30 97
Telex: 43 03 15

Roma-Eur
Hewlett-Packard Italiana S.p.A.
Via del Tintoretto, 200
00142 **ROMA-EUR**
Tel: (39/6) 5 48 31
Fax: (39/6) 540 87 10
Telex: 62 65 24

Torino
Hewlett-Packard Italiana S.p.A.
C.so Svizzera, 185
10149 **TORINO**
Tel: (39/11) 74 40 44
Fax: (39/11) 771 08 15
Telex: 22 10 79

IVORY COAST
Engineering Business Concept (E.B.C.)
Angle Avenue J. Anoma et Bd.
République
08 B.P. 323 **ABIDJAN** 08
Tel: (225) 32 50 24/41 48 70
Fax: (225) 35 37 90

JAPAN

Akita
Yokogawa-Hewlett-Packard Ltd.
Nihonseimei Akita Chudori Bldg.
4-2-7 Nakadori
AKITA 010
Tel: (81/188) 36-5021
Fax: (81/188) 36-5099

Atsugi
Yokogawa-Hewlett-Packard Ltd.
Keno Kikaku Kogyo No. 2 Bldg.
9-32 Tamuracho
ATSUGI 243
Tel: (81/462) 25-0031
Fax: (81/462) 25-0064

Chiba
Yokogawa-Hewlett-Packard Ltd.
Fujimoto Daiichi Seimei Bldg.
3-3-1 Chuo
CHIBA 260
Tel: (81/472) 25-7701
Fax: (81/472) 21-0382

Fukuoka
Yokogawa-Hewlett-Packard Ltd.
Daisan Hakata-Kaisei Bldg.
1-3-6 Hakataekiminami Hakata-ku
FUKUOKA 812
Tel: (81/92) 472-8731
Fax: (81/92) 473-4745

Hiroshima
Yokogawa-Hewlett-Packard Ltd.
Yasuda-semei Hiroshima Bldg.
6-11 Hondori Naka-ku
HIROSHIMA 730
Tel: (81/82) 241-0611
Fax: (81/82) 241-0619

Kobe
Yokogawa-Hewlett-Packard Ltd.
Towa Building
2-2-3 Kaigandori, Chuo-ku
KOBE 650
Tel: (81/78) 392-4791
Fax: (81/78) 392-4839

Koriyama
Yokogawa-Hewlett-Packard Ltd.
Nihon-Dantai-seimei Bldg.
21-10 Toramaru-machi
KORIYAMA 963
Tel: (81/249) 39-7111
Fax: (81/249) 39-7234

Kumagaya
Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg.
3-4 Tsukuba
KUMAGAYA 360
Tel: (81/485) 24-6563
Fax: (81/485) 24-9050

Kyoto
Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614 Higashi-Shokoji-cho
Karasuma-nishi-iru, Shiokoji-dori
Shimogyo-ku
KYOTO 600
Tel: (81/75) 343-0921
Fax: (81/75) 343-4356

Mito
Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg.
1-4-73 Sannomaru
MITO 310
Tel: (81/292) 25-7470
Fax: (81/292) 31-6589

Miyazaki
Yokogawa-Hewlett-Packard Ltd.
Nomura Shoken Bldg.
4-1-2 Tachibana-dori
Miyazaki-C.
MIYAZAKI 880
Tel: (81/985) 23-7280
Fax: (81/985) 23-7864

Nagano
Yokogawa-Hewlett-Packard Ltd.
Nagano-Tokyo-kaijo Bldg.
1081, Minamiagatamachi
NAGANO 380
Tel: (81/262) 24-8012
Fax: (81/262) 24-8016

Nagoya
Yokogawa-Hewlett-Packard Ltd.
Nagoya Kokusai Center Bldg.
1-47-1 Nakono, Nakamura-ku
NAGOYA 450
Tel: (81/52) 571-2262
Fax: (81/52) 565-0896

Nara
Yokogawa-Hewlett-Packard Ltd.
Nissei Nara Ekimae Bldg.
1-1-15 Omiya-cho
NARA 630
Tel: (81/742) 22-8235
Fax: (81/742) 22-8219

Oomiya
Yokogawa-Hewlett-Packard Ltd.
Saikyoren Bldg
1-2 Dotemachi
OOMIYA 330
Tel: (81/48) 645-8031
Fax: (81/48) 645-8001

Osaka
Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg
5-4-20 Nishinakajima
Yodogawa-ku
OSAKA 532
Tel: (81/6) 304-6021
Fax: (81/6) 304-0216

Sapporo
Yokogawa-Hewlett-Packard Ltd.
Sumitomo-seimei Sapporo Chu Bldg.
1-1-14 Nanjo-higashi Chuo-ku
SAPPORO 640
Tel: (81/11) 251-1011
Fax: (81/11) 222-3239

Sendai
Yokogawa-Hewlett-Packard Ltd.
Yamaguchi Bldg.
1-1-31 Ichibancho Aoba-ku
SENDAI 980
Tel: (81/22) 225-1011
Fax: (81/22) 225-1616

Suwa-gun
Yokogawa-Hewlett-Packard Ltd.
Daimon Bldg
139-1 Yaginishi Shimosuwa-cho
SUWA-GUN 393
Tel: (81/266) 28-8851
Fax: (81/266) 28-8873

Tokyo
Yokogawa-Hewlett-Packard Ltd.
Shinjuku Daiichi-seimei Bldg
2-7-1 Nishi-shinjuku
Shinjuku-ku
TOKYO 160
Tel: (81/3) 342-2734
Fax: (81/3) 348-7969

Yokogawa-Hewlett-Packard Ltd.
9-1 Takakura-cho
Hachioji-shi
TOKYO 192
Tel: (81/426) 42-1231
Fax: (81/426) 45-2631

Yokogawa-Hewlett-Packard Ltd.
Tokyo-Nissan Bldg.
1-6-34 Konan, Minato-ku
TOKYO, 108
Tel: (81/3) 458-5411
Fax: (81/3) 458-5400

Yokogawa-Hewlett-Packard Ltd.
3-29-21 Takaido-higashi
Suginami-ku
TOKYO 168
Tel: (81/3) 331-6111
Telex: 232 2024 YHPTOK

Yokogawa-Hewlett-Packard Ltd.
Tokyu Sakuragaokacho Bldg.
31-2 Sakuragaoka Shibuya-ku
TOKYO 150
Tel: (81/3) 780-5511
Fax: (81/3) 780-5510

Toyota
Yokogawa-Hewlett-Packard Ltd.
Toyota-Tokyo-Kaijo Bldg.
1-179 Miyuki-honmachi
TOYOTA 473
Tel: (81/565) 27-5611
Fax: (81/565) 27-5400

Tsukuba
Yokogawa-Hewlett-Packard Ltd.
Issei Bldg
2-3-17 Takezono
TSUKUBA 305
Tel: (81/298) 51-5141
Fax: (81/298) 51-5381

Utsunomiya
Yokogawa-Hewlett-Packard Ltd.
Chiyodaseimei-Utsunomiya Bldg.
2-3-1 Odori
UTSUNOMIYA 320
Tel: (81/286) 33-1153
Fax: (81/286) 33-1175

Yokohama
Yokogawa-Hewlett-Packard Ltd.
No. 2 Yasuda Bldg.
2-32-12 Tsuruyacho
Kanagawa-ku
YOKOHAMA-SHI KANAGAWA
Tel: (81/45) 313-1352
Fax: (81/45) 312-1846

JORDAN
Scientific & Medical Supplies Co.
P.O. Box 1387
AMMAN
Tel: (962/6) 62 49 07
Fax: (962/6) 62 82 58
Telex: 0493 21456 sabco jo

KENYA
ADCOM Ltd., inc., Kenya
P.O. Box 30070
NAIROBI
Tel: (254/2) 33 1955
Telex: 22639

KOREA
Samsung Hewlett-Packard Co. Ltd.
Dongbang Building, 12-16/F
36-1 Yeoeuido-dong
Youngdeungpo-Ku
SEOUL, 150
Tel: (82/2) 769-0114
Fax: (82/2) 784-7084
Telex: SAM HP K 25166

Samsung Hewlett-Packard Co. Ltd.
13/F Taegu Bank Bldg.
118, 2-Ka
Suseong-Dong
Suseong-Ku
TAEGU
Tel: (82/53) 754-2666
Fax: (82/53) 752-4696

Samsung Hewlett-Packard Co. Ltd.
8/F, Daehankyoyuk Insurance Bldg.
382-1 Sun Hwa-Dong
Chung-Gu
TEEJON 301-050
Tel: (82/42) 256-6725
Fax: (82/42) 256-6727

KUWAIT
Al-Khaldiya Trading & Contracting
P.O. Box 830
SAFAT 13009
Tel: (965) 242 49 10, 241 17 26
Fax: (965) 245 20 67
Telex: 22481 AREEG KT
Cable: VISCOUNT

LEBANON
Computer Information Systems S.A.L.
Chammas Building
P.O. Box 11-6274
BOLA-BEIRUT
Tel: (961/1) 89 31 13
Fax: (961/1) 58 18 34
Telex: 42309 chacis le

LUXEMBOURG
Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedal
1200 **BRUSSELS**
Tel: (32/2) 761-3111
Fax: (32/2) 763-0613
Telex: 23 494 palobe b

MALAWI
Field Consolidated (Private) Ltd.
System Division
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Zimbabwe
Tel: (263/4) 73 98 81
Fax: (263/4) 70 20 08
Telex: 0907 26241

MALAYSIA
Hewlett-Packard Sales (M) SDN BHD
9/F, Chung Khaw Bank Building
Section 46, Jalan Raja Laut
GPO Box 11119
50736 **KUALA LUMPUR**
Tel: (60/3) 298-6555
Fax: (60/3) 291-5495

Hewlett-Packard Sales (M) SDN BHD
6/F, Wisma Penang Garden
42, Jalan Sultan Ahmad Shah
10050 **PENANG**
Tel: (60/4) 376-532
Fax: (60/4) 371-027

MEXICO
Hewlett-Packard de Mexico,
S.A. de C.V.
Rio Nio No. 4049 Desp. 12
Fracc. Cordoba
CIUDAD JUAREZ, Mexico
Tel: (52/161) 3 15 62

Hewlett-Packard de Mexico,
S.A. de C.V.
Condominio Kadereyta
Circuito del Mezon No. 186 Desp. 6
Col. Del Prado
76030 **QUERETARO,** QRO
Tel: (52/4) 636-0271

Hewlett-Packard de Mexico,
S.A. de C.V.
Czda. del Valle
409 Ote. 4th Piso
Colonia del Valle
Municipio de Garcia
66220 **GARZA GARCIA,** N.L.
Tel: (52/8) 378-4240
Telex: 382410 HPMY

Hewlett-Packard de Mexico,
S.A. de C.V.
Monti Morelos No. 299
Fraccionamiento Loma Bonita 45060
GUADALAJARA, Jalisco
Tel: (52/3) 631-4600
Telex: 0684 186 ECOME

Hewlett-Packard de Mexico,
S.A. de C.V.
Monte Pelvoux No. 111
Lomas de Chapultepec
11000 **MEXICO,** D.F.
Tel: (52/5) 202-0155
Fax: (52/5) 540-4208

Hewlett-Packard de Mexico,
S.A. de C.V.
Blvd. Independencia
No. 2000 Ote. Piso 3
Col. Estrella
27010 **TORREON,** COA.
Tel: (52/1) 718-2201

MOROCCO
SICOTEL
Complexe des Habous
Tour C, avenue des Far
CASABLANCA 01
Tel: (212) 31 22 70
Telex: 0407 27604

NETHERLANDS
Hewlett-Packard Nederland B.V.
Startbaan 16
P.O. Box 667
1180 AR **AMSTELVEEN**
Tel: (31/20) 547 69 11
Fax: (31/20) 471 825
Telex: 13 216 HEPA NL

SALES OFFICES
Arranged alphabetically by country (cont'd)

NETHERLANDS (cont'd)

Hewlett-Packard Nederland B.V.
Boschdijk 131
P.O. Box 2342
5612 HB **EINDHOVEN**
Tel: (31/40) 32 69 11
Fax: (31/40) 44 65 46
Telex: 51484 hepae nl

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
Epsom, **AUCKLAND** 3
Tel: (64/9) 687-159
Fax: (64/9) 600-507

Hewlett-Packard (N.Z.) Ltd.
186-190 Willis Street
WELLINGTON 1
Tel: (64/4) 820-400
Fax: (64/4) 843-380

NIGER

Engineering Business Concept (E.B.C.)
21, Route du Canal
Zone 3
04 B.P. 1357
ABIDJAN
Ivory Coast
Tel: (225) 21 50 24
Fax: (225) 35 37 90

NIGERIA

Management Information Systems Co., Ltd.
3, Gerrard Road, Ikoyi
LAGOS
Tel: (234/1) 68 08 87
Fax: (234/1) 68 54 87
Telex: 23582

NORTHERN IRELAND
See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Oesterndalen 16-18
P.O. Box 34
N-1345 **OESTERAAS**
Tel: (47/2) 24-60 90
Fax: (47/2) 24 66 96, 24 30 78
Telex: 76621 HPNAS N

Hewlett-Packard Norge A/S
Boemergt. 42
Box 2470
N-5037 **SOLHEIMSVIK**
Tel: (47/5) 29 00 90
Fax: (47/5) 29 10 72

OMAN

Imtac LLC
P.O. Box 9196
MINA AL FAHAL
Tel: (968) 70-77-27, 70-77-23
Fax: (968) 79 66 39
Telex: 0498 3865

PAKISTAN

Mushko Electronics (PVT) Ltd.
68-W Sama Plaza
Blue Area, F-7
ISLAMABAD
Tel: (92/51) 814 492
Fax: (92/51) 821 201
Telex: 54001 Muski Pk

Mushko Electronics (PVT) Ltd.
Victoria Chambers
Abdullah Haroon Road
KARACHI
Tel: (92/21) 524 131, 524 132
Fax: (92/21) 512 298
Telex: 2894 MUSKO PK

PANAMA

Electronico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA CITY
Tel: (507) 636 613
Fax: (507) 361 820
Telex: 368 3483 ELECTRON PG

PERU

Cia Electro Médica, S.A.
Los Flamencos No. 145, Ofna. 301 & 302
San Isidro, **LIMA** 1
Tel: (51/14) 41-4325, 41-3703
Fax: (51/14) 42-3572
Telex: 39425257 PE PB SIS

PHILIPPINES

The Online Advanced Systems Corp.
2nd Floor, Electra House
115-117 Esteban Street
Legaspi Village, Makati
Metro **MANILA**
Tel: (63/2) 818-4394
Fax: (63/2) 816-0590
Telex: 63274 ONLINE PN

PORTUGAL

Hewlett-Packard Portugal S.A.
Torre de Santo Antonio
Rua Gregorio Lopes, Lote 1732B
Restelo
1400 **LISBON**
Tel: (351) 617 343/44/46
Fax: (351) 617345
Telex: 43126

Hewlett-Packard Portugal S.A.
Edificio Tranquilidade
Rua D. Manuel, 296
4000 **PORTO**
Tel: (351) 493 122
Telex: 26054
Fax: (351) 488 721

PUERTO RICO

Hewlett-Packard Puerto Rico
P.O. Box 4048
AGUADILLA 00605
Tel: (809) 890-6000

Hewlett-Packard Puerto Rico
101 Munoz Rivera Avenue
Esu. Calle Ochoa
HATO REY, 00918
Tel (809) 754-7800

QATAR

Qatar Datamation Systems
P.O. Box 350
DOHA
Tel: (974) 44 19 16
Fax: (974) 44 12 19
Telex: 4833

SAUDI ARABIA

Modern Electronic Establishment
P.O. Box 281
Thouqbah
AL-KHOBAR 31952
Tel: (966/3) 895-1760, 895-1764
Telex: 0495 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR

Modern Electronic Establishment
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH 21431
Tel: (966/2) 644 96 28
Fax: (966/2) 644 18 33
Cable: ELECTA JEDDAH

Modern Electronic Establishment
P.O.Box 22015
RIYADH 11495
Tel: (966/1) 476 30 30
Fax: (966/1) 476 76 49
Telex: 402049 MEERYD SJ

SCOTLAND
See United Kingdom

SINGAPORE

Hewlett-Packard Singapore Ltd.
150 Beach Road
#29-00 Gateway West
PO Box 2, Bras Basah Post Office
SINGAPORE, 9118
Tel: (65) 291 9088
Fax: (65) 292 7089
Telex: RS 34209

SOUTH AFRICA

HI Performance Systems (Pty.) Ltd.
P.O. Box 120, Howard Place
CAPE TOWN 7450
Tel: (27/21) 53-7954
Fax: (27/21) 53-5119

HI Performance Systems (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: (27/11) 802-5111
Fax: (27/11) 802-6332

SPAIN

Barcelona

Hewlett-Packard Española S.A.
Avda. Diagonal, 605
08028 **BARCELONA**
Tel: (34/3) 401 91 00
Fax: (34/3) 230 84 68
Telex: 52603 hpbee

Bilbao

Hewlett-Packard Española, S.A.
Avda. de Zugazarte, 8
(Edificio El Abra 4)
48930 **LAS ARENAS-GUECHO**
Tel: (34/4) 464 32 55
Fax: (34/4) 464 90 83
Telex: 33032

Madrid

Hewlett-Packard Española S.A.
Crta. de la Coruña, km 16,500
28230 Las Rozas
MADRID
Tel: (34/1) 637 00 11
Fax: (34/1) 637 55 62
Telex: 23515 HPE

Sevilla

Hewlett-Packard Española S.A.
c/Luis de Morales, S/N
Edificio Forum
41005 **SEVILLA**
Tel: (34/5) 458 17 00
Fax: (34/5) 457 57 20
Telex: 72933

Valencia

Hewlett-Packard Española S.A.
Isabel La Católica, 8
46004 **VALENCIA**
Tel: (34/6) 351 59 44
Telex: 63435
Fax: (34/6) 351 49 06

SWEDEN

Göteborg

Hewlett-Packard Sverige AB
Topasgatan 1A
Box 266
42123 **VÄSTRA-FRÖLUNDA**
Tel: (46/31) 89 10 00
Fax: (46/31) 49 50 99

Malmö

Hewlett-Packard Sverige AB
Östra Tullgatan 3
20011 **MALMÖ**
Box 6132
Tel: (46/40) 702 70
Fax: (46/40) 97 74 18

Örebro

Hewlett-Packard Sverige AB
Elementvägen 16
70227 **ÖREBRO**
Tel: (46/19) 10 48 80
Fax: (46/19) 27 01 87

Stockholm

Hewlett-Packard Sverige AB
Skalholtsgatan 9, Kista
P.O. Box 19
16493 **KISTA**
Tel: (46/8) 750 20 00
Fax: (46/8) 752 77 81
Telex: (854) 17886

SWITZERLAND

Basel
Hewlett-Packard (Schweiz) AG
Clarastrasse 12
4058 **BÂLE**
Tel: (41/61) 681 59 20
Fax: (41/61) 681 98 59
Telex: 964 719

Geneva/Meyrin
Hewlett-Packard (Schweiz) AG
39, rue de Veyrot
1217 **MEYRIN** 1
Tel: (41/22) 780 41 11
Fax: (41/22) 782 13 68
Telex:27333 HPAG CH

Wilden
Hewlett-Packard (Schweiz) AG
Allmend 2
8967 WIDEN
Tel: (41/57) 32 11 11
Telex: 828 010 hpag ch
Fax: (41/57) 31 73 74

TAIWAN
Hewlett-Packard Taiwan Ltd.
11/F, 456, Chung Hsiao 1st Road
KAOHSIUNG
Tel: (886/7) 241-2318

Hewlett-Packard Taiwan Ltd.
THM Office
20, Kao-Shuang Road
PIN CHEN, Taoyuan
Tel: (886/3) 492-9660
Fax: (886/3) 492-8087

Hewlett-Packard Taiwan Ltd.
126-1, Sec. 2
Lu-Shung Road
TAICHUNG
Tel: (886/4) 237-1425

Hewlett-Packard Taiwan Ltd.
8/F, Hewlett-Packard Building
337 Fu Hsing North Road
TAIPEI
Tel: (886/2) 712-0404
Fax: (886/2) 715-0851

TANZANIA
Adcom Ltd, Inc. Kenya
P.O. Box 30070
NAIROBI
Kenya
Tel: (254/2) 33 19 55
Telex: 0987 22639

THAILAND
Hewlett-Packard Thailand Ltd.
10th floor
Pacific Place
140 Sukhumvit Road
BANGKOK 10110
Tel: (66/2) 254-6720
Fax: (66/2) 254-6731
Telex: 086 84439 Simonco TH
Cable: UNIMESA Bangkok

TOGO
Engineering Business Concept (E.B.C)
21, Route du Canal
Zone 3
04 B.P. 1357
ABIDJAN
Ivory Coast
Tel: (225) 21 50 24
Fax: (225) 25 27 90

TRINIDAD & TOBAGO
Computer and Controls Ltd.
80-82 Edwards Street
P.O. Box 51
PORT-OF-SPAIN, Trinidad
Tel: (809) 624-2388/2389
Fax: (809) 625-6547

TUNISIA
Precision Electronique
5, rue de Chypre
Mutuelleville
1002 **TUNIS BELVEDERE**
Tunisia
Tel: (216/1) 78 50 37
Telex: 0409 13238

TURKEY
Hewlett-Packard Bilgisayar Ve Olcum Sistemleri A.S.
Paris Caddesi No 3
Diare 9
06670 **ANKARA**
Tel: (90/4) 125 83 13
Fax: (90/4) 125 47 45
Telex: 0607 46180

Hewlett-Packard Bilgisayar Ve Olcum Sistemleri A.S.
Mesrutiyet Mah, 19 Mayis Cad.
Nova-Baran Plaza Kat: 11-12
SISLI / ISTANBUL
Tel: (901) 175 29 70
Fax: (901) 175 29 92
Telex: 0607 39150

UGANDA
Adcom Ltd, Inc. Kenya
P.O Box 30070
NAIROBI
Kenya
Tel: (254/2) 33 19 55
Telex: 0987 22639

UNION OF SOVIET SOCIALIST REPUBLICS
Hewelt-Packard Representative Office
Pokrovski Blvd. 4/17 KV12
10100 **MOSCOW**
Tel: (007/095) 923 5001
Fax: (007/095) 230 2611

UNITED ARAB EMIRATES
Emitac Ltd.
P.O. Box 2711
ABU DHABI
Tel. (971/2) 770419
Fax (971/2) 72 30 58

Emitac Ltd.
Block "B" Arenco Bldg.
Zabel Road
P.O. Box 8391
DUBAI
Tel: (971/4) 37 75 91
Fax: (971/4) 37 08 99

Emitac Ltd.
P.O. Box 1641
SHARJAH
Tel: (971/6) 591181
Telex: 0893 48710 EMITAC EM
Cable: EMITAC SHARJAH

UNITED KINGDOM

ENGLAND
Birmingham
Hewlett-Packard Limited
Avon House
435 Stratford Road
Shirley, **SOLIHULL**
West Midlands B90 4BL
Tel: (44/21) 745-8800
Fax: (44/21) 733-5104
Telex: 339 105

Bracknell
Hewlett-Packard Limited
Coln Road
BRACKNELL
Berkshire RG 12 1HN
Tel: (44/344) 36 0000
Fax: (44/344) 36 3344
Telex: 849 555

Central London
Hewlett-Packard Limited
Bridewell House
9 Bridewell Place
LONDON EC4V 6BS
Tel: (44/71) 583-6565
Fax: (44/71) 583-6565
Ext. 57713/57803
Telex: 298163

Gatwick
Hewlett-Packard Limited
Churchill Court
Gatewick Road
CRAWLEY
West Sussex RH10 2PN
Tel: (44/293) 562955
Fax: (44/293) 578574
Telex: 878457

Manchester
Hewlett-Packard Limited
Heathside Park Road
Cheadle Heath
STOCKPORT
Cheshire SK3 ORB
Tel: (44/61) 428-0828
Fax: (44/61) 495-5009
Telex: 668 068

Uxbridge
Hewlett-Packard Limited
Harman House
No. 1 George Street
UXBRIDGE
Middlesex UB8 1YH
Tel: (44/895) 72020
Fax: (44/895) 75260
Telex: 893 135

Winnersh
Hewlett-Packard Limited
King Street Lane
WINNERSH Wokingham
Berkshire RG 11 5AR
Tel: (44/734) 78 4774
Fax: (44/734) 77 7285
Telex: 847 178

NORTHERN IRELAND
Hewlett-Packard (Ireland) Ltd.
Carrickfergus Industrial Centre
75 Belfast Road, **CARRICKFERGUS**
Co. Antrim BT38 8PM
Tel: (44/960) 367333

SCOTLAND
Hewlett-Packard Ltd.
1/3 Springburn Place
College Milton North
EAST KILBRIDE, G74 5NU
Tel: (44/35) 524 92 61
Fax: (44/35) 523 59 29
Telex: 779615

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: (44/31) 331 11 88
Fax: (44/31) 331

UNITED STATES
Hewlett-Packard Co.
Customer Information Center
Tel: (800) 752-0900
Hours: 6:00 AM to 5:00 PM
Pacific Time

Alabama
Hewlett-Packard Co.
2100 Riverchase Center
Building 100 - Suite 118
BIRMINGHAM, AL 35244
Tel: (205) 988-0547
Fax: (205) 988-5308

Hewlett-Packard Co.
620 Discovery Dr.
HUNTSVILLE, AL 35806
Tel: (205) 830-2000
Fax: (205) 830-1427

Alaska
Hewlett-Packard Co.
4000 Old Seward Highway
Suite 101
ANCHORAGE, AK 99503
Tel: (907) 563-6855
Fax: (907) 561-7409

SALES OFFICES
Arranged alphabetically by country (cont'd)

UNITED STATES (cont'd)

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
Fax: (602) 273-8080

Hewlett-Packard Co.
3400 East Britannia Dr.
Bldg. C, Suite 124
TUCSON, AZ 85706
Tel: (602) 573-7400
Fax: (602) 573-7429

Arkansas

Hewlett-Packard Co.
10816 Executive Center Dr
Conway Bldg. Suite 116
LITTLE ROCK, AR 72211
Tel: (501) 225-7178
Fax: (501) 221-3614

California

Hewlett-Packard Co.
26701 W. Argoura Rd.
CALABASAS, CA 91302
Tel: (818) 880-3400
Fax: (818) 880-3437

Hewlett-Packard Co.
353 Lakeside Dr
FOSTER CITY, CA 94404
Tel: (415) 378-8400
Fax: (415) 378-8405

Hewlett-Packard Co.
1907 North Gateway Blvd.
FRESNO, CA 93727
Tel: (209) 252-9652
Fax: (209) 456-9302

Hewlett-Packard Co.
1421 S. Manhattan Av.
FULLERTON, CA 92631
Tel: (714) 999-6700
Fax: (714) 778-3033

Hewlett-Packard Co.
7408 Hollister Ave. #A
GOLETA, CA 93117
Tel: (805) 685-6100
Fax: (805) 685-6163

Hewlett-Packard Co.
9800 Muirlando Ave.
IRVINE, CA 92718
Tel: (714) 472-3000
Fax: (714) 581-3607 (Direct Dial only)

Hewlett-Packard Co.
2525 Grand Avenue
LONG BEACH, CA 90815
Tel: (213) 498-1111
Fax: (213) 494-1986

Hewlett-Packard Co.
5651 West Manchester Ave.
LOS ANGELES, CA 90045
Tel: (213) 337-8000
Fax: (213) 337-8338

Hewlett-Packard Co.
351 E. Evelyn Ave.
Bldg. 33
MOUNTAIN VIEW, CA 94039
Tel: (415) 694-2000
Fax: (415) 694-0600

Hewlett-Packard Co.
5161 Lankershim Blvd.
NORTH HOLLYWOOD, CA 91601
Tel: (818) 505-5600
Fax: (818) 505-5875

Hewlett-Packard Co.
5725 W. Las Positas Blvd.
PLEASANTON, CA 94566
Tel: (415) 460-0282
Fax: (415) 460-0713

Hewlett-Packard Co.
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
Fax: (916) 927-7152

Hewlett-Packard Co.
9606 Aero Drive
SAN DIEGO, CA 92123
Tel: (619) 279-3200
Fax: (619) 268-8487

Hewlett-Packard Co.
50 Fremont St. Suite 200
SAN FRANCISCO, CA 94105
Tel: (415) 882-6800
Fax: (415) 882-6805

SANTA BARBARA (see **GOLETA**)

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 988-7000
Fax: (408) 988-7103

Hewlett-Packard Co.
5280 Valentine Rd. Suite 205
VENTURA, CA 93003
Tel: (805) 658-6898
Fax: (805) 650-0721

Colorado

Hewlett-Packard Co.
3005 Center Green Drive #205
Suite A
BOULDER, CO 80301
Tel: (303) 530-3940
Fax: (303) 938-3025

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
Fax: (303) 649-5787

Connecticut

Hewlett-Packard Co.
3 Parkland Dr.
DARIEN, CT 06820
Tel: (203) 656-0040
Fax: (203) 656-5563

Hewlett-Packard Co.
115 Glastonbury Blvd
GLASTONBURY, CT 06033
Tel: (203) 633-8100
Fax: (203) 659-6087

District of Columbia

(see Rockville, MD)

Florida

Hewlett-Packard Co.
5900 N. Andrews, Suite 100
FORT LAUDERDALE, FL 33309
Tel: (305) 938-9800
Fax: (305) 938-2293

Hewlett-Packard Co.
6800 South Point Parkway
Suite 301
JACKSONVILLE, FL 32216
Tel: (904) 636-9955
Fax: (904) 636-9955

Hewlett-Packard Co.
255 East Drive, Suite B
MELBOURNE, FL 32901
Tel: (407) 729-0704
Fax: (407) 723-4557

Hewlett-Packard Co.
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (407) 859-2900
Fax: (407) 826-9309

Hewlett-Packard Co.
4700 Bayou Blvd.
Building 5
PENSACOLA, FL 32503
Tel: (904) 476-8422
Fax: (904) 476-4116

Hewlett-Packard Co.
5550 Idlewild, #150
TAMPA, FL 33634
Tel: (813) 884-3282
Fax: (813) 889-4445

Hewlett-Packard Co.
2015 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Fax: (404) 980-7669

Hewlett-Packard Co.
3607 Parkway Lane
Suite 300
NORCROSS, GA 30092
Tel: (404) 448-1894
Fax: (404) 246-5206

Hawaii

Hewlett-Packard Co.
Pacific Tower
1001 Bishop St.
Suite 2400
HONOLULU, HI 96813
Tel: (808) 526-1555
Fax: (808) 536-7873

Idaho

Hewlett-Packard Co.
11309 Chinden Blvd.
BOISE, ID 83714
Tel: (208) 323-2700
Fax: (208) 323-2528

Illinois

Hewlett-Packard Co.
2205 E. Empire St.
BLOOMINGTON, IL 61704
Tel: (309) 662-9411
Fax: (309) 662-0351

Hewlett-Packard Co.
525 W. Monroe St., Suite 1308
CHICAGO, IL 60606
Tel: (312) 930-0010
Fax: (312) 930-0986

Hewlett-Packard Co.
1200 East Diehl Road
NAPERVILLE, IL 60566
Tel: (708) 505-8800
Fax: (708) 505-7876

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (708) 255-9800
Fax: (708) 259-5878

Indiana

Hewlett-Packard Co.
11911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100
Fax: (317) 843-1291

Hewlett-Packard Co.
111 E. Ludwig Road
Suite 108
FT. WAYNE, IN 46825
Tel: (219) 482-4283
Fax: (219) 482-9907

INDIANAPOLIS (see **CARMEL**)

Iowa

Hewlett-Packard Co.
4050 River Center Court
CEDAR RAPIDS, IA 52402
Tel: (319) 393-0606
Fax: (319) 378-1024

Hewlett-Packard Co.
4201 Corporate Dr.
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
Fax: (515) 224-1870

Kansas

Hewlett-Packard Co.
North Rock Business Park
3450 N. Rock Rd.
Suite 300
WICHITA, KS 67226
Tel: (316) 636-4040
Fax: (316) 636-4504

Kentucky

Hewlett-Packard Co.
305 N. Hurstbourne Lane,
Suite 100
LOUISVILLE, KY 40222
Tel: (502) 426-0100
Fax: (502) 426-0322

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
Tel: (504) 467-4100
Fax: (504) 467-4100 x 291

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Fax: (301) 362-7650

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 258-2000
Fax: (301) 258-5986

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (508) 682-1500
Fax: (508) 794-2619

Hewlett-Packard Co.
29 Burlington Mall Rd.
BURLINGTON, MA 01803-4514
Tel: (617) 270-7000
Fax: (617) 221-5240

Michigan

Hewlett-Packard Co.
3033 Orchard Vista S.E.
GRAND RAPIDS, MI 49546
Tel: (616) 957-1970
Fax: (616) 956-9022

Hewlett-Packard Co.
39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200
Fax: (313) 349-9240

Hewlett-Packard Co.
560 Kirts Rd.
Suite 101
TROY, MI 48084
Tel: (313) 362-5180
Fax: (313) 362-3028

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
Fax: (612) 641-9787

Mississippi

Hewlett-Packard Co.
800 Woodland Parkway, Suite 101
RIDGELAND, MS 39157
Tel: (601) 957-0730
Fax: (601) 957-2515

Missouri

Hewlett-Packard Co.
6601 Winchester Ave.
KANSAS CITY, MO 64133
Tel: (816) 737-0071
Fax: (816) 737-4690

Hewlett-Packard Co.
530 Maryville Centre Drive
ST. LOUIS, MO 63140
Tel: (314) 542-1500
Fax: (314) 542-1586

Nebraska

Hewlett-Packard
11626 Nicholas St.
OMAHA, NE 68154
Tel: (402) 493-0300
Fax: (402) 493-4334

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07653
Tel: (201) 599-5000
Fax: (201) 599-5382

Hewlett-Packard Co.
10 Sylvan Way
PARSIPPANY, NJ 07054
Tel: (201) 682-4000
Fax: (201) 682-4031

Hewlett-Packard Co.
20 New England Ave. West
PISCATAWAY, NJ 08854
Tel: (201) 562-6100
Fax: (201) 562-6246

New Mexico

Hewlett-Packard Co.
7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100
Fax: (505) 823-1243

Hewlett-Packard Co.
1362-C Trinity Dr.
LOS ALAMOS, NM 87544
Tel: (505) 662-6700
Fax: (505) 662-4312

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
Fax: (518) 458-1550 x 0393

Hewlett-Packard Co.
130 John Muir Dr.
AMHERST, NY 14228
Tel: (716) 689-3003
Fax: (716) 636-7034

BUFFALO (see AMHERST)

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
Fax: (716) 223-6331

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
Fax: (315) 451-1820 x 255

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 7th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
Fax: (212) 330-6967

Hewlett-Packard Co.
7 Old Sod Farm Road
MELVILLE, NY 11714
Tel: (516) 753-0555
Fax: (516) 753-3469

Hewlett-Packard Co.
2975 Westchester Ave
PURCHASE, NY 10577
Tel: (914) 935-6300
Fax: (914) 935-6497

ROCHESTER (see FAIRPORT)

SYRACUSE (see LIVERPOOL)

Hewlett-Packard Co.
Executive Square Office Bldg.
66 Middlebush Rd.
WAPPINGERS FALLS, NY 12590
Tel: (914) 298-9125
Fax: (914) 298-9154

North Carolina

Hewlett-Packard Co.
305 Gregson Dr.
CARY, NC 27511
Tel: (919) 467-6600
Fax: (919) 460-2296
(919) 460-2297

Hewlett-Packard Co.
P.O. Box 240318
CHARLOTTE, NC 28224
Tel: (704) 527-8780
Fax: (704) 523-7857

Hewlett-Packard Co.
7029 Albert Pick Rd. #100
GREENSBORO, NC 27409
Tel: (919) 665-1800
Fax: (919) 668-1797
Mailing Address
PO Box 26500
Greensboro, NC 27426

RALEIGH (see CARY)

Ohio

AKRON (see COPLEY)

Hewlett-Packard Co.
4501 Erskine Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
Fax: (513) 891-0033

CLEVELAND (see STRONGSVILLE)

Hewlett-Packard Co.
Montrose West Ave.
COPLEY, OH 44321
Tel: (216) 666-7711
Fax: (216) 666-6054

Hewlett-Packard Co.
7887 Washington Village Dr.
DAYTON, OH 45459
Tel: (513) 433-2223
Fax: (513) 433-8633

Hewlett-Packard Co.
15885 Sprague Road
STRONGSVILLE, OH 44136
Tel: (216) 243-7300
Fax: (216) 234-7230

Hewlett-Packard Co.
One Maritime Plaza, 5th Floor
720 Water Street
TOLEDO, OH 43604
Tel: (419) 242-2200
Fax: (419) 241-7655

Hewlett-Packard Co.
675 Brooksedge Blvd.
WESTERVILLE, OH 43081
Tel: (614) 891-3344
Fax: (614) 891-1476

Oklahoma

Hewlett-Packard Co.
3525 N.W. 56th St.
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499
Fax: (405) 942-2127

Hewlett-Packard Co.
6655 South Lewis,
Suite 105
TULSA, OK 74136
Tel: (918) 481-6700
Fax: (918) 481-2250

Oregon

EUGENE (see WILSONVILLE)

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 484-4085
Fax: (503) 682-8155

Pennsylvania

Hewlett-Packard Co.
Heatherwood Industrial Park
50 Dorchester Rd.
P.O. Box 6080
HARRISBURG, PA 17112
Tel: (717) 657-5900
Fax: (717) 657-5946

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
Fax: (412) 963-1300

Hewlett-Packard Co.
2750 Monroe Boulevard
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
Fax: (215) 666-2034

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29212
Tel: (803) 732-0400
Fax: (803) 732-4567

Hewlett-Packard Co.
545 N. Pleasantburg Dr.
Suite 100
GREENVILLE, SC 29607
Tel: (803) 232-8002
Fax: (803) 232-8739

Tennessee

Hewlett-Packard Co.
One Energy Center Suite 200
Pellissippi Pkwy.
KNOXVILLE, TN 37932
Tel: (615) 966-4747
Fax: (615) 966-8147

SALES OFFICES
Arranged alphabetically by country (cont'd)

UNITED STATES (cont'd)

Tennessee (cont'd)

Hewlett-Packard Co.
889 Ridge Lake Blvd.,
Suite 100
MEMPHIS, TN 38119
Tel: (901) 763-4747
Fax: (901) 762-9723

Hewlett-Packard Co.
44 Vantage Way,
Suite 160
NASHVILLE, TN 37228
Tel: (615) 255-1271
Fax: (615) 726-2310

Texas

Hewlett-Packard Co.
9050 Capital of Texas Highway, North
#290
AUSTIN, TX 78759
Tel: (512) 346-3855
Fax: (512) 338-7201
Mailing Address
PO Box 9431
Austin, TX 78766-9430

DALLAS (see **RICHARDSON**)

Hewlett-Packard Co.
5700 Cromo Dr
EL PASO, TX 79912
Tel: (915) 833-4400
Fax: (915) 581-8097

Hewlett-Packard Co.
10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400
Fax: (713) 776-6495

Hewlett-Packard Co.
3301 West Royal Lane
IRVING, TX 75063
Tel: (214) 869-3377
Fax: (214) 830-8951

Hewlett-Packard Co.
109 E. Toronto, Suite 100
McALLEN, TX 78503
Tel: (512) 630-3030
Fax: (512) 630-1355

Hewlett-Packard Co.
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101
Fax: (214) 699-4337

Hewlett-Packard Co.
14100 San Pedro Ave., Suite 100
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
Fax: (512) 491-1299

Utah

Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
Fax: (801) 974-1780

Virginia

Hewlett-Packard Co.
840 Greenbrier Circle
Suite 101
CHESAPEAKE, VA 23320
Tel: (804) 424-7105
Fax: (804) 424-1494

Hewlett-Packard Co.
4401 Water Front Dr.
GLEN ALLEN, VA 23060
Tel: (804) 747-7750
Fax: (804) 965-9297

NORFOLK (see **CHESAPEAKE**)

RICHMOND (see **GLEN ALLEN**)

Hewlett-Packard Co.
2800 Electric Road Suite 100
ROANOKE, VA 24018
Tel: (703) 774-3444
Fax: (703) 989-8049

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
Fax: (206) 643-8748

Hewlett-Packard Co.
N. 1225 Argonne Rd
SPOKANE, WA 99212-2657
Tel: (509) 922-7000
Fax: (509) 927-4236

Washington, D.C.

(see Rockville, MD)

West Virginia

Hewlett-Packard Co.
501 56th Street
CHARLESTON, WV 25304
Tel: (304) 925-0492
Fax: (304) 925-1910

Wisconsin

Hewlett-Packard Co.
275 N. Corporate Dr.
BROOKFIELD, WI 53005
Tel: (414) 792-8800
Fax: (414) 792-0218

Hewlett-Packard Co.
333 Main St.
GREEN BAY, WI 54301
Tel: (414) 436-2780
Fax: (414) 436-2786

MILWAUKEE (see **BROOKFIELD**)

URUGUAY

Pablo Ferrando S.A.C. e I.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: (598/2) 802 586
Telex: 398802586

VENEZUELA

Hewlett-Packard de Venezuela, C.A.
Tercera Transversal
Los Ruices Norte
Edificio Segre, **CARACAS**
Tel: (58/2) 239 4133/4244
Fax: (58/2) 239 3080

YUGOSLAVIA

Do Hermes
General Zdanova 4
YU-11000 **BEOGRAD**
Tel: (38/11) 342 641
Telex: 11433

Do Hermes
Celovska 73
YU-61000 **LJUBLJANA**
Tel: (38/61) 553 170
Telex: 31583

ZAMBIA

R.J. Tilbury (Zambia) Ltd.
P.O. Box 32792
LUSAKA
Tel: (260/1) 21 55 80
Telex: 0902 40128

ZIMBABWE

Field Consolidated (Private) Ltd.
Systron Division
Manhattan Court
61 Second Street
P.O. Box 3458
HARARE
Tel: (263/4) 73 98 81
Fax: (263/4) 70 20 08
Telex: 26241

Please send directory corrections to:
Test & Measurement Catalog, 54AF
Hewlett-Packard Company
5301 Stevens Creek Blvd.
P.O. Box 58059
Santa Clara, CA 95052-8059
Tel: (408) 553-7271
Fax: (408) 983-1006

September 1990

MP MASTER
MA27303

HEWLETT PACKARD

5959-6047

Printed in U.S.A.